

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU **HELP**

Engine and cooling system 106, 1.4 1996 to 1997

Type		TU3JP/L3 (KFX) 55kW
Capacity (cm ³) / number of cylinders		1360 / 4
Compression ratio / pressure	bar	10.2 / _
Oil pressure	bar	[≥4.0]
Oil temperature	°C	90
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	1.4

Fuel system 106, 1.4 1996 to 1997

Idle speed - manual [auto]	rpm	850±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	≥10.0
O ₂ @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		_Magneti-Marelli
Type / ref		1AP MPI
Main jet / needle		_
Injection pressure	bar	2.5 to 3.0
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition system 106, 1.4 1996 to 1997

Type		Static
Ignition coil		Bosch BAE 04
Primary resistance	ohms	0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch/Eyquem
Type		FR7LDC / RFC52LZ2E
Electrode gap	mm	0.90

Electrical system 106, 1.4 1996 to 1997

Battery	V / CC / RC	_
Alternator voltage / full load current / engine rpm		_
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear 106, 1.4 1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	_
Rear (min. friction material thickness)	mm	_

Tyres		
Saloon	Size	165/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	Refer to vehicle
- Estate / Van	bar	_

Front suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	_
Camber		_
Castor		_
King pin inclination		_

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	_
Camber		_


Torque wrench settings 106, 1.4 1996 to 1997

Cylinder head - stage 1	Nm	Bolts ≤175.5mm below heads
- stage 2	Nm	20 oiled
Cylinder head - stage 3	Nm	+ 240±5°
- stage 4	Nm	_
Big-end bearings	Nm	40
Main bearings	Nm	20 + 45°
Clutch cover	Nm	13
Flywheel [driveplate]	Nm	65 LkC
Front hubs	Nm	250
Rear hubs	Nm	_
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	25

Capacities 106, 1.4 1996 to 1997

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	5.5
Fuel tank	litres	45

Notes and Illustrations

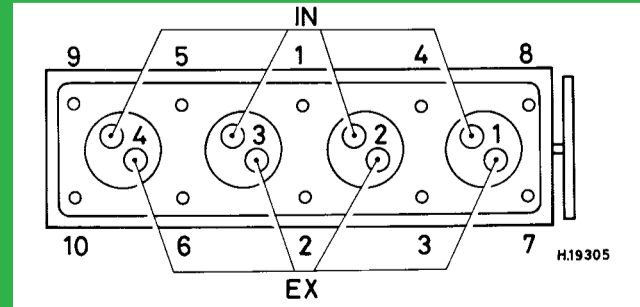

1360 cm³