Saikal



II-70 9mm SPORTING SELF - LOADING PISTOL Sportliche Selbstladepistole II - 70 Kaliber 9mm Pistolet Sportif a rechargement automatique Modele II -70 de 9mm



07370

1. INTRODUCTION

1.1. Before using the pistol carefully study the present certificate. The certificate includes basic specifications and rules for pistol usage.

1.2. Since efforts are continuously made to improve the pistol reliability and performance, changes may be introduced without special notice.

2. PURPOSE

The sports pistol mod. IJ-70 cal. 9 mm (fig. 1) is intended for sports training shooting in shooting galleries and ranges at distance upto 50 m. The pistol is chambered for 9 mm x 18 Makarov and 9 mm Browning "Kurz" (.380 Auto) cartridges.



3. SPECIFICATIONS

| Caliber, mm | 9 m | m Makurov | 9 mm Kurz | |
|---|-----------------------|--------------------|--------------------|-----------------------|
| Magazine capacity, pcs | 8 | 12 | 8 | 12 |
| Overall dimensions, mm, approx: length width height | 161 30,5* 126,7 | 165 34 126,7 | 161 34 126,7 | 165 30,54 126,7 |
| Barrel length, mm | 93,5 | 93.5 | 93,5 | 93,5 |
| Weight, with empty magazine, kg, not over | 0,73 | 0,74 | 0,73 | 0,74 |

^{*}Note: Width of pistol fitted with anatomical grip is 34 mm

4. PISTOL COMPONENTS AND COMPLETENESS OF SETS.

List of assembly units and parts.

| Ref. Nos. In Fig. 2 and 5 | Description | Qury | Ref. Not. in Fig. 2 and 5 | Description | Que |
|------------------------------------|---|------------------|--|---|-----------------------|
| 2 3 4 5 6 | Barrel Prame with plug Trigger geard Barrel pin and trigger pin Trigger guard plunger Trigger guard spring Trigger guard spring | 1 1 1 1 | 22 23 24 25 26 27 | Sufety device with spring Ejector Ejector plunger Ejector plunger spring Sight base Rear sight | 1 1 1 1 1 |
| 8 9 10 11 12 | Trigger guard for Trigger bar with cocking lover Sea: Scar spring Slide ston | | 27 28 29 30 31 32 33 | Screw for horizontal adjustment Rod Spring Pin Screw for vertical adjustment Lock | 1 |
| 13 14 15 16 | Hammar Mainspring Mainspring Clamp Orlp with assuming assessories | | 34 35 36 37 | Spring Magazine body Follower Magazine spring | 1 |
| 19 20 | Bushing for grip spring Grip spring Stilde Firing pin | 1 | 38 39 40 41 | Magazine cover Spring holder Separator spring Spring separator | 1 |

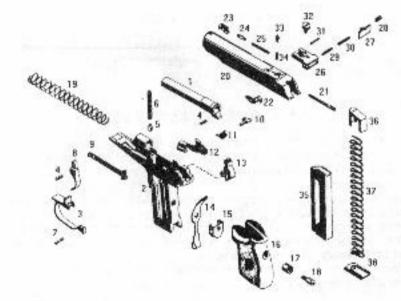


Fig. 2. Parts of LI-70 eight-shot pistol in 9 mm Makarov or Kurz caliber.

Completeness of sets

| Pistol (with two magazines) Cleaning rod Screwdriver (For the IJ-70) | 1 1 1 | Leather cord with safety hook Leather holster Packing carton Certificate | 1 1 | |
|--|-------------|---|-----|--|
|--|-------------|---|-----|--|


5. DESIGN AND PRINCIPLE OF OPERATION

Refer to Fig. 3 and 6 for pistol assembly diagram.

The pistol features simple design, light weight and minimum overall dimensions. It is easy in handling and in carrying. The pistol is ready to shoot at any moment.

The pistol automatic operation is based on the blowback principle. The automatic cycle includes extraction and ejection of fired cases, cocking of the firing unit and pushing the next cartridge from the magazine to the chamber. The self-cocking trigger and firing unit permits to fire the pistol without preliminary hammer cocking.

When all cartridges are fired the slide moves to the slide stop and remains in its rear position.

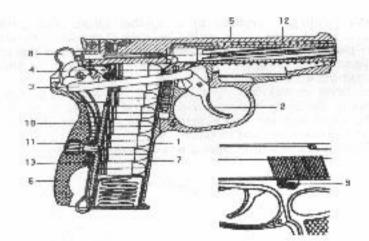

Pig. 3. Diagram of mechanisms of IJ-70 eight-shot pistol in 9 mm Makarov or Kurz caliber.


1 -- frame with barrel and trigger guard; 2 -- trigger with pin; 3 -- trigger bar with excking lever, 4 -- sear with spring; 5 -- slide assy; 6 -- grip assy; 7 -- majorine assy; 8 -- hammer; 9 -- slide skip; 10 -- mainspring; 11 -- grip screw, 12 -- return spring; 13 -- mainspring stop.

Safe pistol handing is ensured by a reliable safety. The pistol is equipped with a thumb-piece safety on the left side of the slide. By setting the safety to the "safe" position the hammer is uncocked and the safety locking lug immediately catches it. This position doesn't allow the slide to be retracted and the hammer to be cocked.

With the safety in the "off" position and the trigger released the hammer is set to the safety cock to avoid firing at accident strike on the hammer. The pistol sighting device permits adjustment of the sighting radius accurately for windage and elevation.

The IJ-70-01 pistol version features a non-adjustable rear sight.



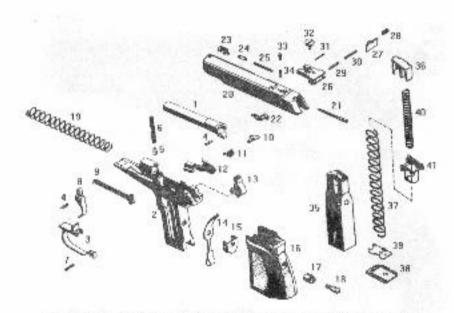

Pig. 5. Parts of 13-70 twelve-shot pistol in 9 mm Makarov or Kurz caliber.

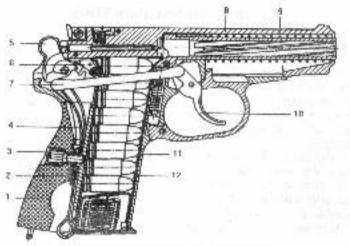


Fig. 6. Diagram of mechanisms of U-70 twelve-shot pixtol in 9 mm Makarov or Kurz caliber.

1 -- grip ussy; 2 -- mainspring stop; 3 -- grip sarew; 4 -- mainspring; 5 -- hammer; 6 -- sear with spring; 7 -- trigger har with cocking lover; 8 -- slide assy; 9 -- rearm spring; 10 -- trigger with pin; 11 -- frame with borrel and trigger goand; 12 -- magazine assy.

6. OPERATIONAL PROCEDURE

Before shooting:

load the pistol with eight or twelve cartridges:

insert the magazine;

retract the slide to the extreme rear position and release it.

After shooting: remove the magazine;

make sure that no cartridge is left in the chamber, otherwise remove

the cartridges;

push the button 9, Fig. 3 and disengage the slide stop; detach the slide from the frame by pulling the trigger guard down,

retract the slide to the extreme rear position and lift its rear end;

clean and lubricate the pistol; assemble the pistol and test it; set the pistol to the safety position.

7. SAFETY REQUIREMENTS

The pistol should always be considered as loaded and ready to shoot. Do not aim the pistol at a man. Load the pistol only before shooting. Do not store the pistol as loaded.

8. ACCEPTANCE CERTIFICATE

The IJ-70 small-sized and small-bore pistol No.

has been tested and found fit for use.

Date of manufacture

9. PRESERVATION AND STORAGE CONDITIONS

The IJ-70 small-sized and small-bore pistol No. has been treated for preservation.

Preservation date

11.94

Dear Buyer!

Your pistol is filted with the 10-round capacity magazine.

As to the other features they are identical to the 12-round version.

45