

# ANCHORMASTER

## 18x50 Scope

Model AA10618

**\*\*IMPORTANT\*\***

**NEVER ATTEMPT TO CLEAN YOUR SCOPE INTERNALLY OR TRY TO TAKE IT APART. DO NOT LOOK DIRECTLY AT THE SUN WITH THE SCOPE AS IT WILL CAUSE DAMAGE TO YOUR EYE**



**PARTS**

- 1 - Optical tube with arc mount attached**
- 2 - Mahogany wood tripod**
- 3 - Lock and levers**
- 4 - Objective lens**
- 5 - Eyepiece**
- 6 - Focus knob**

**HOW TO ASSEMBLE YOUR SCOPE:**

\*NOTE Please be careful not to scratch your scope.

1. Place the optical tube and arc mount on its side.
2. Attach the legs of the tripod at the base of the mount.
3. Carefully slide one of the leg attachments shaft through the top of the attached leg through the holes of the mount. Hand fastens with washer and bolts. Repeat these steps until all tripod legs are attached.
4. Extend and lock the legs into position then gently stand the scope and tripod, slowly spread the legs of the tripod.

Make sure to tighten all screws and nuts. Your scope is now assembled and ready to be used.

**HOW TO USE YOUR SCOPE:**

Start by loosening the lock and levers and gently guide the scope to your desired position.

1. Once in position, tighten the locks and levers.
2. Point the objective lens to an object and look through the eyepiece.
3. With slow and tiny motions, rotate the focus ring until your image of the object is sharp and in focus.

**HOW TO TAKE CARE OF YOUR SCOPE:**

1. When wiping the lenses, use a soft lens cloth.
2. To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth, then wipe gently.
3. Store your scope in a moisture-free area.

**Parts included in package**

<b>Optical tube with mount attached</b>	<b>1 unit</b>
<b>Mahogany wood tripod legs</b>	<b>3 units</b>
<b>Washers and bolts</b>	<b>3 sets</b>