


Installing the Rifle Basix SAV-2 on Savage models equipped with the new AccuTrigger™ - addendum to enclosed CD-ROM instructions.

The movie file contained on the CD-ROM is a standard mpeg video file, viewable on your computer using either **QuickTime**, **Windows Media Player**, or **Real Player**. The movie is **not** a DVD, or VCD, and will **not play** in a DVD player. If your computer does not have one of the above applications, visit the "Downloads" page on the Rifle Basix web site for complete instructions on how to properly view the movie file.

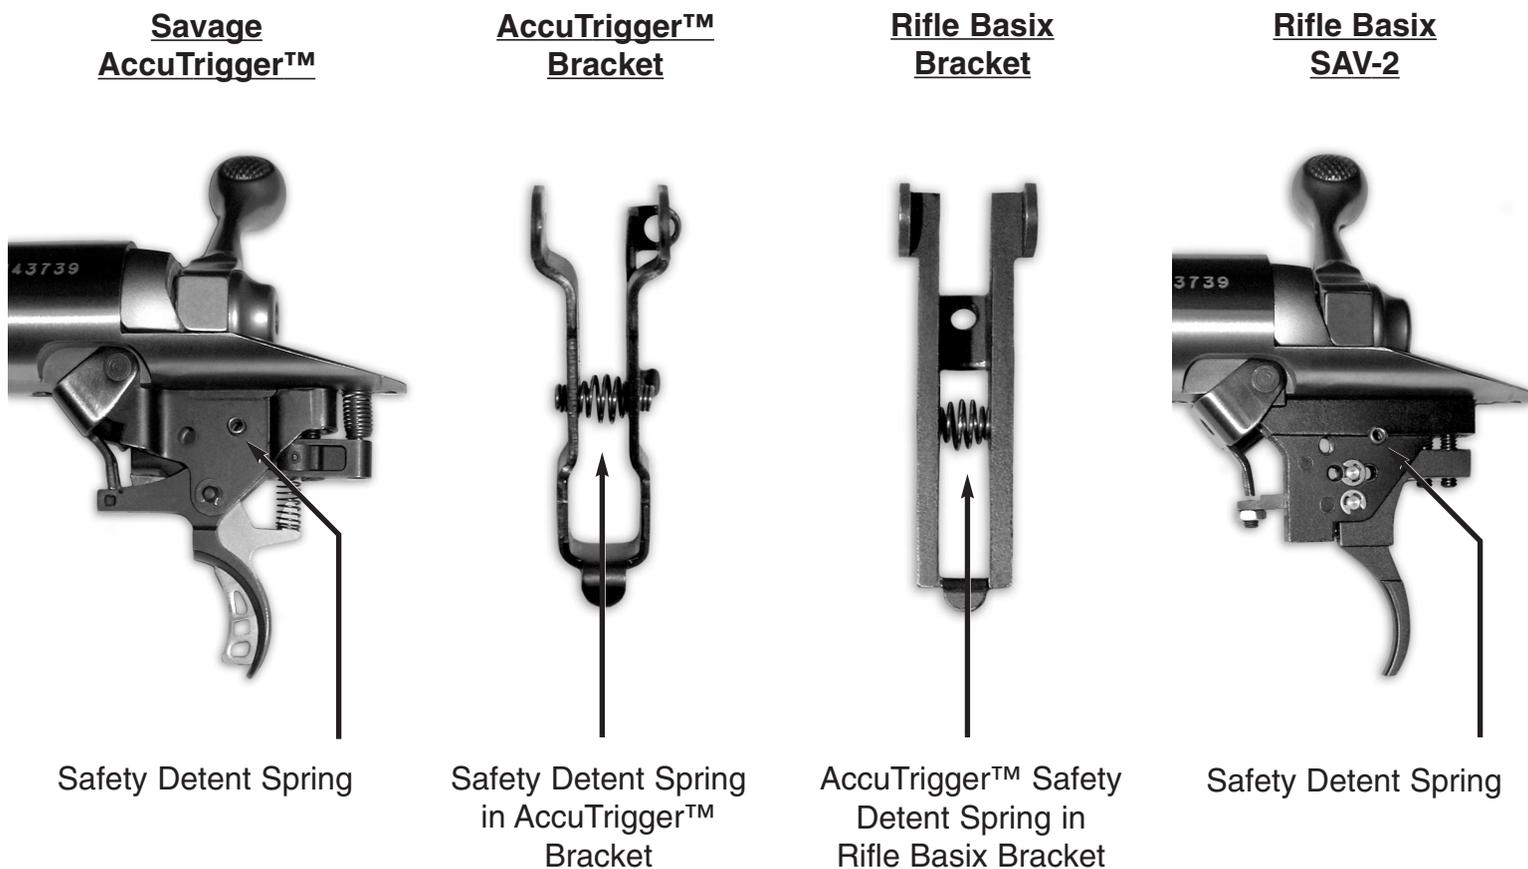

AccuTrigger™ Replacement Instructions

The enclosed CD-ROM details step-by-step replacement of a STANDARD SAVAGE TRIGGER. Replacement of the AccuTrigger™ differs only in the safety assembly and the safety detent spring. By reviewing the video, the differences in the safeties will be evident.

Remove bolt from action and remove barreled action from stock. In Step #3 of the video, remove AccuTrigger™ pivot pin "E" clip, pivot pin, and ENTIRE AccuTrigger™ ASSEMBLY.

After removing the trigger **bracket** in Step #6 of the video, the AccuTrigger™ SAFETY remains in the receiver. Carefully compress and remove safety detent spring from AccuTrigger™ bracket. Re-install safety detent spring in Rifle Basix bracket as shown in photo above. The AccuTrigger™ safety assembly remains functional.

In Step #17 of the video, use the longer 8-32 x 1/2" Adjustment Screws .