

HIGHWAY PATROLMAN® REVOLVER MODEL No. 28

PARTS LIST • INSTRUCTIONS FOR USE • MAINTENANCE

SPECIFICATIONS



SPECIFICATIONS


Caliber	Frame Square butt with grooved tangs Stocks Checked walnut Service
Length Overall	with S&W monograms Finish S&W Satin Blue with sand- blast stippling on barrel top
Weight	and edge of frame TriggerS&W grooving with an
Front: ½-inch Baughman Quick Draw on plain ramp. Rear: S&W Micrometer Click Sight, adjustable for windage and elevation	internal trigger stop Ammunition

This gun furnished only to above specifications.

SMITH & WESSON

△ A BANGOR PUNTA COMPANY

Springfield, Massachusetts, 'U. S. A.

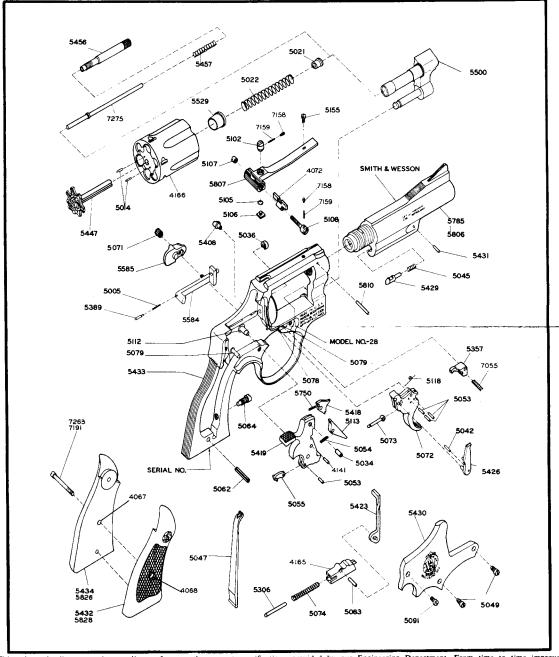

This schematic diagram and parts list conform to the current specifications provided by our Engineering Department. From time to time improvements are made in all our models. For this reason, the gun which you own may not correspond exactly with the information provided on this sheet. When requesting information or ordering parts for your gun, please provide the serial number and approximate date of purchase. 11-74

The Smith & Wesson Model No. 28 target revolver is a 6-shot breech-loading hand weapon. It is produced with a solid frame and a swing-out type of cylinder, having 6 chambers around a central axis so that 6 shots may be fired before reloading is necessary. The weapon may be fired either single action or double action, and cocking the hammer by either method causes the cylinder to rotate and align the next chamber with the barrel. The rate of fire is limited only by the dexterity of the operator in reloading the cylinder and his ability to aim the weapon and pull the trigger.

Loading and firing this revolver is a comparatively simple operation, as follows:

Loading and firing this revolver is a comparatively simple operation, as follows:

Push the thumbpiece forward. This will release the cylinder so that it may be swung out to the left side for loading. Holding the gun so that the cylinder is in its outermost position, and with the muzzle pointing downward, insert cartridges in the charge holes making certain that they are firmly seated. Return the cylinder to its original position in the frame, pressing it firmly into place to make sure that it locks in

the cylinder to its original position in the frame, pressing it firmly into place to make sure that it locks in alignment. The gun is now ready to fire.

In single action shooting the hammer is pulled or cocked to its extreme rearward position. The gun may then be fired by merely pressing the trigger. This type of shooting is used for deliberate fire where there is time to sight the gun carefully and squeeze the trigger in an unhurried fashion. It is also used in competitive shooting for not only slow fire but also for timed fire, whereby 20 seconds are allowed for the firing of each 5 shots, and rapid fire where 10 seconds are allowed for the firing of each 5 shots.

There is time even in rapid fire shooting for the deliberate handling of the gun in single action fashion just so long as the function is performed without loss of time and in a definite cadence whereby the cycle will be completed within the allocated time.

Where time or other circumstances do not allow for single action fire the revolver is used double action.

Where time or other circumstances do not allow for single action fire the revolver is used double action. To fire double action all that is necessary is to align the weapon with the object which you wish to hit and pull the trigger firmly all of the way to the rear. This will cause the hammer to rise to its full cocked position and then fall to explode the cartridge, and as previously stated the only limit to the speed with which a weapon can be manipulated in this fashion will be determined by the dexterity of the shooter. This type of shooting is required in combat work or under emergency conditions where the gun must be used with great speed.

To extract the fired cases press the thumbpiece forward and swing the cylinder out to the left side. Turn the gun muzzle upward and holding the cylinder in its extreme outward position press down sharply on the extractor rod. This will eject the fired cases down and out of the gun, which is now ready to reload.

PARTS LIST

No.	Name	No.	Name
4067	Escutcheon	5112	Hammer Stud
4068	Escutcheon Nut	5113	Sear
4072	Rear Sight Slide	5118	Hand Spring
4142	Rear Sight Assembly	5155	Rear Sight Leaf Screw
4141	Sear Pin	5306	Trigger Stop Rod
4165	Rebound Slide	5357	Cylinder Stop
4166	* Cylinder, with extractor, pins &	5389	Bolt Plunger
	gas ring	5408	Frame Lug
5005	Bolt Plunger Spring	5418	Hammer Nose
5014	Extractor Pin	5419	Hammer
5021	Extractor Rod Collar	5423	Hammer Block
5022	Extractor Spring	5426	Hand
5034	Hammer Nose Rivet	5429	Locking Bolt
5036	Hammer Nose Bushing	5430 :	* Side Plate
5042	Hand Pin	5431	Locking Bolt Pin
5045	Locking Bolt Spring	5432	Stock, Square Butt, right
5047	Mainspring		* Frame, with studs, bushing &
5049	Plate Screw, crowned	100	lug factory exchange only
5053	Hand Spring Pin	5434	Stock, Square Butt, left
5053	Hand Spring Torsion Pin		* Extractor
5053	Sear Pin	5456	Extractor Rod
5053	Stirrup Pin	5457	Center Pin Spring
5053	Trigger Lever Pin		* Yoke
5054	Sear Spring	5529	Gas Ring
5055	Stirrup	5584	Bolt
5062	Stock Pin	5585	Thumbpiece
5064	Strain Screw	5750	Hammer Nose Spring
5071	Thumbpiece Nut	5785	* Barrel, 4"
5072	Trigger	5806	* Barrel, 6"
5073	Trigger Lever	5807	Rear Sight Leaf
5074	Rebound Slide Spring	5810	Barrel Pin
5078	Trigger Stud	5826	Stock, oversize Target, left
5079	Cylinder Stop Stud	5828	Stock, oversize Target, right
5079	Rebound Slide Stud	7055	Cylinder Stop Spring
5083	Rebound Slide Pin	7158	Rear Sight Plunger
5091	Plate Screw, flat head	7159	Rear Sight Plunger Spring
5102	Rear Sight Élevation Nut	7191	Stock Screw for Square Butt
5105	Rear Sight Spring Clip	7263	Stock Screw for Target
5106	Rear Sight Elevation Stud	7275	Center Pin
5107	Rear Sight Windage Nut	' <u>-</u> ''	
5108	Rear Sight Windage Screw	1	
2100	real orgin windage ociew	, tact	ory exchange only)
		 	

Smith & Wesson will refinish handguns of its own manufacture. No change of finish is offered on the Victory or Airweight[®] model or on Models 28, 39, 59, 64, 65, 66 or 67. Repair or replacement of parts are in addition to refinishing price.

SERVICE

Should your Smith & Wesson revolver require adjustment, repair, or refinishing, we recommend most sincerely that the weapon be returned to the factory or authorized service center. There is no other way to insure that the work will be done in a properly equipped and staffed shop.

Charges are very reasonable, being based on the cost of parts replaced plus a labor charge for the time expended on the job. A labor charge for one hour is usually sufficient to cover all but very extensive overhaul jobs.

Revolvers returned to the factory or authorized service center should be MARKED FOR THE ATTENTION OF THE SERVICE DEPARTMENT.

A letter of instructions should be enclosed with the gun, and shipment by individuals must be made Prepaid. Adherence to these suggestions will prevent loss of time in handling at the factory.

When returning guns for service, please remove custom stocks and holsters. We cannot assume respectivities for these transports of these transports.

sponsibility for these items.

When your revolver arrives for service, it will be very carefully inspected, together with your letter of instructions. Next, a quotation covering total cost of work to be performed will be sent to you. No actual work will be commenced before receiving your approval of our quotation unless you specifically authorize us to do so.

SEE YOUR AUTHORIZED SMITH & WESSON SERVICE CENTERS LIST FOR YOUR LOCAL SERVICE CENTER

HELPFUL HINTS

Push thumb piece forward, swing out cylinder and load.

Close cylinder and take position on firing line.

3. STAND in a relaxed and comfortable position, feet well apart. The arm when raised should line naturally with the target. If it does

not, shift the feet a bit.

4. HOLD the gun firmly but do not seize it with a "death grip". If the knuckles are white, the grip is too tight.



5. LINE the sights carefully, top of front sight even with top of rear notch, and light e-qual on both sides of front sight (see illustration).

SQUEEZE the trigwith trigger finger , carefully keeping

ger with trigger finger only, carefully keeping the sights aligned on the target. SQUEEZE is the most important function of shooting. A pull or yank on the trigger will surely disturb alignment and result in a poorly placed shot or a complete miss. DO NOT apply the SQUEEZE with the whole hand. The squeeze should be applied between the tip and first joint of the trigger finger. Slowly at first—sneed will develop with practice.

joint of the trigger finger. Slowly at first — speed will develop with practice.
7. Watch the sights. Learn to "call your shots" before looking for them on the target. Practice "dry shooting" with empty gun. Watch sights when hammer falls. If sights jump or duck you are not squeezing the trigger. Don't hold the shot too long. If the sights don't line up on the target in 15 seconds, take the arm down and rest for a moment. Remember, good down and rest for a moment. Remember, good revolver shots are not born; they are made by careful and consistent practice.

SIGHT ADJUSTMENT

Front sight is fixed. All adjustments must be made at the rear sight.

2. Move the rear sight in the direction in which you wish the group on the target to move. (If group must be higher, elevate the rear sight. If group must go to the right, move the rear

It group must go to the right, move the rear sight to the right, etc.)

3. To elevate rear sight turn top (elevating) screw to the left, or counterclockwise. To depress rear sight turn top (elevating) screw to the right, or clockwise.

4. To move rear sight to right, turn side (windage) screw to the right, or clockwise. To move rear sight to left, turn side (windage) screw to the left, or counterclockwise.

INSTRUCTIONS FOR USE

Care and Cleaning

Many weapons require stripping or at least partial disassembly in order to clean and oil them properly. This does not apply to the revolver, which may be cleaned and lubricated under all normal circumstances without removing a single pin or screw.

If at any time disassembly of the weapon

is indicated for repairs, etc. it is recommended that the gun be returned to the factory, or you should at least employ the services of a quali-

should at least employ the services of a qualified gunsmith.

To keep revolvers in proper condition, and to insure perfect functioning in time of need, it is essential that they be kept clean and coated with a rust inhibiting oil. Care is required to prevent rust, especially in damp, humid climates, or when sweaty hands come in contact with the care.

with the guns.

To clean the revolver as required when the To clean the revolver as required when the weapon is not fired, or when kept in storage, rub it externally with a lightly oiled cloth, and then swab out the bore and cylinder chambers with an oily flannel patch. Remove excess oil but leave a light film to protect the arm against rusting. Clean out all crevices with a small clean bruch rusting. Cle

For cleaning after firing, scrub out the bore and chambers with an approved nitro solvent, and then use a brush dipped in solvent to remove all

deposits from around the breech of the barrel, extractor head, and other adjacent areas which have been subjected to the action of powder or primer residue. If there is any evidence of lead particles, or other foreign matter left in bore or chambers, it is well to scrub these parts further with a bronze or brass brush dipped in powder solvent. The area under the extractor should be cleaned frequently and kept dry, as an accumulation of powder residue can cause the cylinder to bind.

After cleaning off the entire gun with nitro or powder solvent, remove all traces of the solvent, both on the exterior of the gun and in the bore and chambers, following immediately thereafter with the application of a light film of oil. Note that there is usually some residue in the steel of both barrel and cylinder that works out and becomes apparent within from 24 hours to 48 hours after the initial cleaning. This can be removed with a bristle brush with perhaps a light re-application of powder solvent, after which the oil film should be re-established on all surfaces.

Do not store revolvers with a plug in the bo not store revolvers with a plug in the barrel, since this is a contributing factor to sweating. By the same token, maintenance or storage rooms should be kept at a constant temperature with the least possible humidity, and the guns should not be stored encased in anything which will attract or hold moisture, such as leather such as leather.

If revolvers are to be stored for a long period of time, the internal mechanism of the lockwork should be heavily oiled with an acid free lubricating oil, and the exterior of the guns, as well as the bore of the barrel and the charge holes of the cylinder, should be heavily coated with an anti-rust oil. It is an established fact that moisture is the greatest enemy of metallic objects, particularly in climates where temperature and humidity are high, and salt air is pre-sent. Extreme care should be exercised that all metallic surfaces be kept clean and oiled, and metallic surfaces be kept clean and diled, and the wood stocks on the revolvers should be inspected for cracks caused by moisture. A periodical coat of raw linseed oil, well rubbed in with the hand, will help to prevent the splitting of stocks, but care must be exercised that the linseed oil does not get into the mechanism or on moving parts, as it has a tendency to gum when dry when dry.

Safety Precautions

Before proceeding to use this weapon, a word of caution is in order. This gun is as safe to handle and use as we can make it, but there is no foolproof firearm. Used correctly by a competent person the revolver is one of the safest handguns. There are many safety rules but those found below are basic, and should be observed rigidly ustil they become second nature.

rigidly until they become second nature.

1. The gun must always be checked for live ammunition when picked up, drawn from the holster, or handed to or accepted from another individual.

2. The gun should always be holstered except

when drawn for a definite purpose.

3. Never point the revolver at anything that you do not intend to shoot.

4. Do not cock the gun unless you intend to shoot it. Do not even insert the finger in the

trigger guard until you are ready to fire.
5. Dry-snapping, even with dummy cartridges, should be discouraged unless same is performed on a regulartargetrange or at a known inanimate

target object.
6. When the handgun is out of the holster and held in a ready position, be absolutely certain that it is not pointing at any part of yourself or the persons of others who are in your immediate vicinity.

. Beware of obstructions in the barrel. If, when firing, a weak or peculiar report is heard, cease firing at once and inspect the barrel for an obstruction. A stuck bullet, or any other object in the barrel, should be removed immediately, since even a plug of mud, snow, twigs, or an abnormal quantity of heavy grease in the bore, may result in a bulged or burst barrel.

8. At all times treat the revolver as the pre-

cision instrument that it actually is.

MAKE SAFE GUN HANDLING A HABIT