


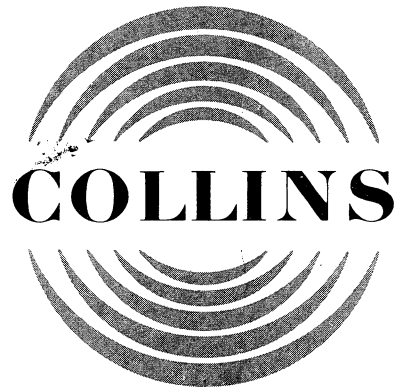

INSTRUCTION BOOK

32 MS - 1A

TRANSCEIVER EQUIPMENT

GUARANTEE

The equipment described herein is sold under the following guarantee:

Collins agrees to repair or replace, without charge, any equipment, parts, or accessories which are defective as to design, workmanship or material, and which are returned to Collins at its factory, transportation prepaid, provided

- (a) Notice of the claimed defect is given Collins within one(1) year from date of delivery and goods are returned in accordance with Collins' instructions.
- (b) Equipment, accessories, tubes, and batteries not manufactured by Collins or from Collins' designs are subject to only such adjustments as Collins may obtain from the supplier thereof.
- (c) No equipment or accessory shall be deemed to be defective if, due to exposure or excessive moisture in the atmosphere or otherwise after delivery, it shall fail to operate in a normal or proper manner.

Collins further guarantees that any radio transmitter described herein will deliver full radio frequency power output at the antenna lead when connected to a suitable load, but such guarantee shall not be construed as a guarantee of any definite coverage or range of said apparatus.

The guarantee of these paragraphs is void if equipment is altered or repaired by others than Collins or its authorized service center.

No other warranties, expressed or implied, shall be applicable to any equipment sold hereunder, and the foregoing shall constitute the Buyer's sole right and remedy under the agreements in this paragraph contained. In no event shall Collins have any liability for consequential damages, or for loss, damage or expense directly or indirectly arising from the use of the products, or any inability to use them either separately or in combination with other equipment or materials, or from any other cause.

HOW TO RETURN MATERIAL OR EQUIPMENT. If, for any reason, you should wish to return material or equipment, whether under the guarantee or otherwise, you should notify us, giving full particulars including the details listed below, insofar as applicable. If the item is thought to be defective, such notice must give full information as to nature of defect and identification (including part number if possible) of part considered defective. (With respect to tubes we suggest that your adjustments can be speeded up if you give notice of defect directly to the tube manufacturer.) Upon receipt of such notice, Collins will promptly advise you respecting the return. Failure to secure our advice prior to the forwarding of the goods or failure to provide full particulars may cause unnecessary delay in handling of your returned merchandise.

ADDRESS:

Collins Radio Company of Canada Limited
11 Bermondsey Road,
Toronto 16,
Ontario.

INFORMATION NEEDED:

- (A) Type number, name, and serial number of equipment
- (B) Date of delivery of equipment
- (C) Date placed in service
- (D) Number of hours of service
- (E) Nature of trouble
- (F) Cause of trouble if known
- (G) Part number (9 or 10 digit number) and name of part thought to be causing trouble
- (H) Item or symbol number of same obtained from parts list or schematic
- (I) Collins number (and name) of unit sub-assemblies involved in trouble
- (J) Remarks

HOW TO ORDER REPLACEMENT PARTS.

When ordering replacement parts, you should direct your order as indicated below and furnish the following information insofar as applicable. To enable us to give you better replacement service, please be sure to give us complete information.

ADDRESS:

Collins Radio Company of Canada Limited
11 Bermondsey Road,
Toronto 16,
Ontario

INFORMATION NEEDED:

- (A) Quantity required
- (B) Collins' part number (9 or 10 digit number) and description
- (C) Item or symbol number obtained from parts list of schematic
- (D) Collins' type number, name, and serial number of principal equipment

INSTRUCTION BOOK

TRANSCIVER EQUIPMENT
32MS-1A

567 5322 00

© **COLLINS RADIO COMPANY OF CANADA LIMITED**

13 OCTOBER 1961

PRINTED IN CANADA



TABLE OF CONTENTS

Section		Page
I	GENERAL DESCRIPTION	1
	1.1 Purpose of Instruction Book	1
	1.2 Purpose of Equipment	1
	1.3 Equipment Supplied	1
	1.4 Equipment Required But not Supplied	1
	1.5 Accessories	3
	1.6 Components of Spare Parts Kit	4
	1.7 Equipment Specifications	5
	1.8 Tube, Fuse, and Semiconductor Complement	6
	1.9 Transceiver 32MS-1A	12
	1.10 Shockmount 390L-1A	12
	1.11 Desk Type Remote Control Unit 48A1-SW	12
	1.12 Mobile Type Remote Control Unit 48B2-SW	12
	1.13 Antenna Coupler 180V-2	13
II	INSTALLATION	15
	2.1 Unpacking and Inspecting Equipment	15
	2.2 Installation	15
	2.2.1 Mounting	15
	2.2.2 Wiring Connections	15
	2.2.3 Antenna Connections	16
	2.2.4 Initial Alignment	16
	2.3 Installation, Field	16

Table of Contents

Section		Page
	2.3.1 General	16
	2.3.2 Fixed Station Installation	16
	2.3.3 Wiring Connections	16
	2.3.4 Mobile Installation	16
	2.4 Initial Adjustment	17
	2.5 Post Installation Check	17
	2.5.1 SSB Operation	17
	2.5.2 AM Operation	17
III	OPERATION	19
	3.1 General	19
	3.2 Operating Controls	19
	3.3 Operating Procedures, SSB Mode	19
	3.4 Operating Procedures, AM Mode	19
IV	PRINCIPLES OF OPERATION	21
	4.1 General	21
	4.2 Block Diagram	21
	4.3 Transmitter Operation	21
	4.3.1 Single Sideband Operation	21
	4.3.2 Amplitude Modulated Operation	21
	4.4 Receiver Operation	21
	4.4.1 Single Sideband Operation	21
	4.4.2 Amplitude Modulation Operation	22
	4.5 Circuits Description	22
	4.5.1 Audio Clipper	22
	4.5.2 Speech Amplifier and Tone Oscillator	22
	4.5.3 Cathode Follower	22
	4.5.4 Balanced Modulator	22
	4.5.5 Mechanical Filter	22
	4.5.6 Balanced Mixer	22
	4.5.7 Output Frequency Relation	25
	4.5.8 Radio Frequency Amplifier	25
	4.5.9 Radio Frequency Driver	25
	4.5.10 Power Amplifier	25
	4.5.11 Automatic Loading Control	25
	4.5.12 Receiver Mixer	25
	4.5.13 I-F Amplifiers	26
	4.5.14 Product Detector	26
	4.5.15 A-M Detector	26
	4.5.16 Audio Amplifier	26
	4.5.17 AGC System	26
	4.5.18 A-C Power Supply	26
	4.5.19 12 Volt Power Supply	26
	4.5.20 28 Volt Power Supply	26
	4.5.21 Automatic Receiver Gain Control	26
	4.5.22 Remote Control Unit	27
V	MAINTENANCE	29
	5.1 General	29
	5.1.1 Test Equipment	29
	5.2 Inspection	29

Section		Page
5.2.1	General	29
5.2.2	Visual Inspection	29
5.2.3	Meter Adjustment	29
5.3	Trouble Shooting	29
5.3.1	Low Transmitter Output	29
5.3.2	Receiver Inoperative	30
5.3.3	Transmitter Inoperative	30
5.3.4	Tube Substitution Trouble-Shooting Method	30
5.4	Tuning Procedure	30
5.4.1	Carrier Balance	33
5.5	Neutralization	33
5.5.1	R-F Amplifier	33
5.5.2	R-F Driver	33
5.5.3	Power Amplifier	34
5.5.4	Feedback Neutralization	34
5.6	Receiver I-F Alignment and Audio Output Check	34
5.7	A-M Carrier Insertion and R-F Gain Control Adjustments	35
5.8	Transmit Audio Gain Control Adjustment	35
5.9	AGC Threshold Adjustment	35
5.10	Disassembly of Control Unit 48A1-SW	35
5.11	Reassembly of Control Unit 48A1-SW	36
5.12	Disassembly of Control Unit 48B2-SW	36
5.13	Reassembly of Control Unit 48B2-SW	36
VI	PARTS LIST	37
VII	ILLUSTRATIONS	73

LIST OF ILLUSTRATIONS

Figure		Page
1-1	Transceiver 32MS-1A, Overall View	9
1-2	Control Unit 48A1-SW, Overall View	9
1-3	Control Unit 48B2-SW, Overall View	10
1-4	115 Volt A-C Power Supply, Overall View	10
1-5	28 Volt D-C Power Supply, Overall View	11
1-6	12 Volt D-C Power Supply, Overall View	11
1-7	Shockmount 390L-1A, Overall View	12
2-1	Transceiver 32MS-1A, Outline and Mounting Dimensions	14
2-2	Control Unit 48A1-SW, Outline and Mounting Dimensions	14
2-3	Control Unit 48B2-SW, Outline and Mounting Dimensions	15
3-1	Control Unit 48A1-SW, Operating Controls	18
4-1	Transceiver 32MS-1A, Block Diagram	23-24
5-1	Calibration Curves for Antenna and R-F Coils	28
5-2	PA Coil Calibration for 52 Ohm Load	31
6-1	32MS-1A, Top View, Cover and Shield Removed, Keyed	62
6-2	32MS-1A, Bottom View (A), Cover and Shield Removed, Keyed	63
6-3	32MS-1A, Bottom View (B), Cover and Shield Removed, Keyed	64
6-4	32MS-1A, Bottom View (C), Cover and Shield Removed, Keyed	65
6-5	32MS-1A, Rear View, Keyed	66

List of Illustrations

List of Tables

Figure		Page
6-6	Control Unit 48A1-SW or 48B2-SW Circuit Board, Keyed	66
6-7	Control Unit 48A1-SW, Front View, Keyed	67
6-8	Control Unit 48A1-SW, Rear View, Keyed	67
6-9	Control Unit 48B2-SW, Top View, Keyed	68
6-10	Control Unit 48B2-SW, Bottom View, Keyed	68
6-11	115 Volt A-C Power Supply, Overall View, Keyed	69
6-12	12 Volt D-C Power Supply, Overall View, Keyed	69
6-13	12 Volt D-C Power Supply, Inside View, Keyed	70
6-14	28 Volt D-C Power Supply, Overall View, Keyed	70
6-15	28 Volt D-C Power Supply, Inside View, Keyed	71
6-16	Automatic Receiver Gain Control Board, Top View, Keyed	71
7-1	Transceiver 32MS-1A, Schematic Diagram	75-76
7-2	Control Unit 48A1-SW, Schematic Diagram	77
7-3	Control Unit 48B2-SW, Schematic Diagram	78
7-4	115 Volt A-C Power Supply, Schematic Diagram	79
7-5	12 Volt D-C Power Supply, Schematic Diagram	80
7-6	28 Volt D-C Power Supply, Schematic Diagram	81
7-7	Automatic Receiver Gain Control, Schematic Diagram	82
7-8	Directional Coupler 302E-1, Schematic Diagram	83
7-9	Antenna Coupler 180V-2 Schematic Diagram	85-86

LIST OF TABLES

Table		Page
1-1	Equipment Supplied	1
1-2	Equipment Required but not Supplied	1
1-3	Accessories	3
1-4	Components of Spare Parts Kit	4
1-5	Tube, Fuse, and Semiconductor Complement	7