

TABLE OF CONTENTS

<u>Paragraph</u>		<u>Page</u>
SECTION 1 - GENERAL DESCRIPTION		
1.1.	GENERAL	1-1
1.1.1.	Purpose of Book	1-1
1.1.2.	Purpose of Equipment	1-1
1.1.3.	Description	1-1
1.1.4.	Equipment Supplied	1-2
1.1.5.	Accessories Available	1-2
1.2.	VACUUM TUBE TABLE	1-3
1.3.	REFERENCE DATA.	1-3
SECTION 2 - INSTALLATION		
2.1.	UNPACKING	2-0
2.1.1.	Procedure	2-0
2.2.	INSTALLATION	2-0
2.2.1.	General	2-0
2.2.2.	Antenna Connection	2-0
2.2.3.	Audio Output Connections	2-0
2.2.4.	I-F Output Connection	2-0
2.2.5.	Remote Standby Connections	2-0
2.2.6.	Power Connection	2-0
2.2.7.	Tubes.	2-0
2.2.8.	Fuse	2-2
SECTION 3 - ADJUSTMENT AND OPERATION		
3.1.	ADJUSTMENT	3-1
3.1.1.	General	3-1
3.2.	OPERATION	3-1
3.2.1.	Function of Controls	3-1
3.2.2.	Tuning AM Signals	3-3
3.2.3.	Tuning Single-Sideband Signals	3-4
3.2.4.	Tuning CW Signals	3-4
3.2.5.	Frequency Measuring	3-5
3.3.	NOTES ON MECHANICAL FILTERS	3-5
3.3.1.	General	3-5
SECTION 4 - CIRCUIT DESCRIPTION		
4.1.	MECHANICAL DESCRIPTION.	4-0
4.1.1.	Band Change	4-0
4.1.2.	Tuning	4-0
4.1.3.	Frequency Indication	4-3