

Section 2  
INSTALLATION

2.2.8. FUSE. - The fuse is located on the rear of the chassis. It can be removed for inspection by turning the cap of the fuse post to the left and pulling

straight up until the cap and fuse come free. This fuse should be the slow-blow type, with a rating of 1.5 amperes.

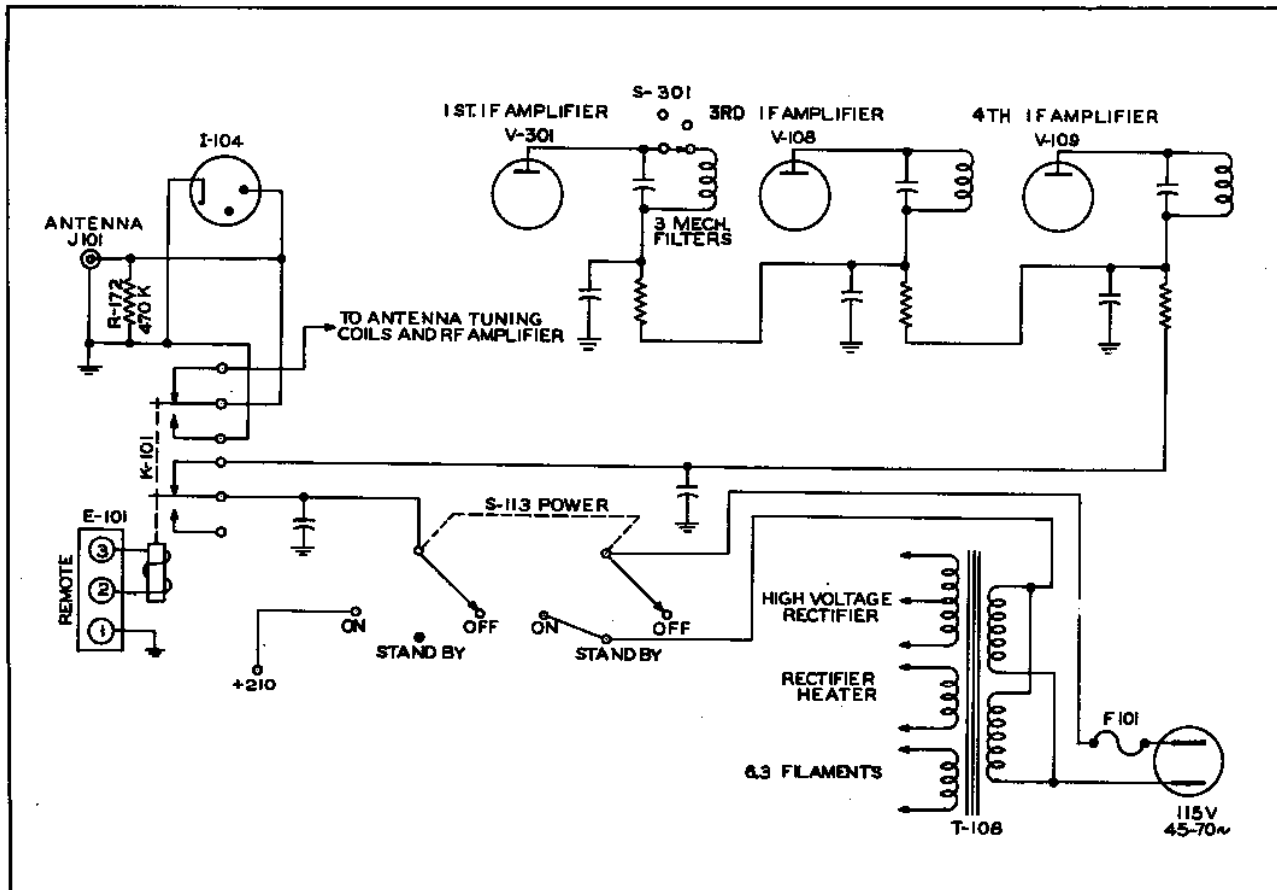


Figure 2-3. 51J-4 On-Off-Standby Functions and Remote Operation Relay Circuit