



75A-2 AMATEUR RECEIVER

INSTRUCTION BOOK

INSTRUCTION BOOK
for
75A -2 AMATEUR RECEIVER

Manufactured By
COLLINS RADIO COMPANY, Cedar Rapids, Iowa

520 9482 00
SEP 26 1951

TABLE OF CONTENTS

<u>Paragraph</u>	<u>Page</u>
<u>SECTION I - GENERAL DESCRIPTION</u>	
1.1. General	1-1
1.2. Description	1-1
1.2.1. Frequency Coverage	1-1
1.2.2. Bandspread	1-1
1.2.3. Accuracy and Stability	1-1
1.2.4. Image and I-F Rejection	1-1
1.2.5. Sensitivity and Signal to Noise Ratio	1-2
1.2.6. Selectivity	1-2
1.2.7. Phasing	1-2
1.2.8. Automatic Noise Limiter	1-2
1.2.9. CW-Noise Limiter	1-2
1.2.10. Automatic Volume Control	1-2
1.2.11. Signal Strength Meter	1-2
1.2.12. Audio Output	1-2
1.2.13. Terminal Impedances	1-2
1.2.14. Controls	1-2
1.2.15. Circuit	1-3
1.2.16. Tube Complement	1-3
1.2.17. Power Source	1-3
1.2.18. Dimensions - Cabinet	1-3
1.2.19. Weight	1-3
1.2.20. Finish	1-3
1.3. Accessories	1-4
1.3.1. Speaker Type 270G-2	1-4
1.3.2. Headphones	1-4
1.3.3. Antenna	1-4
1.3.4. Crystal Calibrator	1-4
1.3.5. NBFM Adaptor, Type 148C-1	1-4
<u>SECTION II - INSTALLATION</u>	
2.1. Unpacking	2-1
2.2. Connections	2-1
2.2.1. Antenna and Ground	2-1
2.2.2. Coaxial Conversion	2-1
2.2.3. Output Connections	2-2
2.2.4. Standby	2-2
2.2.5. CW Break-in	2-2
2.2.6. Power	2-2
2.3. Fuse	2-2
2.4. Installation of 148C-1 NBFM Adaptor Unit	2-3
2.5. Installation of 8R-1 Calibrator Unit	2-3
<u>SECTION III - ADJUSTMENT AND OPERATION</u>	
3.1. Initial Adjustments	3-1
3.1.1. "S" Meter	3-1
3.2. Operation	3-1
3.2.1. Function of Controls	3-1
3.2.2. Operating Practices	3-3

TABLE OF CONTENTS

<u>Paragraph</u>	<u>Page</u>
<u>SECTION IV - CIRCUIT DESCRIPTION</u>	
4.1. Mechanical	4-1
4.2. General	4-1
4.3. Tuning	4-1
4.4. Band Switching	4-1,
4.5. Electrical Theory	4-1
4.5.1. Circuit	4-1
4.5.2. Tuning	4-2
4.5.3. Crystal Filter	4-3
4.5.4. Noise Limiter	4-4
4.5.5. CW Noise Limiter	4-5
4.5.6. Automatic Volume Control	4-5
4.5.7. Audio Amplifiers	4-5
4.5.8. 148C-1 Narrow Band Frequency Modulation Adaptor	4-6
4.5.9. 8R-1 Calibrator Unit	4-6
<u>SECTION V - MAINTENANCE</u>	
5.1. Trouble Shooting	5-1
5.2. Fuses	5-1
5.3. Alignment	5-1
5.3.1. Equipment and Tools Used For Alignment	5-1
5.3.2. 455 kc I.F. Alignment	5-1
5.3.3. Alignment of BFO	5-2
5.3.4. Adjustment of Crystal Oscillator	5-3
5.3.5. Variable I.F. Alignment	5-4
5.3.6. 2.5 - 1.5 MC I.F. Alignment	5-4
5.3.7. 5.455 - 3.455 MC I.F. Alignment	5-4
5.3.8. Tweet Trap Adjustment	5-4
5.3.9. R.F. Alignment	5-5
5.3.10. VFO Adjustment	5-5
5.4. Dial Cords	5-6
5.4.1. General	5-6
5.4.2. Front Panel Removal	5-6
5.4.3. Pointer Cord	5-6
5.4.4. Drum Cord	5-7
5.5. Alignment of 148C-1 NBFM Unit	5-7
5.6. Narrow Band Conversion	5-8
5.7. General	5-8
5.8. Procedure	5-8
5.9. Broad Band Conversion	5-8
5.10. General	5-8
5.11. Test Equipment Required	5-8
5.12. Realignment	5-8
<u>SECTION VI - PARTS LIST</u>	

LIST OF ILLUSTRATIONS

<u>Figure</u>	<u>Title</u>
1-1	75A-2 Front View and Block Diagram
3-1	75A-2 Operating Controls
3-2	Typical Dial Reading
4-1	Frequency V.S. Dial Division Table
4-2	75A-2 Block Diagram of Tuning Circuits
4-3	Noise Limiter Circuits
4-4	AVC Circuit
5-1	75A-2 Alignment Adjustments
5-2	Dial Cord Replacement
5-3	75A-2 Top View
5-4	75A-2 Bottom View
5-5	75A-2 Schematic Diagram
5-6	148C-1 NBFM Adaptor Schematic Diagram
5-7	8R-1 Crystal Calibrator Schematic Diagram