


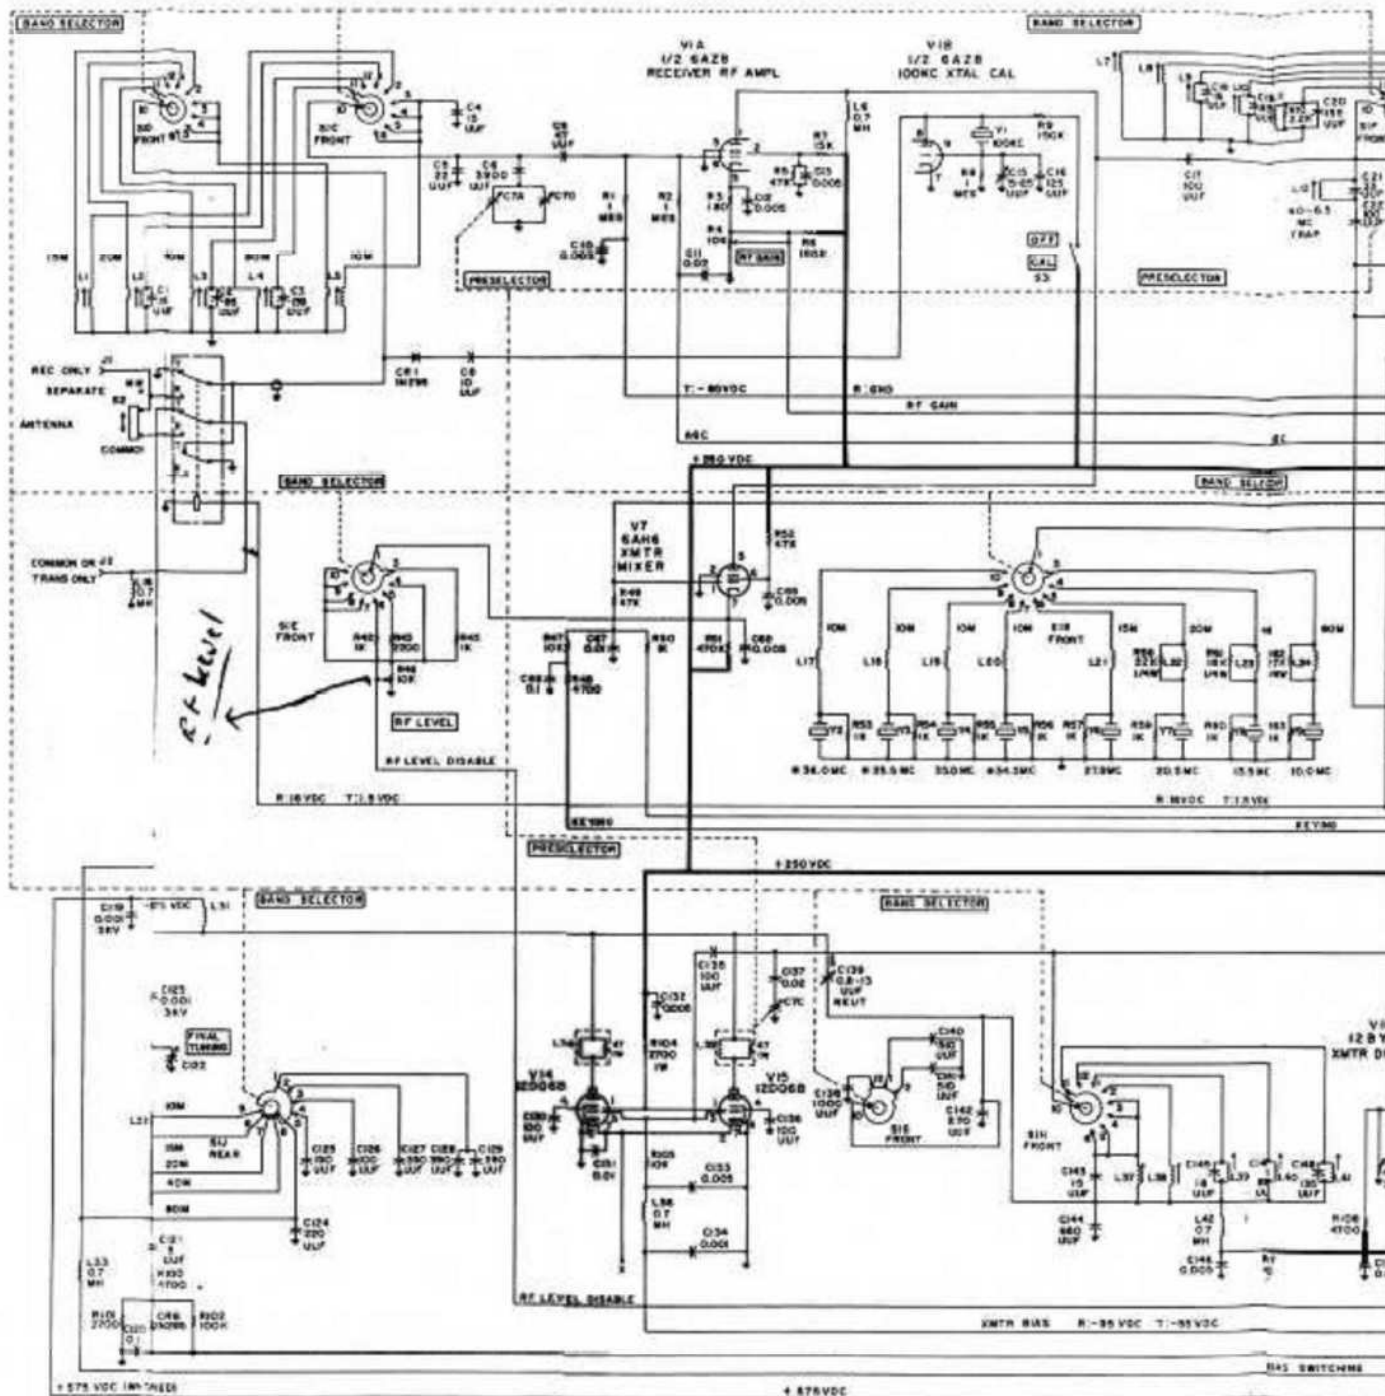

NOTES:

- UNLESS OTHERWISE SPECIFIED:
- ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE SPECIFIED.
- ALL CAPACITORS ARE IN UF UNLESS OTHERWISE SPECIFIED.
- OPERATION SWITCH IS SHOWN IN OFF (FULL CCW) POSITION.
- FUNCTION SWITCH IS SHOWN IN CW (FULL CCW) POSITION.
- BAND SWITCH IS SHOWN IN 3.5 MC (FULL CCW) POSITION.
- CRYSTALS NOT SUPPLIED.
- IF SEPARATE ANTENNA OR LINEAR AMPLIFIER WITH ANTENNA SWITCHING RELAY USE THIS POSITION.
- ALL FEEDING CAPACITORS ARE 1000 UF.

FUNCTION SW POSITION	OPERATOR SW POSITION
1. OFF (POWER OFF)	1. CW
2. STANDBY (RECEIVE)	2. 1/2
3. MIX (MANUAL XMIT/PTO)	3. LSS
4. VOR (AUTOMATIC SWIT)	
SHOWN IN OFF	SHOWN IN CW

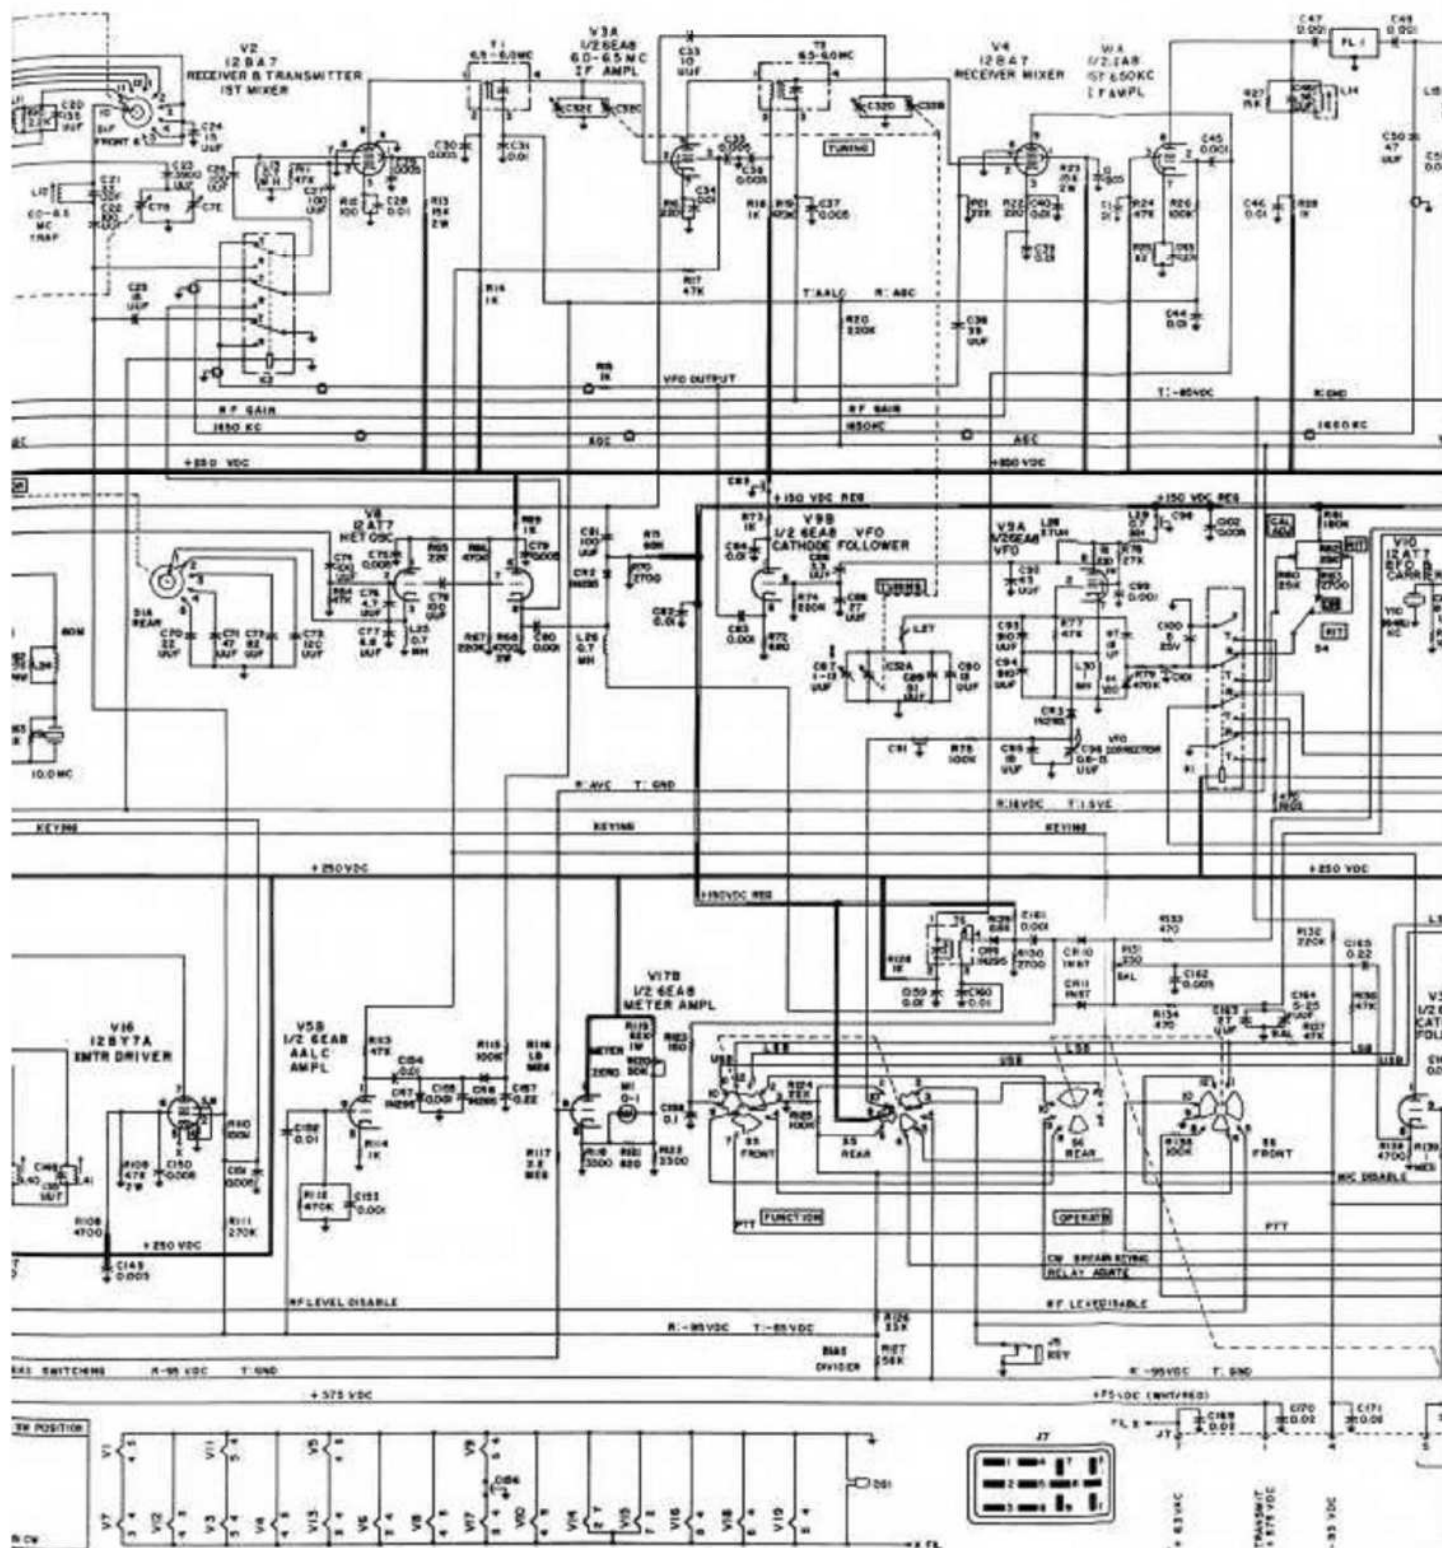


Figure 21. Schematic Diagram of Model SR-150 Transceiver.

