

PART No.	PARTS Per Kit	DESCRIPTION	PART No.	PARTS Per Kit	DESCRIPTION
<u>Terminal Strips-Sockets-Plugs</u>			<u>Wire</u>		
431-1	1	1-lug terminal strip	340-3	1	Length #16 bare wire
431-5	1	4-lug terminal strip	344-1	1	Length #22 hookup wire
431-10	1	3-lug terminal strip (large)	344-2	1	Length #18 stranded black wire
431-14	1	2-lug terminal strip	344-3	1	Length #18 stranded red wire
431-38	2	3-lug terminal strip (small)	346-1	1	Length sleeving
431-40	2	4-lug terminal strip	347-9	1	Length 3-conductor shielded cable
432-1	1	Microphone connector (cable)	<u>Hardware</u>		
432-3	1	Microphone connector (chassis)	250-10	4	6-32 x 1/2" screw
434-4	2	Octal socket	250-26	1	6-32 x 5/8" screw
434-15	1	7-pin socket	250-49	8	3-48 x 1/4" screw
434-38	1	Crystal socket	250-51	2	#10 x 3/8" sheet metal screw
434-42	1	Phono socket	250-56	7	6-32 x 1/4" screw
434-75	3	9-pin ceramic socket	250-89	12	6-32 x 3/8" screw
434-77	1	9-pin wafer socket	250-136	1	3-48 x 1/2" screw
435-1	1	Octal socket ring	250-172	2	3-48 x 3/8" screw
436-6	1	3-circuit phone jack	252-1	11	3-48 nut
438-3	1	Phone plug	252-3	20	6-32 nut
438-4	2	Phono plug	252-7	4	Control nut
438-22	1	Octal plug	252-22	4	#6 speednut
440-1	2	Octal plug cap	252-23	1	6-32 thumbnut
<u>Controls-Switches</u>			252-32	2	Speednut
10-59	1	250 K Ω linear (REGENERATION)	253-10	5	Flat control washer
19-27	1	1 megohm audio with SPST switch (VOLUME-ON-OFF)	253-21	6	Flat washer
63-210	1	3-position, 4-circuit, TRANSMIT-RECEIVE switch	254-1	24	#6 lockwasher
<u>Diodes-Tubes-Lamps</u>			254-4	5	Control lockwasher
56-4	1	Crystal diode	254-7	12	#3 lockwasher
57-27	2	Silicon diode	259-1	3	#6 solder lug
411-26	1	12AX7 tube	259-11	3	#6 spade terminal
411-60	1	6AQ5 tube	<u>Miscellaneous</u>		
411-98	2	6BA8 tube	73-1	2	3/8" rubber grommet
411-121	1	6BS8 tube	73-4	1	5/16" rubber grommet
412-1	1	#47 pilot lamp	89-1	1	Line cord
412-12	1	Neon pilot lamp (clear)	211-16	1	Plastic handle
412-13	1	Neon pilot lamp (red)	261-9	4	Rubber feet
<u>Metal Parts</u>			391-5	1	Nameplate
90-111	1	Cabinet	401-21	1	Speaker
200-M280F398	1	Chassis	421-1	1	1-1/2 ampere fuse
203-181F397	1	Front panel	421-4	1	8 ampere fuse
205-M167F1	1	Speaker baffle plate	423-1	1	Fuse holder
209-25	1	Speaker grill	462-85	2	Knob w/gold insert and indicator dot
			462-86	1	Knob lever type w/gold insert and indicator line
			480-8	1	Microphone
			481-1	1	4-prong capacitor mounting wafer
			331-6		Solder
			595-364	1	Manual