



TRIO

SERVICE MANUAL

TS-510 (PS-510)



SSB TRANSCEIVER



ALL BAND SSB TRANSCEIVER TS-510

CONTENTS



Special Features	2
Circuit Description	3
Controls and their Functions	11
Operating Instructions	15
Accessory Circuitry	20
Alignment and Maintenance	22
Specifications	29
Schematic Diagram	30
Product Guide	31

Thank you for purchasing a TS-510 ALL-BAND TRANSCEIVER. The transceiver you have just purchased has passed all of our quality control tests; however, if it is found to be damaged or actual performance does not meet that specified due to accidents during shipment, please feel free to contact your local dealer.

SPECIAL FEATURES

1. The TS-510 is a high power, high stability SSB transceiver representative of the SSB era.
2. The Gothic style cabinet design, which gained the admiration of all users of the earlier 500 Series, is employed and will doubtlessly add to the appearance of any shack.
3. The use of an extremely stable VFO, a new development built around 2 FET's and 13 transistors, insures stable QSO's as long as you operate.
4. Accurate, double-gear tuning mechanism and linear tuning capacitor provide 1 kHz direct reading on all bands.
5. Frequency coverage has been reduced to 25 kHz for one complete rotation of the dial to facilitate tuning in of SSB signals.
6. A high frequency filter especially developed for the 510 Series is employed. Its excellent shape factor makes sharp cutoff for both receive and transmission with the TS-510 possible.
7. Equipped with a selectivity switch for both SSB and CW modes. Insertion of a CW filter makes CW operation more pleasant. The CW filter is available as a optional item.
8. The AGC circuit includes an amplifier to insure such high performance that even the largest input signal can be received without distortion. The AGC circuit also features signal strength meter indication independent of RF gain adjustment.
9. Built-in calibration circuit. This circuit is a 25 kHz multivibrator which permits accurate calibration for every rotation of the dial, such as when making QSY's.
10. Equipped with a side-tone oscillator which eliminates the necessity of adding an RF oscillator for accurate CW reception.
11. Amplifier type ALC circuit employed has excellent ALC characteristics as compared to those of a grid detector. Beautiful SSB signals are produced without sputtering.
12. The ALC voltage can be observed on the meter to monitor operating levels for correct on-the-air operation.
13. Equipped with an RIT circuit which permits fine adjustment during reception and tuner reading correction without changing the main dial setting.
14. The receiver is a dual conversion superheterodyne in which the RF and local oscillator are independently tuned. This, together with the high performance high frequency filter and bandpass filter, provides high stability and sensitivity.
15. AGC time constant can be switched between SLOW and FAST.
16. The use of an external VFO (VFO-5D) in conjunction with the internal VFO permits still more elaborate operation highly regarded by old hands.
17. Many accessory circuits, such as VOX, PTT, amplifier type AGC, RIT, CAL circuits, bandwidth switching, multimeter which indicates Ip, RF, HV, ALC, and signal strength, AGC switch, terminals for external VFO, ALC, and receiver input and output terminals.
18. The power supply are independently and externally connected to the transceiver. The Model PS-510 (containing speaker) power supply unit is also available.

CIRCUIT DESCRIPTION

The TS-510 transceiver employs a high frequency crystal filter and covers all ham bands from 3.5 ~ 29.7 MHz. Both the receiver and transmitter sections employ the dual conversion configuration. The VFO is solid state and stable.

This transceiver employs printed circuit boards, almost all of which are independently built for individual sections. As shown in the circuit diagram on page 30, each printed circuit board has its own unit number with the resistors, capacitors, and coils having specific 3-digit numbers (see Table 1).

The numbers appearing in the following explanations are all based on this numbering scheme.

Fig. 1 is a block diagram of the TS-510 transceiver.

During transmission, the signals pass through the microphone, mic. amplifier, balanced modulator, buffer amplifier, balanced modulator, buffer amplifier, crystal filter, IF amplifier (common to both receiver and transmitter sections), first mixer, BPF, second mixer, driver, power amplifier, and antenna. ALC is applied to the buffer and common IF amplifier. On the other hand, the received signals are fed through the antenna, RF amplifier, first mixer, BPF amplifier, second mixer, crystal filter, common IF amplifier, IF amplifier, ring detector AF amplifier, and speaker. AGC is applied to the two-stage IF amplifier and RF amplifier.

The TS-510 includes a carrier oscillator, VFO, heterodyne crystal oscillator, 25 kHz marker, and side-tone oscillator. Accessory amplifiers are the AGC, ALC, VOX, and relay amplifiers.

CIRCUITRY COMMON TO BOTH TRANSMITTER AND RECEIVER SECTIONS

1. MICROPHONE AMPLIFIER AND BALANCED MODULATOR (UC1501J)

AF signals fed through the microphone terminals pass through a low-pass filter to eliminate their unwanted high frequency components, supplied to the

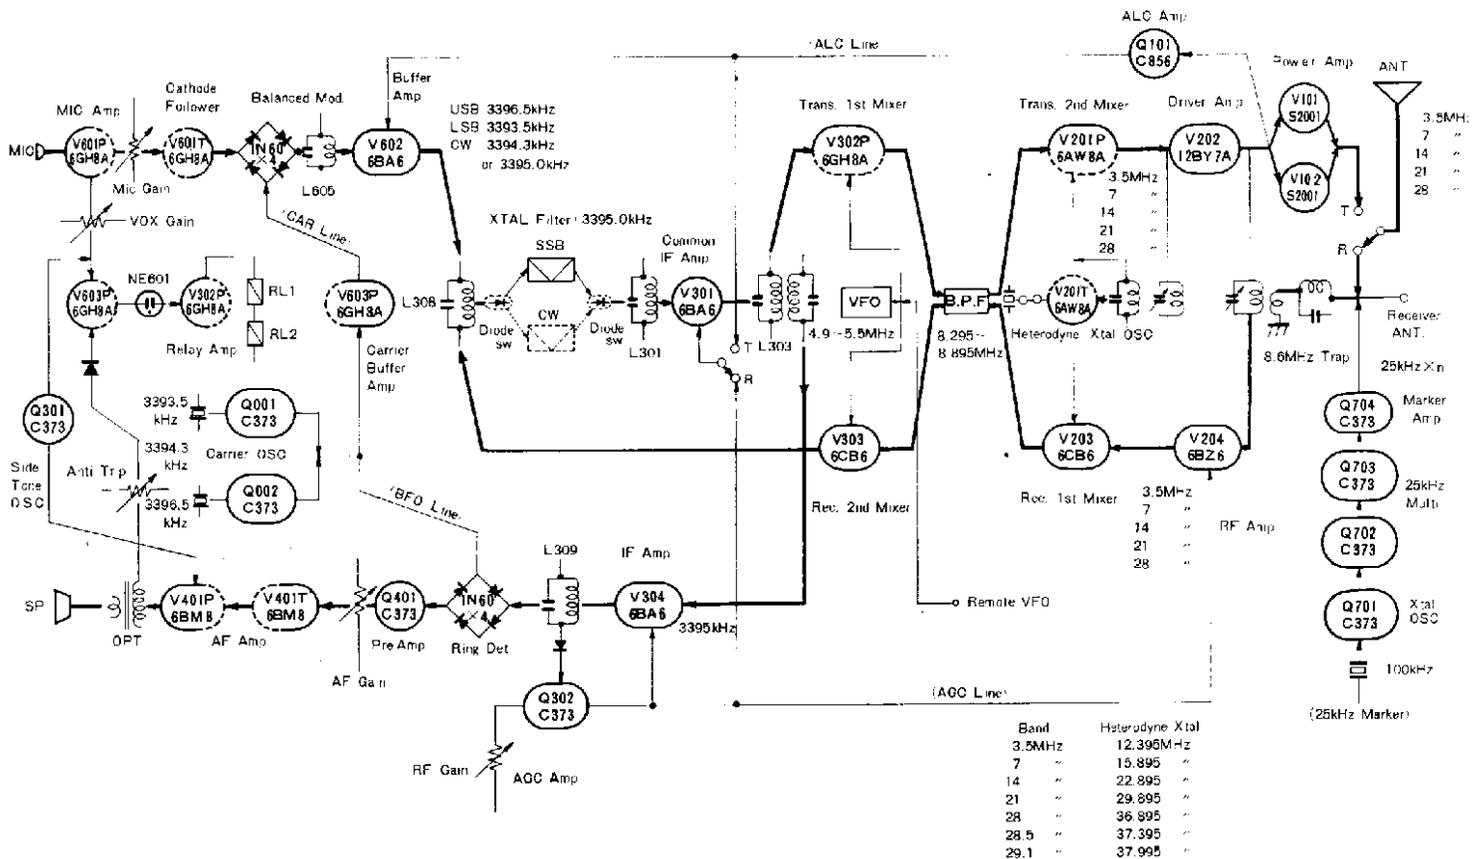


Fig. 1 Block Diagram

6GH8A (V601P), which amplifies the AF signals, and then fed through microphone gain potentiometer VR to the other section of the 6GH8A (V601T). This triode section is a cathode follower which converts the impedance of the AF signals before feeding them to the balanced modulator when the mode switch is set to either USB or LSB. In the CW mode, a DC voltage is produced across carrier level adjust potentiometer VR (VR601).

The input signals are then fed to the balanced modulator consisting of four diodes, which modulates the carrier with the AF signals (USB 3396.5 kHz; LSB 3393.5 kHz; CW 3394.3 kHz or 3395.0 kHz) to generate DSB signals across the secondary terminals of L605.

The carrier is passed through the switching circuit (6GH8A, V603T) and fed to the balanced modulator only during transmission. The 6GH8A also serves as a buffer.

2. CARRIER OSCILLATOR (UC1405J)

In general, SSB transceivers use the carrier oscillator as a BFO for reception (Fig. 2). The TS-510 employs the same technique. Therefore, the transmit carrier frequency and BFO frequency must be separated by the beat frequency when CW signals are received. In addition, it is also desirable to set the BFO frequency close to but out of the filter bandwidth, so that it can produce a single beat tone.

Table 1 Code numbers of units used in the TS-510

Name of unit and block		Unit No.	C & R code No.
Coil Pack	Drive plate	UC1108J	950~999
	Drive grid	UC1109J	900~949
	X'Tal tuner	UC1110J	850~899
	Crystals	UC1111J	800~849
RF block		UC1112J	200~299
IF block		UC1204J	300~399
Diode switch Unit		UC1209J	500~549
AF block		UC1304J	400~499
Final block		UC1404J	100~199
Carrier unit		UC1405J	001~099
BM block		UC1501J	600~699
Marker Unit		UC1502J	700~799
VFO Unit		UC0110J	—
Main Unit and others		—	1~ 99

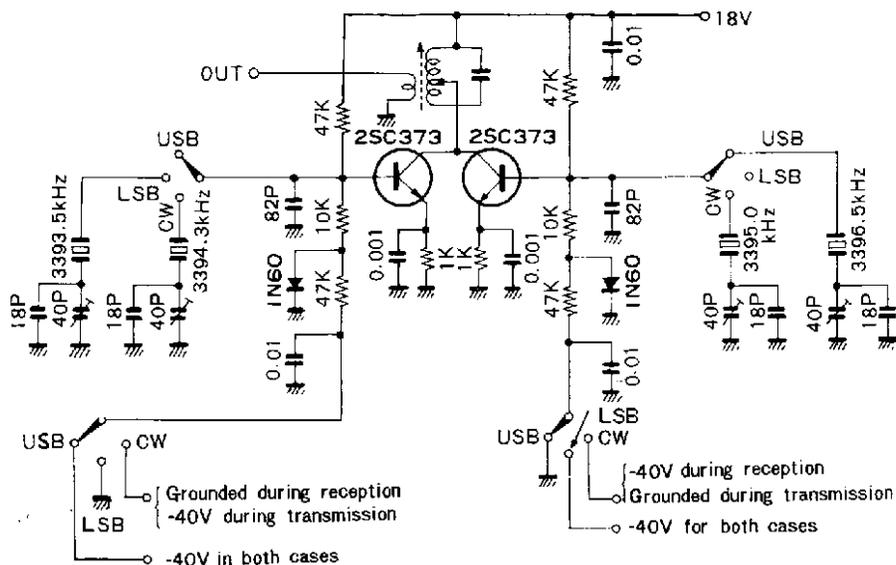


Fig. 2 Carrier oscillator (When the CW filter is equipped and four crystals are installed)

This makes it necessary to change the BFO frequency in accordance with the bandwidth of the filters when the filters are altered.

The TS-510 has a CW filter in addition to the SSB filter. Therefore, it is necessary to change both the carrier frequency and BFO frequency when the CW filter is used for CW operation, while they can remain the same when the SSB filter is used for CW operation. The carrier and BFO frequencies are shown in Fig. 3 each of these cases. Three carrier crystals are required for the SSB filter and four for the CW filter.

The carrier oscillator is a B-E Pierce with two transistors connected in parallel and switched to oscillate three or four crystals. The oscillation frequency of the individual crystals can be adjusted by means of the trimmer capacitor inserted between the crystals and ground.

3. BUFFER AMPLIFIER (UC1501J)

The DSB signal produced by the balanced modulator is amplified by the buffer amplifier 6BA6 (V602) and fed to the subsequent crystal filter. This amplifier operates during transmission with its being controlled by the ALC voltage.

4. DIODE SWITCH (UC1209J) AND CRYSTAL FILTER (UC1204J)

The DSB signal amplified by the buffer passes through L308, the diode switch unit, and the SSB filter where it is converted into an SSB signal (center frequency of 3395.0 kHz). After passing through the SSB filter, the SSB signal is passed through the diode switch at the output side and fed to L301. As shown in Fig. 4, this SSB filter has an excellent characteristic with a shape factor of less than 2.

The TS-510 can house both the SSB filter and a CW filter. A diode switch is provided to switch these two filters. In sets in which only the SSB filter is equipped, the diode switch is unnecessary and is therefore shunted with a jumper wire.

As shown in Fig. 5, the diode switch operates under the principle in which a forward voltage is applied to the two series diodes to turn them on and the voltage drop developed across the resistors at this time applied to the other diodes in the reverse direction to turn them off.

5. IF AMPLIFIER COMMON TO TRANSMITTER AND RECEIVER SECTIONS (UC1204J)

The SSB signal passing through L301 is amplified by the 6BA6 (V301). The output of V301 is then fed to the transmitter 1st mixer from the primary winding of L303 during transmission, or to the receiver IF amplifier from the secondary winding of L303 during reception.

This common IF amplifier operates during both reception and transmission. Its gain is controlled by the ALC and AGC voltages which cause the cathode voltage to change. This is utilized to operate both the bridge type ALC meter and the S-meter.

6. TRANSMIT 1ST MIXER AND BANDPASS FILTER (UC1204J)

The transmit 1st mixer receives the VFO signal (5100 ~ 4900 kHz) at the cathode of 6GH8A (V302), and the SSB signal at the control grid and through L303. The mixer converts the 1st IF frequency of the SSB signal (3395.0 kHz) into the 2nd IF frequency (8.895 ~ 8.295 kHz) does not change the mode of the signal.

The 3.4 MHz trap inserted in the plate circuit prevents passage of the 1st IF signal and the 14.13 MHz trap inserted in the cathode circuit prevents feedback of the output from the antenna. D302 in the cathode circuit is turned off during reception to prevent the 1st IF signal from passing to the receiver mixer through the VFO circuit.

After passing through the transmit 1st mixer the SSB signal is fed to the bandpass filter placed after L305. This bandpass filter (BPF) consists of three tuning circuits, has a center frequency of 8595 kHz and a passband of ± 300 kHz (-1 dB).

Unwanted components, such as spurious components, of SSB signal are eliminated by this BPF before the SSB signal is supplied to the transmit 2nd mixer.

7. VFO AND RIT (UC0110J)


This VFO (variable frequency oscillator) serves as a local oscillator whose signal is supplied to the transmit 1st mixer and the receive 2nd mixer. This is the block which determines the frequency stability and variable frequency range of receive and transmit signals of the TS-510. Therefore, special design consideration is given to insure high frequency stability over the entire range of frequency variation.

The VFO has an oscillation frequency range of 600 kHz between 5500 kHz (at 0 deg on the dial) and 4900 kHz (at 600). Solid state components are employed with the oscillator stage using an FET transistor to insure utmost frequency stability. The oscillator circuit used is a Clapp, followed by a one-stage voltage amplifier and two-stage buffer, which guarantees high stability under load fluctuations.


The VFO is completely sealed and all necessary adjustments are already made. Therefore, it is advisable not to open the cover or make any modifications of the exterior since they might result in reduced performance.

The RIT circuit is housed in the VFO box. An RIT voltage is applied from the outside to change the oscillation frequency of the VFO with the dial setting remaining the same.

The circuit to produce this RIT voltage is contained in UC1304J. The voltage can be controlled by RIT VR located on the front panel. (See Fig. 6).

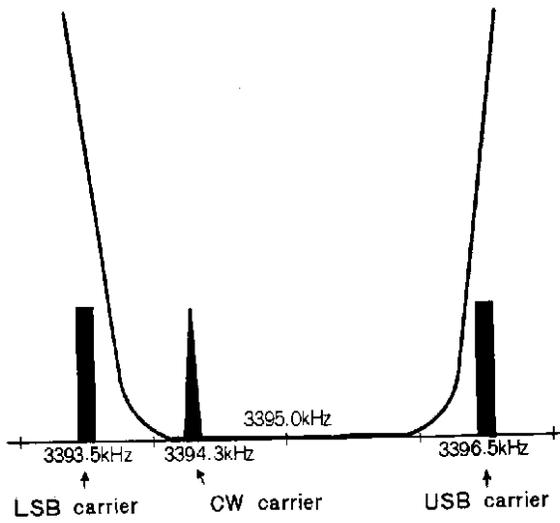

(a) In the case of the SSB filter only

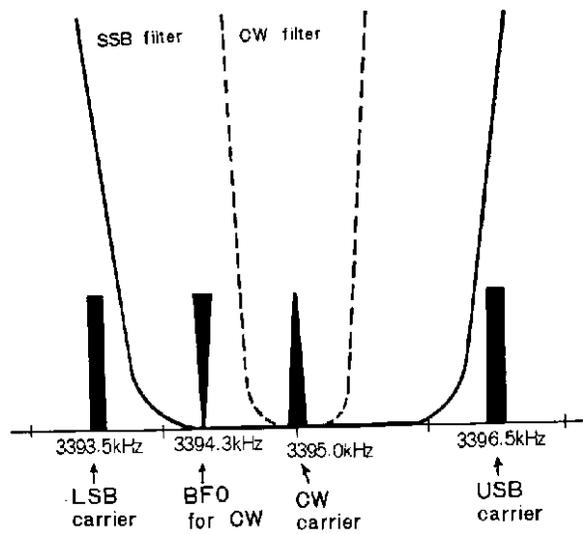

(b) When a CW filter is used

Fig. 3 Carrier and BFO Frequencies for Individual Modes

Attenuation (dB)

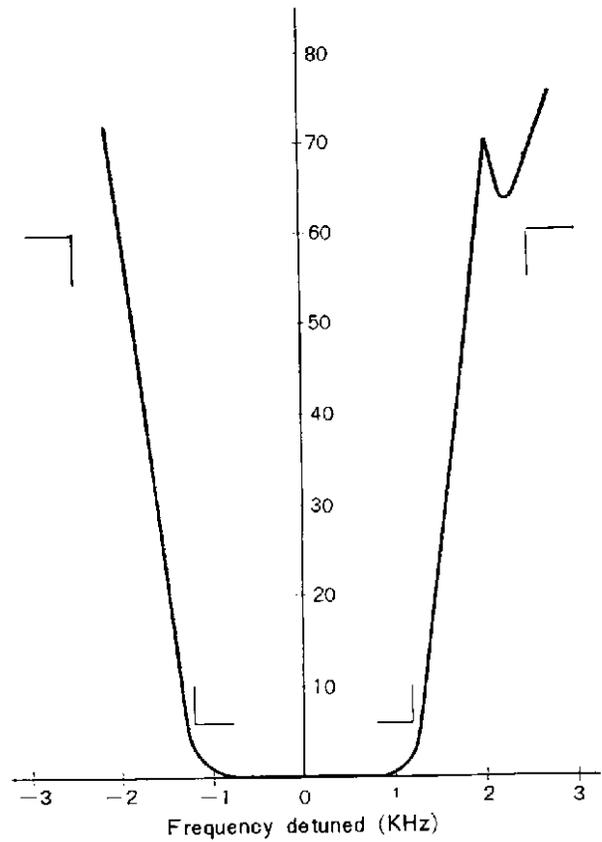


Fig. 4 SSB crystal filter characteristic curve

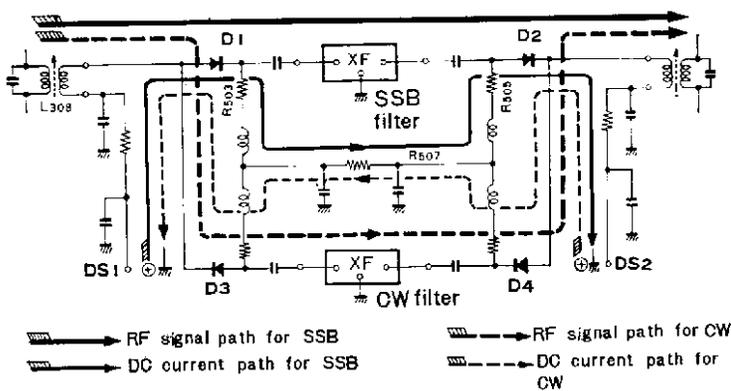


Fig. 5 Operation of diode switch

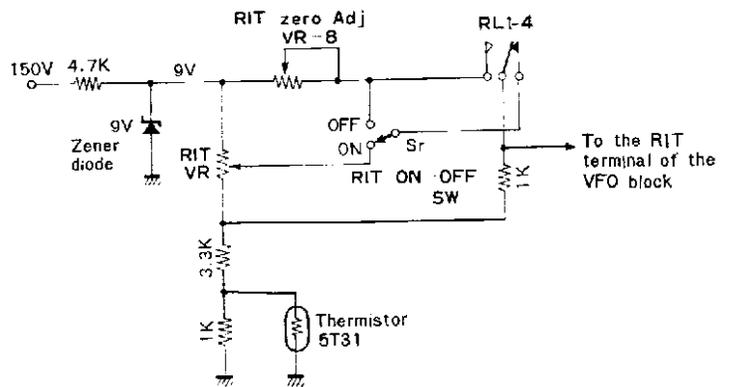


Fig. 6 RIT circuit

8. TRANSMIT 2ND MIXER (UC1112J)

After passing the BPF the SSB signal, which is now a 2nd IF frequency, is fed to the 6AW8A (V201P), mixed with the output of the heterodyne crystal oscillator injected at the grid, and converted into an SSB signal having a frequency within one of the amateur bands. The USB and LSB are inverted at this time, since the output is the heterodyne conversion difference frequency.

The plate tuning circuit (UC1109J) is a 3.5 MHz coil or a combination of another coil connected in series with the 3.5 MHz coil for the 7 MHz band and higher. The coils are designed so that the center frequency of the individual bands are tuned with the tuning capacitor half-meshed. These tuning circuits also serve as the RF tuning circuits during reception.

9. HETERODYNE OSCILLATOR (UC1112J), CRYSTAL UNIT (UC1111J), AND TUNING UNIT (UC1110J)

The local oscillation output is generated by these units and supplied to the transmit 2nd mixer and receive 1st mixer. All crystals operate on the third overtone and are switched by a rotary switch. The tuning coils are independent for the individual bands with the coil for the 28 MHz band divided into A, B, and C. The output is supplied to the transmit heterodyne mixer through coupling capacitors.

10. DRIVER AMPLIFIER (UC1112J)

The SSB signal converted into an amateur band frequency by the transmit 2nd mixer is fed to the 12BY7A (V202) and class A amplified to drive the final tubes (S2001 \times 2).

The plate tuning circuit of this stage (UC1108J), is the same as that of the 2nd mixer and has independent tuning for the individual bands. The 3.5 MHz coil in this tuning circuit also includes an antenna link coil, since this tuning circuit serves as an antenna tuning circuit during reception. Since one end of this link coil is connected to the REC ANT terminals the driver output can be extracted from the REC ANT terminal if desired.

This driving stage and the transmit 2nd mixer are the section that the block bias keying for CW operation. Fig. 7 is a block bias keying circuit. This keying circuit permits the generation of a good keying waveform having a smooth rise and a reduced spece wave.

As shown in Fig. 7, V201P and V202 are controlled by TB line since the KEY line is grounded by the mode switch during SSB operation. For CW operation, both the KEY and TB lines are grounded and V201P and V202 operate to drive the S2001 tubes.

11. FINAL POWER AMPLIFIER AND ALC AMPLIFIER (UC1404J)

After being amplified by the driver stage the SSB signal is supplied to S2001 (V101 and V102) which linearly amplifies it and then feeds it to the π matching circuit and antenna.

The power amplifier consists of two S2001 tubes connected in parallel which operate in class AB1 with low distortion. The rated input power is 160W (CW). The S2001 tubes operate at an optimum of class AB1 when the base current is set to approximately 30 mA (plate current in the absence of an SSB signal). Bias voltage for this amount of current is approximately -45 V.

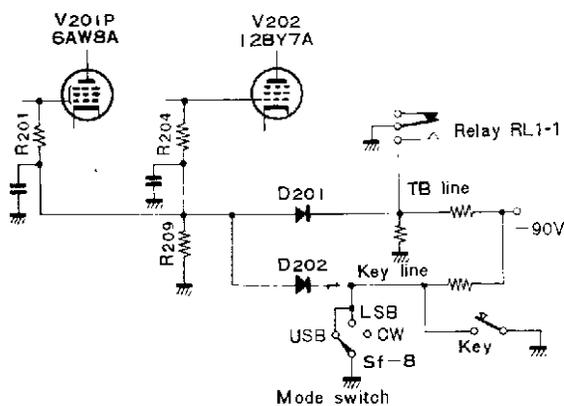


Fig. 7 Block bias keying circuit

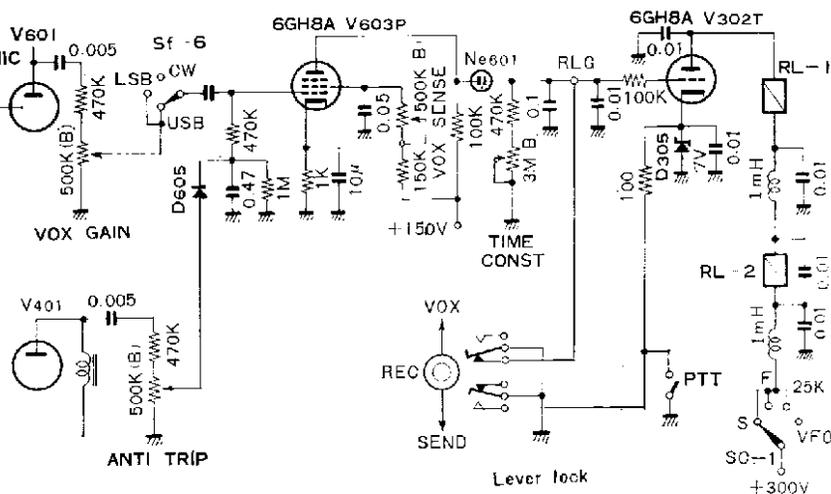


Fig. 8 VOX, anti-trip and relay amplifier

The capacitance of the π matching section at the antenna side is determined by the fixed capacitors and load variable capacitor selected by a switch for the individual bands so that it almost always matches the circuit to the antenna (50 ~ 75 Ω) on any of the bands.

The ALC voltage is obtained by detecting the DC current flowing in the control grid of the S2001 tubes by 2SC856 (Q101) and amplifying it with the ALC amplifier. Therefore, this amplifier can follow intermittent grid current, such as that of CW, and insures the final amplifier linearity. The ALC time constant has a fast rise and slow decay. The time constant is also designed to be faster for CW than for SSB to facilitate tuning.

This ALC voltage is connected to the external exit terminal and, at the same time, supplied to the buffer amplifier and common IF amplifier to control their gains.

12. VOX AMPLIFIER AND ANTI-TRIP CIRCUIT (UC1501J)

The AF signal supplied through the microphone terminals is amplified by a one-stage microphone amplifier, passed through the VOX gain control, and fed to the 6GH8A (V603P), which amplifies the

signal and lights the neon tube (NE601). This circuit amplifies the side tone output instead of the microphone amplifier output when semi-break-in is made with the side tone. As the neon tube discharges, the plate voltage of V603 charges the time constant circuit of the VOX to produce a relay amplifier controlling voltage (refer to Fig. 8).

The screen grid voltage of the VOX amplifier is adjusted by the VOX. SENSE. VR (VR603) to a value at which the neon tube is about to discharge. The discharge time constant can be changed with the TIME. CONST. VR.

The anti-trip circuit receives the AF output from the AF final stage (UC1304J), diode rectifies it, and supplies a positive DC voltage to the grid of the VOX amplifier. This voltage causes the plate current of the VOX amplifier to increase and hence the plate voltage drop, which makes the neon tube less dischargable.

13. RELAY AMPLIFIER (UC1204J)

The relay amplifier actuates two relays connected in series. The controlling operations of the relays are given in Table 2. One of their major functions is to switch the TS-510 between transmit and receive.

Other functions of the relay amplifier are to produce a voltage drop at the cathode of the 6GH8A (V302T) by means of the PTT and Lever Lock switch, and to apply the positive voltage of the VOX circuit to the grid to permit the plate current which actuates the relays to flow. When these controls are removed, the relays are automatically released by reduction of the plate current caused by the Zener diode inserted in the cathode circuit.

14. SIDE TONE OSCILLATOR (UC1204J)

This is an AF oscillator in which the 2SC373 (Q301) produces an oscillation output frequency of approximately 800 Hz. This output is supplied to the AF power amplifier tube (V401P) via VR to drive the speaker.

Since this circuit is used to monitor CW signals, the emitter, feedback circuit, and base voltage are controlled, and the circuit oscillates when the mode switch is set to CW (the emitter circuit is grounded), a key is inserted into the key jack (the feedback circuit operates), and when the key is depressed (base block bias is off).

RECEIVER SECTION

1. RF AMPLIFIER AND RECEIVE 1ST MIXER (UC1112J)

The signal fed through the antenna terminal passes through the antenna tuning circuit (UC1108J) and enters the 6BZ6 (V204) RF amplifier. The signals amplified by this RF amplifier pass through the RF tuning circuit (UC1109J), and are fed to the 6CB6 (V203) receive 1st mixer built to be mixed with the output of the heterodyne crystal and converted into the 1st IF frequency (8895 ~ 8295 kHz).

Table 2 Relay Contact Allotment

RL 1-1	B	RB (Receiver block bias)
	M	TB (Transmit block bias)
	COM	GND
RL 1-2	B	RC (Receiver Cathode)
	CM	TC (Transmit Cathode)
	COM	GND
RL 1-3	B	AGC
	M	ALC
	COM	V301 grid circuit
RL 1-4	B	RIT VR
	M	Fixed bias
	COM	RIT terminal of VFO
RL 2-1	B	} Refer to Fig 9 + terminal of the S-meter
	M	
	COM	
RL 2-2	B	} Refer to Fig 9 - terminal of the S-meter
	M	
	COM	
RL 2-3	B	REMOTE terminal
	M	GND
	COM	
RL 2-4	B	Receiver input
	M	Transmit output
	COM	ANT terminal

B..... Break contact, M..... Make contact

Although the oscillation frequency of the multivibrator can be changed by means of VR701, 25 kHz is obtained with the potentiometer position at approximately the center.

8. SPURIOUS BEAT DURING RECEPTION

The received signals are subjected to spurious beats at certain frequencies due to the relationship between the frequencies of the local oscillator.

The frequencies at which beat interference appears are,

3.5 MHz	3.7367 MHz (Within the band)
21.0 MHz	21.20 MHz (Within the band)

Interference at these frequencies is less than 3 dB. Although there is other spurious beat interference, they are less than 0 dB and do not cause any practical inconvenience.

■ OTHER CIRCUITS

1. HEATER CIRCUIT

The heater voltage is 12.6V. The 6.3V tubes used are divided into two groups connected in series. This configuration reduces the current capacity of the heater wires and eliminates the need for voltage balancing resistors which would otherwise be required.

2. METER CIRCUIT

Fig. 9 shows the meter circuit. The AGC and ALC are measured by reading the voltage at the cathode of a 6BA6 tube by means of a bridge circuit, Ip is measured in terms of voltage at the cathode of the 2S001 tubes. These are then displayed on the meter. The RF/HV voltmeter is used as an ordinary voltmeter.

The meter is designed to indicate signal strength during reception and ALC, Ip, RF, and HV during transmission. Switching between these indications is made by means of a relay circuit.

3. MAJOR ROTARY SWITCH CIRCUITS

Rotary switches include the band switch, mode switch, meter switch, and AGC/CAL switch. The operations of the mode switch, and AGC/CAL switch are listed in Table 3.

CONTROLS AND THEIR FUNCTIONS

FRONT PANEL (PHOTO 1)

(1) METER

This is a meter switch. With this switch set to ALC, the meter serves to monitor the driving conditions of the final power tube during transmission. With the switch set to Ip during transmission the meter indicates the plate current of the final power tube (to be more specific the cathode current). At position RF, the meter reads the RF voltage measured at the output terminal of the transmitter section. At position HV, the meter indicates the voltage at the plate of the final power tube during transmission.

This meter serves as an S-meter during reception regardless of the position of the meter switch.

(2) AGC/CAL

This switches between AGC and CAL. AGC (automatic gain control) can be made SLOW or FAST by selecting the time constant during reception. Set the AGC switch to the speed at which the received signals are most stable.

CAL is the calibration circuit, and switches between "25 kHz" and "VFO".

"25 kHz" is a 25 kHz marker whose frequency is produced by frequency dividing the 100 kHz of a crystal and using it to control a 25 kHz multivibrator. This marker is used to calibrate the main dial reading.

VFO is the calibrating circuit used to calibrate the internal VFO and remote VFO (VFO-5D) with each other.

(3) MIC

This is the microphone connector. Hook up a microphone with the accessory plug. Use a high impedance (50 K Ω) dynamic or crystal microphone.

(4) PHONES

This is a headphone jack. Its impedance is 8 Ω . A dynamic earphone with a low impedance is suitable, although a crystal type can be used.

When a plug is inserted in this jack, the speaker is cut off and the earphone connected in its place.

(5) MODE

This is used to change the mode of emission. Position USB enables reception of upper sideband signals and LSB lower sideband signals.

CW is for A1 signals and adjustment during transmission.

(6) MAIN DIAL

This is the main dial knob. Frequency coverage is 25 kHz per rotation. The flange of this dial is disengaged and idles when turned while being depressed toward the transparent scale plate. Calibrate the dial with the 25 kHz marker to make direct reading as fine as 500 Hz possible.

When the scale is disengaged by turning the knob, the dial cannot be rotated but stops at a certain point. Never attempt to turn it beyond this point. The gear teeth or other parts of the mechanism might otherwise be damaged.

(7) AF GAIN

This is the power switch and volume control. AC power is cut off at the extreme counterclockwise position and is switched on at all other positions. AF gain is increased by turning the knob to the right.

(8) PLATE LOAD

This is a dual knob. The inner knob is for adjusting the final power tube plate variable capacitor and the outer knob for turning the loading variable capacitor. This knob is used only for transmission and is not used during reception.

The upper scale corresponds to the plate knob and the lower scale to the loading knob on the panel. The impedance of the load decreases as the knob moves to the right.

(9) DRIVE

This knob serves for driver tuning during transmission and for ANT and RF tuning during reception. Adjust this knob so that a maximum driving power is obtained during transmission and maximum sensitivity is obtained during reception.

(10) RIT

RIT stands for "receiver incremental tuning" and is used to change the frequency during reception. It allows a frequency variation of approximately ± 3 kHz without using the main dial.

(11) RF GAIN RIT PULL OFF

This controls both receive sensitivity and switching of RIT between ON and OFF.

The RF gain is normally set to the extreme clockwise position (sensitivity maximum). However, it may be turned back to the left when the incoming signal is too strong. When this potentiometer is turned to the left, the deflection of the S-meter pointer increases from the zero point at which the pointer indicates in the absence of signals. This indicates that the receiver sensitivity decreases for signals with strengths below the point at which the meter pointer is set by the RF GAIN knob.

(12) BAND

This is the band switch. It divides the amateur channel from 3.5 MHz - 29.7 MHz into seven bands.

(13) LEVER LOCK SWITCH

This is the standby switch. When set to neutral (REC), it switches the transceiver to receive; when set to (SEND), it switches the set to transmission.

When shifted up, it establishes the circuit for VOX control.

When operating the TS-510 by PTT (push to talk), set the switch to REC.

(14) METER

This multimeter serves as an S-meter when the transceiver is at reception regardless of the position of the METER switch in (1).

For transmission, on the other hand, the meter displays Ip, RF, HV, or ALC, in accordance with the setting of the meter switch.

(15) DIAL GAUGE

The transparent plate has three lines on it. The central red line is for CW, the left side black line for LSB, and the right side black line for USB.

These three lines, USB, CW, and LSB, are aligned at 1.5 kHz intervals. For more accurate reading of frequencies, use the main dial mentioned in (6).

(16) AUXILIARY DIAL

This dial is turned by turning the main dial (6) and disc scale.

It is scaled at 25 kHz intervals and is used to read frequencies in larger than 25 kHz units while the main dial serves to show frequencies in finer units. Black graduations are 0, 50, and 100 kHz. Red graduations are 25 and 75 kHz.

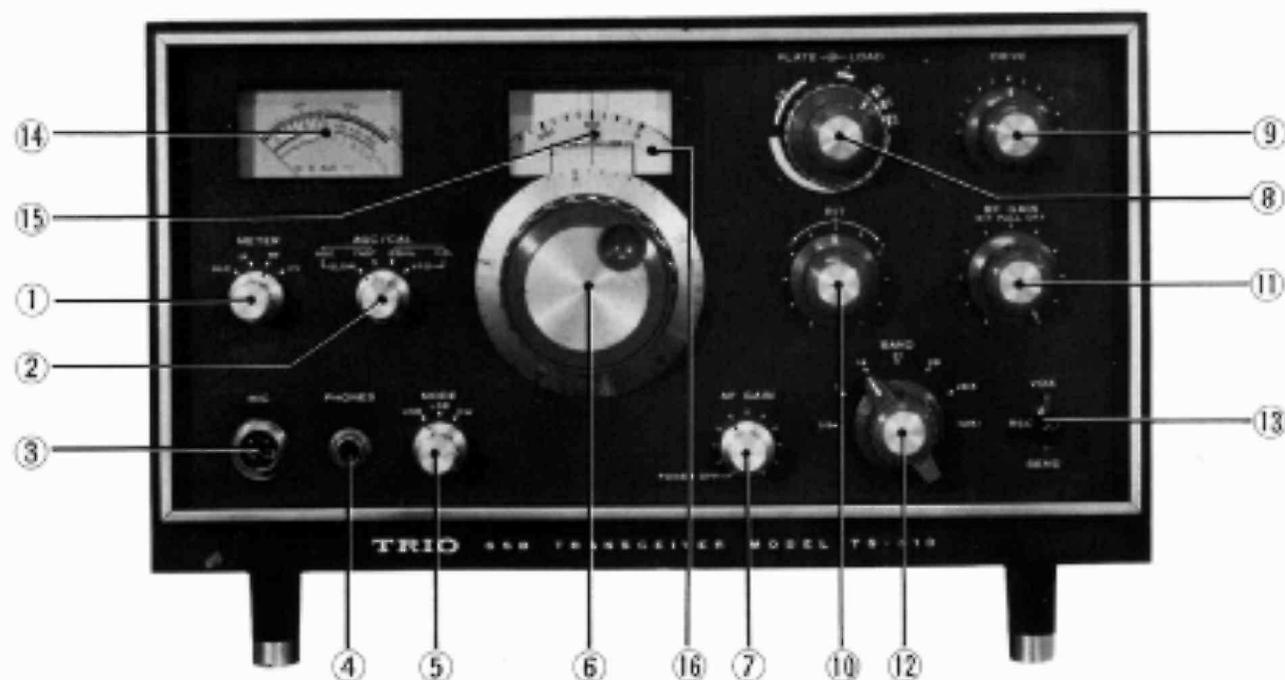


Photo 1 TS-510 Front Panel

REAR PANEL (PHOTO 2)

(1) BIAS

This controls the bias of the transmitter's final power amplifier. Adjust it for a plate current of 60 mA under no signal conditions in the USB or LSB transmission mode.

(2) KEY

This jack accepts a keying plug for CW operation. A plug is provided as an accessory.

(3) ANT

Antenna connections should be made here. Be sure to connect an antenna or dummy load before the transceiver is used. Impedance is 50 ~ 70 Ω.

(4) RF METER

This controls RF meter swing level. Adjust it so that the meter does not swing off the scale even at peak RF power with the METER knob on the front panel set to transmission.

(5) ANT SW (COM-REC)

This switches the antenna so that it can be used for both transmission and reception, or for both. Set

the switch to COM for dual use and set it to REC to use the antenna exclusively for transmission. In this case, the receive antenna should be connected to the REC ANT terminal to be explained below.

This switch is useful when a preselector is used in conjunction with the TS-510, since the transmitter and receiver sections can be connected through independent terminals.

(6) REC ANT

This terminal is used exclusively for reception. In normal operation, ANT terminal (3) serves for both reception and transmission and this antenna is therefore not required.

(7) VFO OUT

This connector is provided for the connection of an external VFO. All connections necessary to operate an external VFO, such as for the control circuit, power supply, and output of the VFO can be made through this connection. The connection cable is equipped on the external VFO and this connector is shunted by a shunt plug.

(8) GND

This is the grounding terminal. It is recommended that a good ground be connected here to prevent TVI and BCI, as well as for safety's sake.

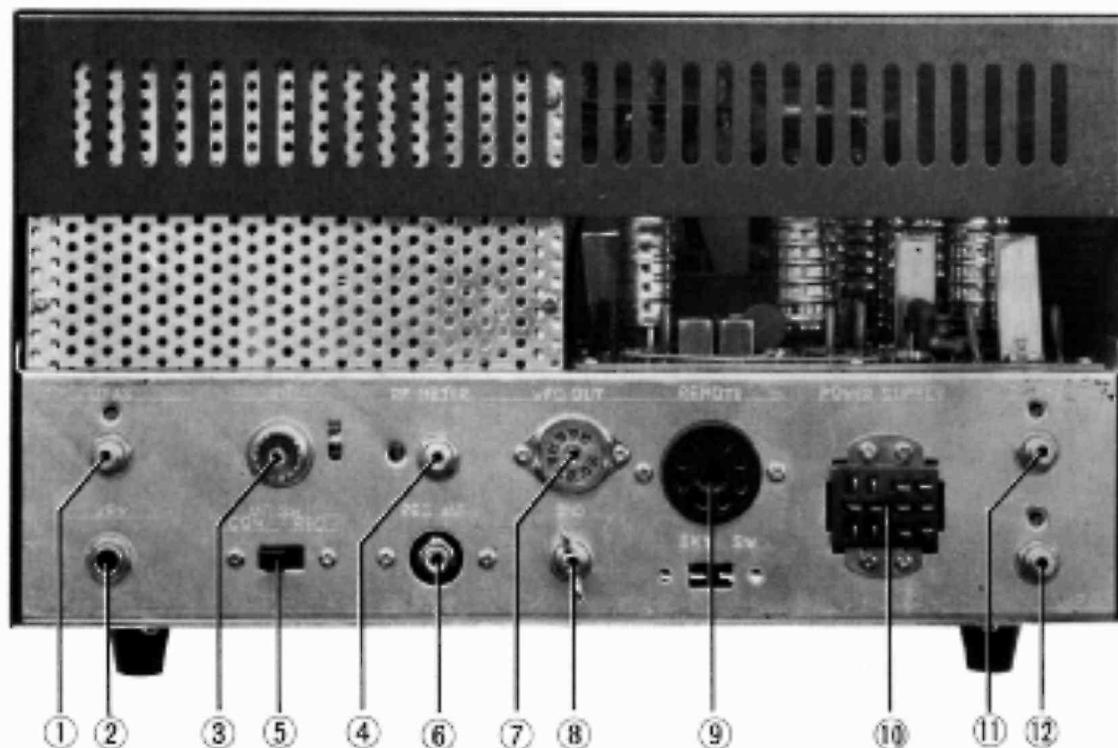


Photo 2 Rear Panel

(9) REMOTE

This terminal is provided for connection of such auxiliary as a linear amplifier.

(10) POWER SUPPLY

This is the power supply connection jack. It has a stopper which prevents the removal of the power cord during use.

(11) S METER

This enables zero adjustment of the S-meter. It should be adjusted to "O" under no receiver signal conditions.

(12) MIC GAIN

This is adjusted to control microphone output. Keeping this control at a the point that just provides sufficient modulation, will prevent overdriving.

(2) ANTI-TRIP

This is for anti-trip adjustment. It should be set so that speaker response during VOX operation in the receiving mode will not accidentally trip the relay to the transmission mode.

(3) TIME CONSTANT

This controls the time constant of the VOX relay. Turn it clockwise to increase the time constant.

**UPPER CHASSIS CONTROLS
(PHOTO 3)**

(1) VOX GAIN

This adjusts VOX sensitivity. In noisy surroundings it should be kept low.

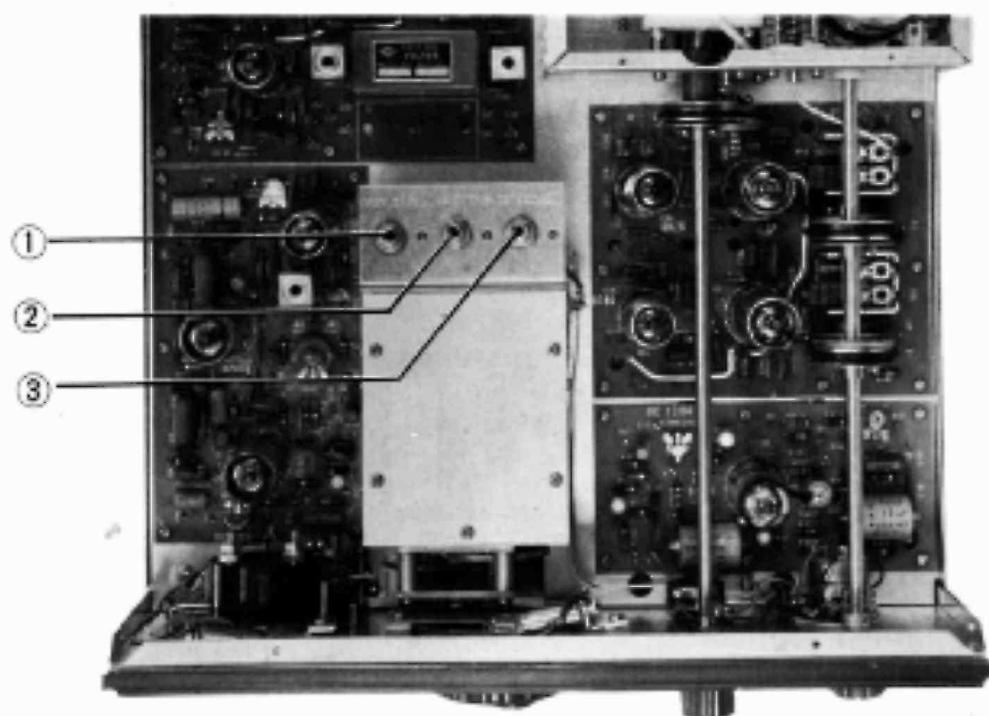


Photo 3 TS-510 Upper Chassis Controls

OPERATING INSTRUCTIONS

1. ACCESSORIES

The following accessories are supplied with this transceiver.

Please check to see that all are provided.

M-type receptacle (for antenna connection)	1
4-pin metal plug (for microphone)	1
Receiver plug (for headphone and transmitting key)	2
9-pin plug (already plugged in)	1
US plug	1
Hyzex legs	2
Test rod	1

2. INSTALLATION LOCATION

Avoid high humidity locations when selecting the installation location. Choose a dry location which is free from direct sunlight. Maintain ample space at the back and sides of the transceiver. Also avoid placing objects on top of the transceiver.

3. POWER SUPPLY

This transceiver is not equipped with a built-in power supply and one must therefore be procured separately.

The Model PS-510 power supply is available for use with the TS-510. The source voltage rating is 230/250 V AC.

The PS-510 contains a 16 cm speaker provided with an accessory power cord, which is connected to the TS-510 to operate the power supply unit. Connections are shown in Fig. 10. The cord is 2 meters long.

4. ANTENNA

The quality of the antenna greatly affects the performance of the transceiver. The use of a good antenna high in the air with sharp directivity and rigid construction is recommended. It must also be noted that mismatching at high power will cause TVI and BCI. Therefore, perfect matching to the antenna is necessary.

The impedance of the antenna terminals of the TS-510 is 50 ~ 75 Ω . Thus, a 75 Ω coaxial cable from a doublet antenna can be directly connected to the terminals, while other Types of antennas must be properly matched with a coupler. (Refer to Fig. 11)

The TVI filter is available to help prevent such interference if any.

5. MICROPHONE

Since sound quality is considerably affected by microphone characteristics, a good microphone should be used.

A 50 K Ω dynamic microphone or crystal microphone, equipped with a switch, is recommended. Fig. 12 shows two types of switching arrangements ordinarily offered in microphones. Type (B) switching is suitable for PTT operation since, in this configuration, the switching circuit is independent of the microphone circuit, while in type (A) the microphone circuit is simply shorted.

The microphone cable should be connected as shown in Fig. 13. The cable is provided as an accessory.

6. PREPARATIONS PRIOR TO OPERATION

(1) Positioning the knobs

Connect the power supply, antenna (or a dummy load), and microphone, and set the knobs as follows. Do not attempt to adjust other controls until test operation is over, since they are already adjusted.

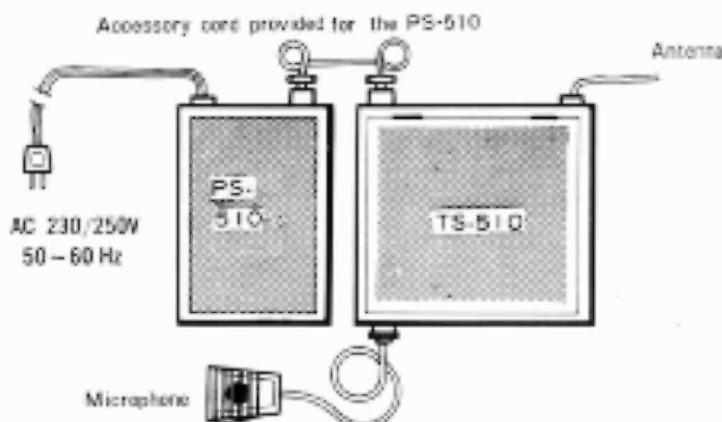


Fig. 10 TS-510 connections

METER — Ip

AGC/CAL — FAST

MODE — USB

PLATE — 21

LOAD — Set it to the extreme counterclockwise position.

DRIVE — Center

RIT — Center

RF GAIN — Set it to the extreme clockwise position.

RIT PULL OFF — Press the RF GAIN knob in the direction of the panel.

AF GAIN — Set it to the power-off position.

BAND — 21

LEVER LOCK SWITCH — Center (REC position)

DIAL — Set the main dial to the desired frequency.

Finally, check to see if the 9-pin miniature plug is firmly plugged into the connecting socket at the rear of the chassis. The VFO will not operate with this plug out.

(2) Reception

Turn the power on by turning the AF GAIN knob to the right. After the neon lamp of the power supply (PS-510) and the pilot lamp of the TS-510 light and the tubes are sufficiently warmed up, a faint internal operating noise can be heard from the speaker.

If an antenna is connected, incoming amateur stations will be received as the dial is slowly turned.

Adjust the DRIVE knob for increased sensitivity. Also check to see that the S-meter is deflecting in accordance with the strength of the received signal.

Reception and transmission of SSB radio signals are found at the lower sideband for frequencies of 7 MHz and below and at the upper sideband for 14 MHz and above. These are based on the international amateur communications agreements. Incorrect tuning will make it impossible to receive SSB stations.

(3) Transmission

Remove the antenna and connect a dummy load in its place. Leave the front panel setting as is (those that delivered maximum output of the signal under the reception test).

After allowing over 3 minutes warm-up from the moment the power switch was turned on, shift the lever lock switch from REC to SEND and confirm that Ip is 60 mA.

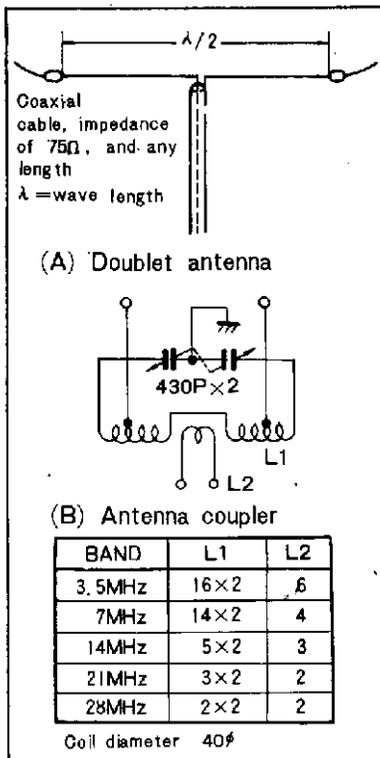


Fig. 11 Antenna coupler

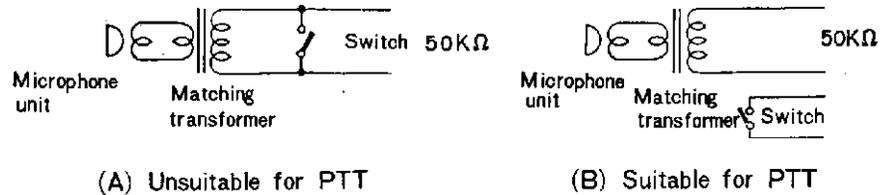


Fig. 12 Microphone with a switch

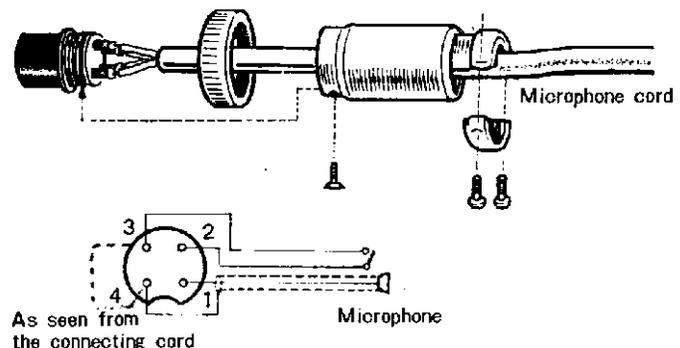


Fig. 13 Microphone cord connections

Switch the MODE from USB to CW. I_p may show a large increase. This indicates that the plate is considerably detuned and the a current as high as 250 mA will flow. If this is the case, quick correction is required by tuning the PLATE knob so that I_p meter deflection is minimum.

If the key is plugged in, there will be no I_p flow and no meter deflection unless the key is removed or depressed.

Now set METER to RF and tune DRIVE for maximum meter deflection. Adjust LOAD knob for further meter deflection. Adjustment of LOAD knob will cause the PLATE adjustment to shift. LOAD and PLATE should be adjusted alternately.

Finally, switch SEND-REC to REC and complete all preparatory adjustments.

These adjustment should be conducted quickly. Leaving the final power tubes (2S001) under full current conditions for more than 10 seconds might damage them. If it proves impossible to complete these adjustments within that period, reset the transceiver to reception and allow more than 10 seconds for the tubes to cool before any attempting adjustment.

7. HOW TO OPERATE THE TRANSCEIVER

Procedures necessary for operation are dealt with in this section. Therefore, simple adjustments are also covered to in this section.

(1) Input Level

Maximum plate current (I_p) for CW operation should be kept at 200 mA maximum. Further increases in I_p will result in damage of the S2001 tubes.

For SSB transmission, MIC GAIN located at the chassis rear should be retarded so that I_p is about 120 mA at its peak. Excessively large input causes distortion which interferes with other amateur communications.

(2) RIT

When RIT is set to "O", the transmitting and receiving frequencies will be identical. Therefore, transmission can be made on the same frequency as the received signal and there is no need of calibration.

The RIT knob is used when it is desired to have a slight separation between the receiving and transmitting frequencies. RIT makes it possible to shift the receive frequency with the transmitting frequency unchanged. The variable range is approximately ± 3 kHz. Separations greater than this require an external VFO.

For example the associated station changes its transmitting frequency tracking it up with the main dial will cause the transmitting frequency of this transceiver to also change. By using the RIT for the change of the associated station, only the receive frequency can be changed with the transmit frequency unchanged.

The RIT knob will not function and the transmit and receive frequencies are automatically set to the same frequency by pulling out RF GAIN and RIT PULL OFF.

If the transmit and receive frequencies happen to become separated with RIT set to the correct position, conduct the following procedure for correction.

Set the RIT knob to "O" and receive the marker signal. Then open the top cover of the case and adjust RIT ZERO ADJ (VR402 10 K Ω) semitfixed potentiometer while turning the RIT PULL OFF knob on and off so that beat produced from the marker signal can be heard at equal frequencies regardless of the setting of the RIT PULL OFF knob. The RIT ZERO ADJ knob is located at the upper right of the AF unit (UC1304J).

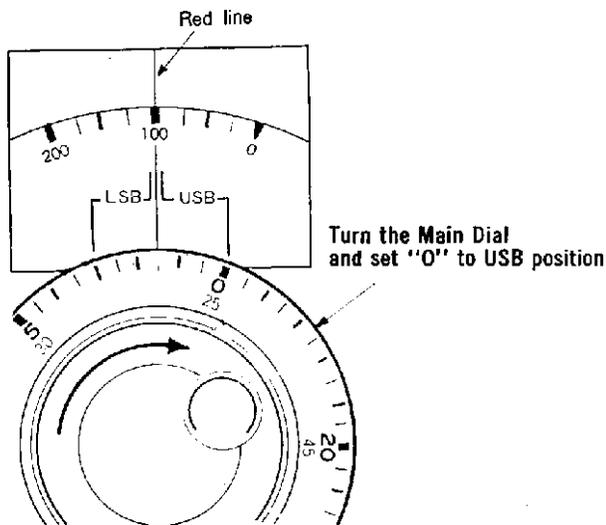


Fig. 14 To Calibrate when MODE switch is turned to the USB position

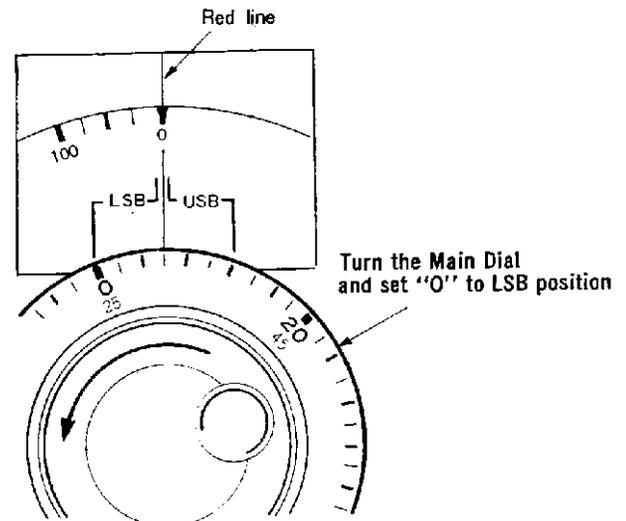


Fig. 15 To Calibrate when MODE switch is turned to the LSB position

(3) VOX

Voice-controlled automatic switching of the transmit and receive modes is possible with this transceiver when SEND-REC is switched from REC to VOX. VOX GAIN control at the top of the chassis should be retarded when the surrounding noise level is high. Changes in supply voltage may sometimes cause sluggish relay action. In such a case, modify the supply voltage to 230V or 250V.

A anti-trip circuit is built-in to prevent speaker response from tripping the relay, and switching the transceiver from the receiving to the transmitting mode. The ANTI-TRIP control located at the top of the chassis should be adjusted so that tripping will not occur. It is undesirable, however, to reduce VOX gain too much since this will result in unreliable tripping. Therefore, the microphone and speaker should be located away from each other and the speaker volume level be kept as low as possible.

TIME CONSTANT controls the discharge time constant of the VOX circuit and regulates the tripping frequency of the relay, which takes place during pauses between speech and vary from individual to individual. Therefore, adjust the time constant to a value which suits the operator. VOX sensitivity can be adjusted with semifixed potentiometer VR601 500 K Ω (VOX SENSE) located on printed circuit board UC1501J.

Use of a uni-directional microphone will make VOX operation even more reliable.

(4) Main Dial Calibration

Calibration of the main dial may be easily performed by setting the zero position of the main dial to the zero of the auxiliary dial plate. For more accuracy, however, the marker signal and calibrator can be used. In this case, set the AGC/CAL knob to 25 kHz and produce a beat with the marker signal. A beat will appear at different frequencies depending upon whether the transceiver is set to LSB or USB.

(a) When the MODE switch is set to USB

Turn the main dial knob clockwise while listening to the beat. The beat frequency will be high at first and then gradually decrease as the main dial is rotated until it become nil. Stop the dial at this zero beat point and set the zero position of the main dial scale to the USB pointer. (Refer Fig. 14)

(b) When the MODE switch is set to LSB

Turn the main dial counterclockwise or the reverse of USB. The beat is similarly high at the beginning, decreases as the dial is turned, and eventually becomes zero.

Calibration procedure is identical to that of USB except that the dial should be set to the LSB pointer (Refer to Fig. 15).

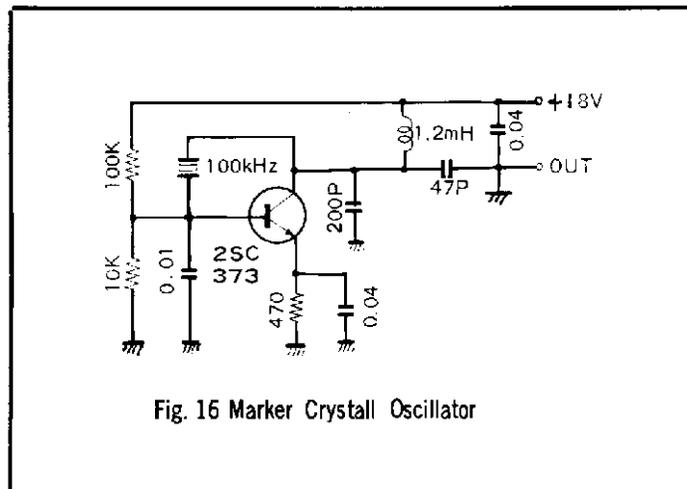


Fig. 16 Marker Crystall Oscillator

Thus, the carrier frequency of both lower and upper sidebands can be read on the dial.

The center frequency of SSB signals is always read at the red pointer. The receive frequency of CW signals can also be read in the same method as for LSB signals. The transmit frequency is always 800 Hz higher than the LSB carrier.

When the CW filter is used, this frequency relationship will change and transmit frequencies can be read at the red point. Receive frequencies can be read by the red pointer when the beat is 700 Hz and will be within ± 250 Hz at other best frequencies.

(5) Marker Crystal and Adjustments

The marker crystal is not provided and must be purchased separately. Its specifications are as follows.

Type: HC-13/U

Frequency: 100 kHz

Frequency tolerance: $\pm 0.003\%$

Specified oscillation circuit: See Fig. 16.

The marker oscillator circuit with this transceiver is already adjusted. The crystal will oscillate by merely setting the AGC/CAL knob to 25 kHz and inserting the crystal into the socket. However, it may oscillate at a frequency other than 25 kHz when the power source voltage fluctuates.

If this happens, adjust MULTI ADJ (VR701) located on printed circuit board UC1502J inside the chassis so that the oscillation is 25 kHz.

The 25 kHz multivibrator is synchronized with the 100 kHz crystal oscillator. Therefore, it is necessary to match the crystal oscillation to 100 kHz. This adjustment can be accomplished with the ceramic trimmer (TC701).

(6) Remote VFO

The Model VFO-5D is supplied by the manufacturer for use with the TS-510. This is externally connected to the transceiver.

Its major circuitry is identical to the internal VFO in the TS-510. The remote VFO enhances the versatility of the TS-510 when used in conjunction with the built-in VFO.

One of the added features is that the two VFO's enable the transceiver to serve as an independent receiver and transmitter. The external VFO permits any amount of separation when desiring to separate the receive and transmit frequencies, while the RIT, which also makes it possible to separate the frequencies, but permits only a slight value and within the same band. Either of the VFO's can be used for receive or transmission. This is extremely useful in actual operation.

The second feature is that the remote VFO can be controlled by a crystal, which finds use in such cases as joining a round QSO or calling or receiving a station on schedule where no frequency drift is allowed.

The third feature is that it permits reproduction of the frequency used in the previous QSO. This can be accomplished by turning the AGC/CAL switch to VFO, and taking a zero beat between the internal VFO and the remote VFO. Thus, either the remote or internal VFO can be set to the frequency, without any human error.

The remote VFO also contains an RIT circuit.

Calibration of the remote VFO with the built-in VFO can be accomplished by turning the AGC/CAL switch to VFO and the RF gain counterclockwise. A beat tone can be heard from the speaker as the frequencies of the two VFO's approach each other. This beat is a double beat produced by the two VFO's and can be immediately identified from the other type of beat, a signal beat. Adjust the dial until zero beat is obtained. This indicates that one VFO frequency is identical to the other. Transmission is impossible when the AGC/CAL switch is set to VFO.

(7) S-meter

The S-meter indicates S9 at an input of 40 dB and increases one graduation for every 3 dB. Zero point error can be adjusted in the following manner. Disconnect the antenna from the transceiver and turn the S-METER potentiometer at the rear of the chassis. Note that the pointer of the S-meter should not be set to the zero point of the S-graduations but to the zero point of the I_p scale. A diode is inserted to prevent reverse swinging of the pointer. Therefore, to take correct readings of signal strength, the point should be correctly set to the zero point of the I_p scale.

(8) RF Meter

The RF meter reads the transmitted RF voltage. Deflection may vary with the type of antenna used. Adjust with the RF METER potentiometer (located at the rear of the chassis) so that it does not swing off the scale even with the greatest swing among the bands.

(9) Adjustment of Bias Voltage

The necessity of adjusting the bias voltage arises

when the transmitting tubes are replaced. Adjustment can be accomplished by means of the BIAS potentiometer at the rear of the chassis.

To adjust, set the MODE switch to LSB or USB and disconnect the microphone from the jack. In this state, set I_p to 60 mA (or 30 mA per tube).

(10) Side Tone

The magnitude of the side tone varies with operating conditions and a comfortable magnitude may differ from individual to individual.

To adjust, use semifixed resistor S TONE LEVEL (VR401) on printed circuit board UC1304J (AF block).

(11) ALC Meter

The meter set to ALC may swing off the scale when the input is excessively large. With the meter pointer staying within the black zone indicated as ALC, distortion is minimum and so is splutter. A suppression of approximately 6 dB is obtained with the pointer at the maximum limit of ALC.

When the ALC meter goes beyond the black zone, the transmitted SSB signal will appear distorted. Therefore, it is necessary to keep the ALC meter within the zone during SSB transmission.

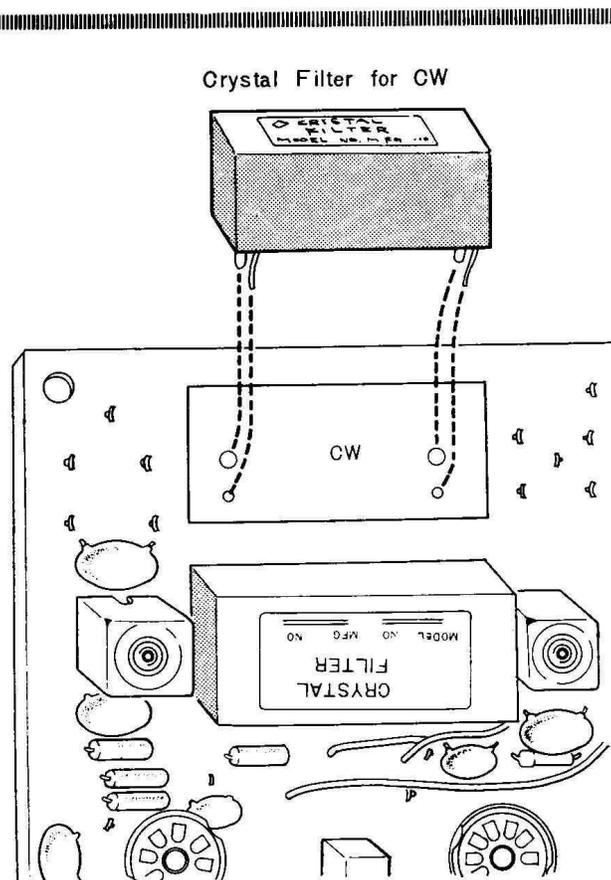


Fig. 17 Installing the CW Crystall Filter

ACCESSORIES CIRCUIT

1. INSTALLATION OF THE CW CRYSTAL FILTER

The CW crystal filter consists of

- | | |
|--------------------------|---|
| (1) Crystal filter | 1 |
| (2) Crystal (3395.0 kHz) | 1 |
| (3) Diode (1N60) | 4 |
| (4) Instruction manual | 1 |

(1) Installing the crystal filter

The SSB crystal filter is located on printed circuit board UC1204J (IF unit). There are four holes next to the SSB filter. Install the CW filter into these holes as shown in Fig. 17.

(2) Installing the crystal (3395.0 kHz)

Refer to Fig. 18 and install the crystal in the following manner. Look into the back of the chassis. There is a printed circuit board (UC1405J), which is the carrier oscillator unit, in the back of the output transformer. There are three crystals mounted on this printed circuit board. Remove crystal X002 (3394.3 kHz, housed in the crystal holder) and change it to the space holder (X004).

Insert the 3395.0 kHz crystal into socket X002.

Terminals XL and XCR are shunted with a 0.8 mm tinned jumper wire. Cut this jumper wire with a cutter.

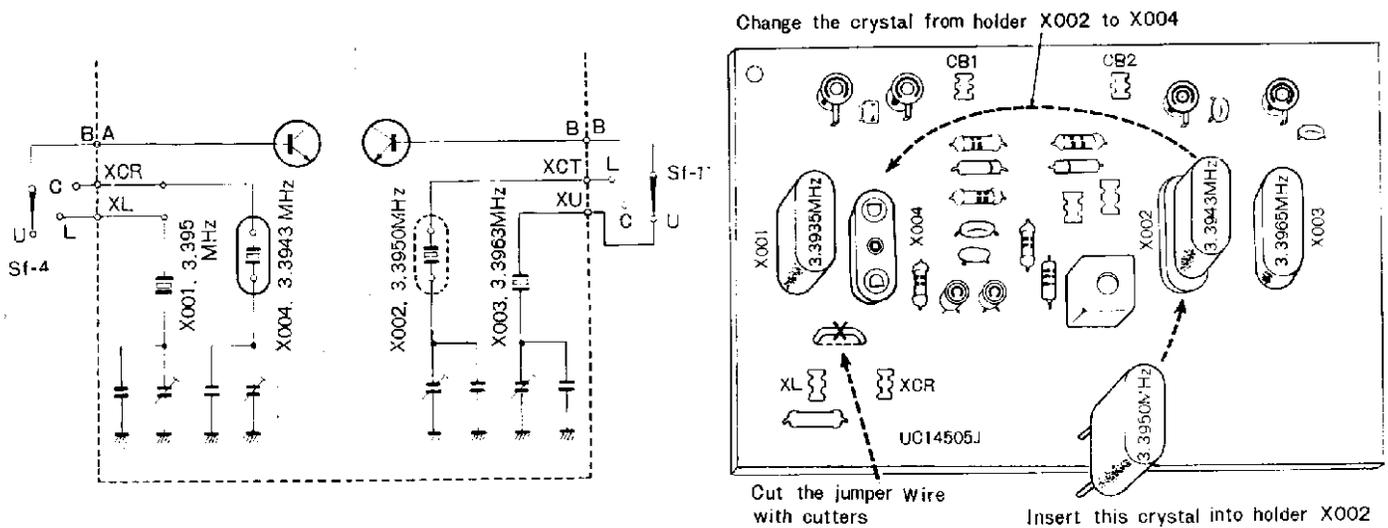


Fig. 18 Installing the crystal

(3) Installing Diodes (1N60 × 4)

Remove the four screws from the diode switch unit (UC1209J) located between the IF printed circuit board and the carrier oscillator printed circuit board, cut the two jumper wires at the places indicated in Fig. 19, and install the four diodes.

Do not remove the jumper wires with excessive force since this might damage the printed circuits or the board.

This completes the installation of the CW filter. Enjoy CW operation.

2. HOW TO USE THE EXT SWITCH

Remove the blank plate below designation EXT SW at the rear of the chassis.

Install double-pole double-throw slide switch in this hole, the same as the ANT SW.

This switch may be used in various ways. One example is to take the output of this transceiver for a 50 MHz converter from the REC ANT terminals. In this case, the final power tube circuit is switched open by this slide switch. The circuit is shown in Fig. 20.

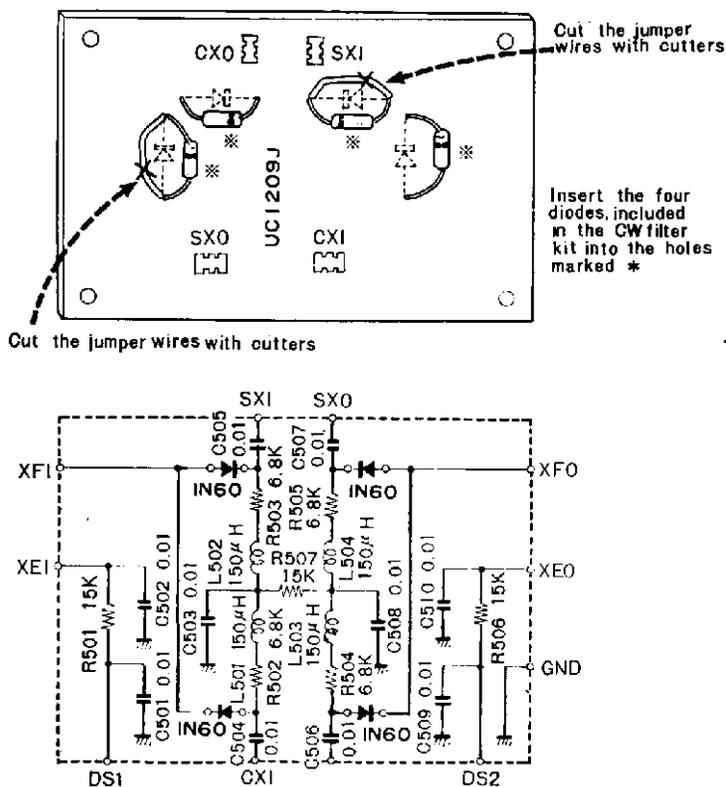


Fig. 19 Installing the diodes

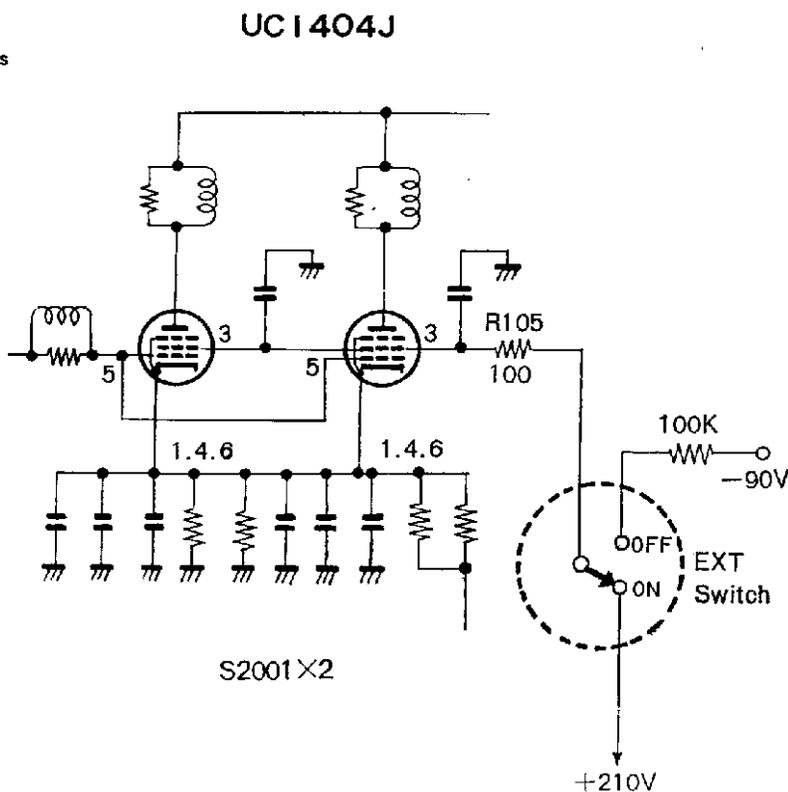


Fig. 20 Example use of the EXT switch

ALIGNMENT AND MAINTENANCE

Be Careful of High Voltages!

Some of the TS-510 circuits have extremely high voltages. Adequate precaution is required to avoid accidents.

The TS-510 is completely adjusted and requires no additional adjustments except that, after a long period of use, the tuning circuits may become misaligned. Readjustment should be made every two or three years. Thus, the transceiver can be maintained at its peak capability.

Table 4, lists the values of the DC voltages of the individual circuits operating under normal conditions. The use of a vacuum tube voltmeter with an input impedance of more than 5 MΩ is recommended for measurements of these circuits. Many good measuring instruments are required for good adjustments. However, here might be a limit to the kind and number of measuring instruments accessible to an individual. Therefore, adjusting methods which can be done with a simple multimeter are presented here. When adjustments prove to be beyond the capability of the available test equipment or difficult troubles occur, your repair shop will handle them for you at costs.

Table 4 Voltage at Individual Electrodes

(Vacuum tubes)

Pin No.		1	2	3	4	5	6	7	8	9	P
V101	T	1.05		200	Same as 1	-50	Same as 1				830
S 2001	R	0.05	(6.3)	210		-65		(12.6)			950
V102	T	1.05		200	Same as 1	-50	Same as 1				830
S 2001	R	0.05	(0)	210		-65		(6.3)			950
V201	T	0	-8	120	(12.6)	(6.3)	4.6	0	150	285	
6AW8A	R	0	-9	120			0	-28	150	300	
V202	T	3	0	0	(12.6)	(12.6)	(6.3)	290	150	0	
12BY7A	R	0	-29	0				300	150	0	
V203	T	-27	0	(6.3)	(12.6)	150	150	0			
6CB6	R	0	1.7			145	65	0			
V204	T	0	150	(0)	(6.3)	290	150	0			
6BZ6	R	0	1.1			300	80	0			
V301	T	-3.1	0	(6.3)	(12.6)	140	140	0.8			
6BA6	R	0	0			130	130	1.8			
V302	T	75	0	90	(12.6)	(6.3)	150	2.5	0.8	0	
6GH8A	R	230	-28	150		150	150	-19	7	0	
V303	T	-55	-27	(6.3)	(0)	150	150	0			
6CB6	R	0	2			150	85	0			
V304	T	0	0	(0)	(6.3)	150	150	230			
6BA6	R	0	0			130	130	1.3			
V401	T	50	14.0	0	(6.3)	(0)	200	200	0	150	
6BM8	R	0	14.0	0			220	207	1.3	90	
V601	T	150	0	13	(0)	(6.3)	27	0.5	48	30	
6GH8A	R	150	0	13			47	0.5	48	30	
V602	T	-3	0	(12.6)	(6.3)	150	140	6			
6BA6	R	0	0			150	150	39			
V603	T	150	0	45	(6.3)	(0)	60	1.3	3.5	0	
6GH8A	R	150	0	45			60	1.3	0	-29	

(Transistors)

		E	C	B
Q101	T	-50	-4	-50
2SC856	R	-65	0	-65
Q001	T	0	18	-9
C373	R	3	18	3.2
Q002	T	2.9	18	+3.2
C373	R	0	18	-2.8
Q301	T	0.85	18	1.4
C373	R			
Q302	T	-27	-0.12	-28
C373	R			
Q401	T	0.35	10.5	0.9
C373	R			
Q701	T	0.25	18	0.85
C373	R			
Q702	T	0	2.3	-1.0
C373	R			
Q703	T	0	8.1	-2.8
C373	R			
Q704	T	0	4.0	-1.5
C373	R			

1. * (A): MODE switch - CW
 * (B): AGC/CAL switch - 25kHz
 T: At maximum transmit power
 R: In the absence of receive signals
 (): Indicates AC voltages

Such units as the VFO, crystal filter, BPF, etc., require elaborate knowledge and technique to adjust, and malfunction resulting from careless adjustments will not be taken care of by the manufacturer.

1. RECEIVER SECTION

(1) Carrier oscillator (UC1405J) Refer to Fig. 21.

Adjustments of this unit are those of the oscillation (BFO) and frequency. Slowly turn the slug of the oscillation transformer (T001) clockwise. The oscillation will stop as it is turned. This is known from that the internal operating noise disappears. Back up about one half of a turn to the point where oscillation starts. Carry out this adjustment at LSB.

Oscillation frequency adjustment is made with the trimmer (TC002, 003, and 004) inserted in series with the crystal. For accurate adjustment, a frequency counter is required. However, adjustment may be made with a stable signal generator or marker oscillator and by once setting the s-meter to a deflection of S9 and then turning the dial back to a meter indication of S2, at which point the trimmer (TC003 and 004) should be adjusted to obtain a zero beat.



(2) IF stage (UC1204J) Refer to Fig. 22.

This unit has four large IFT's and four small IFT's. Two IFT's (L301 and L308) for the crystal filter small IFT's (L304, L305, L306, and L307) need not be adjusted.

Receive a stable signal and adjust the cores of L303 and L309 slowly with the accessory hex screwdriver so that the s-meter reads maximum deflection. L303 is a dual tuned type and is adjusted at the top and bottom of the chassis.

(3) Heterodyne crystal oscillator (UC1110J) Refer to Fig. 23.

Adjust the core of the crystal oscillator nearest the panel in the coil pack.

Use the hex screwdriver to turn the core. Set the screwdriver perpendicular to avoid damaging the core which breaks easily.

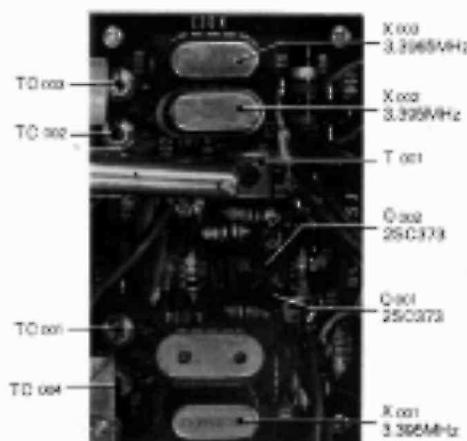


Fig. 21 Carrier Unit

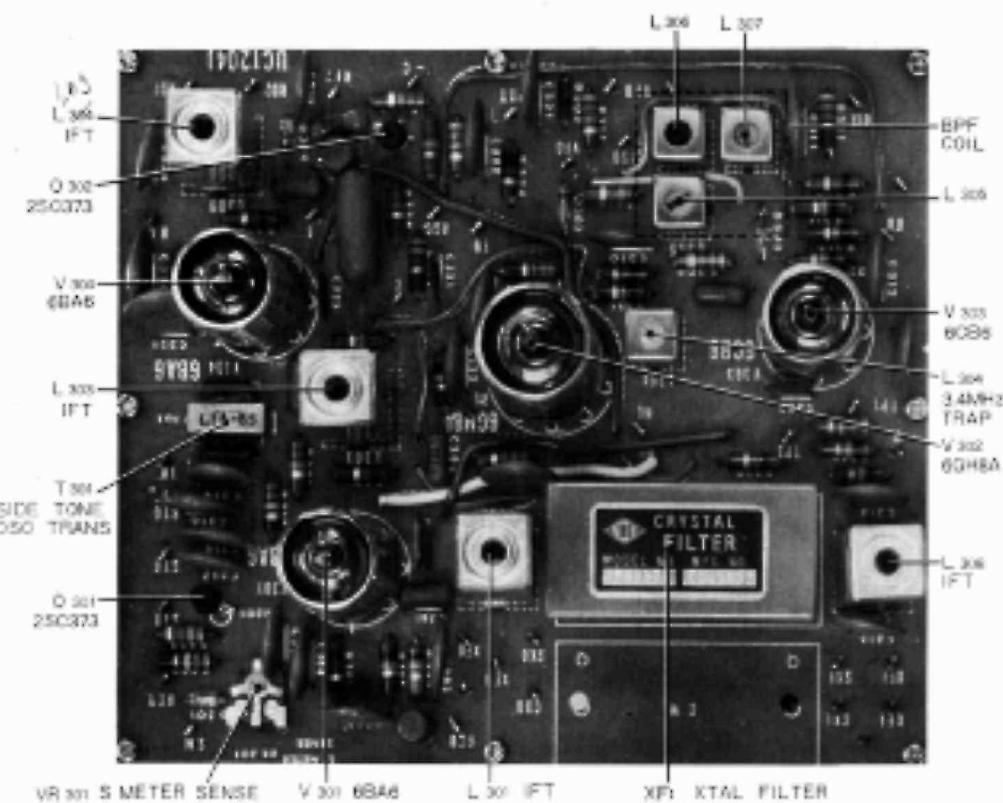


Fig. 22 IF Block



The oscillation will stop as the core is turned clockwise. Stoppage is known from disappearance of the internal noise. Back up the core about one half of a rotation to the point where oscillation starts. Oscillation will be unstable if the core is set to a point close to a critical point of oscillation.

Conduct the same adjustment for all the bands. In the 28 MHz band, adjust only the 28 MHz band. The 28.5 MHz and 29.1 MHz bands need not be adjusted.

The coil pack cover need not be removed during this adjustment.

(4) Drive (RF) tuning circuit (UC1108J and 1109J) Refer to Fig. 23.

The drive grid tuning core is located in the center of the coil pack. The drive plate tuning core is on the final power tube side. Receive a stable signal (of a marker, signal generator, etc.) at the center of the bands (3.75 MHz, 7.15 MHz, 14.175 MHz, 21.225 MHz, and 28.8 MHz), and set the drive variable capacitor to the 12 o'clock position. Switch the band switch to 3.5, 28, 21, 14, and then to 7 MHz while observing the s-meter. Adjust the core of the drive plate and drive grid coils.

The coils of this stage are connected in series and parallel. Set the frequencies to within ± 25 kHz. Otherwise, all bands cannot be tuned.

The cores are fragile. Do not apply excessively force, and set the tool perpendicularly on the core to avoid breakage.

(5) 8.6 MHz Trap

This coil is laid on its side between the coil pack and the final power tubes.

Connect a strong signal (greater than 100 dB/ μ V) with a frequency of 8.6 MHz to the antenna terminals, receive it at about 14.3 MHz to produce a beat with it, and adjust the core so that the beat is minimized.

2. TRANSMITTER SECTION

(1) Carrier balance and carrier level (UC1501J) Refer to Fig. 24.

Connect a dummy load to the antenna terminal, turn the knob with the transceiver set to the 14 MHz band, and tune the individual stages. This adjustment should be carried out quickly and completed before the plate of the S2001 tubes are heated red.

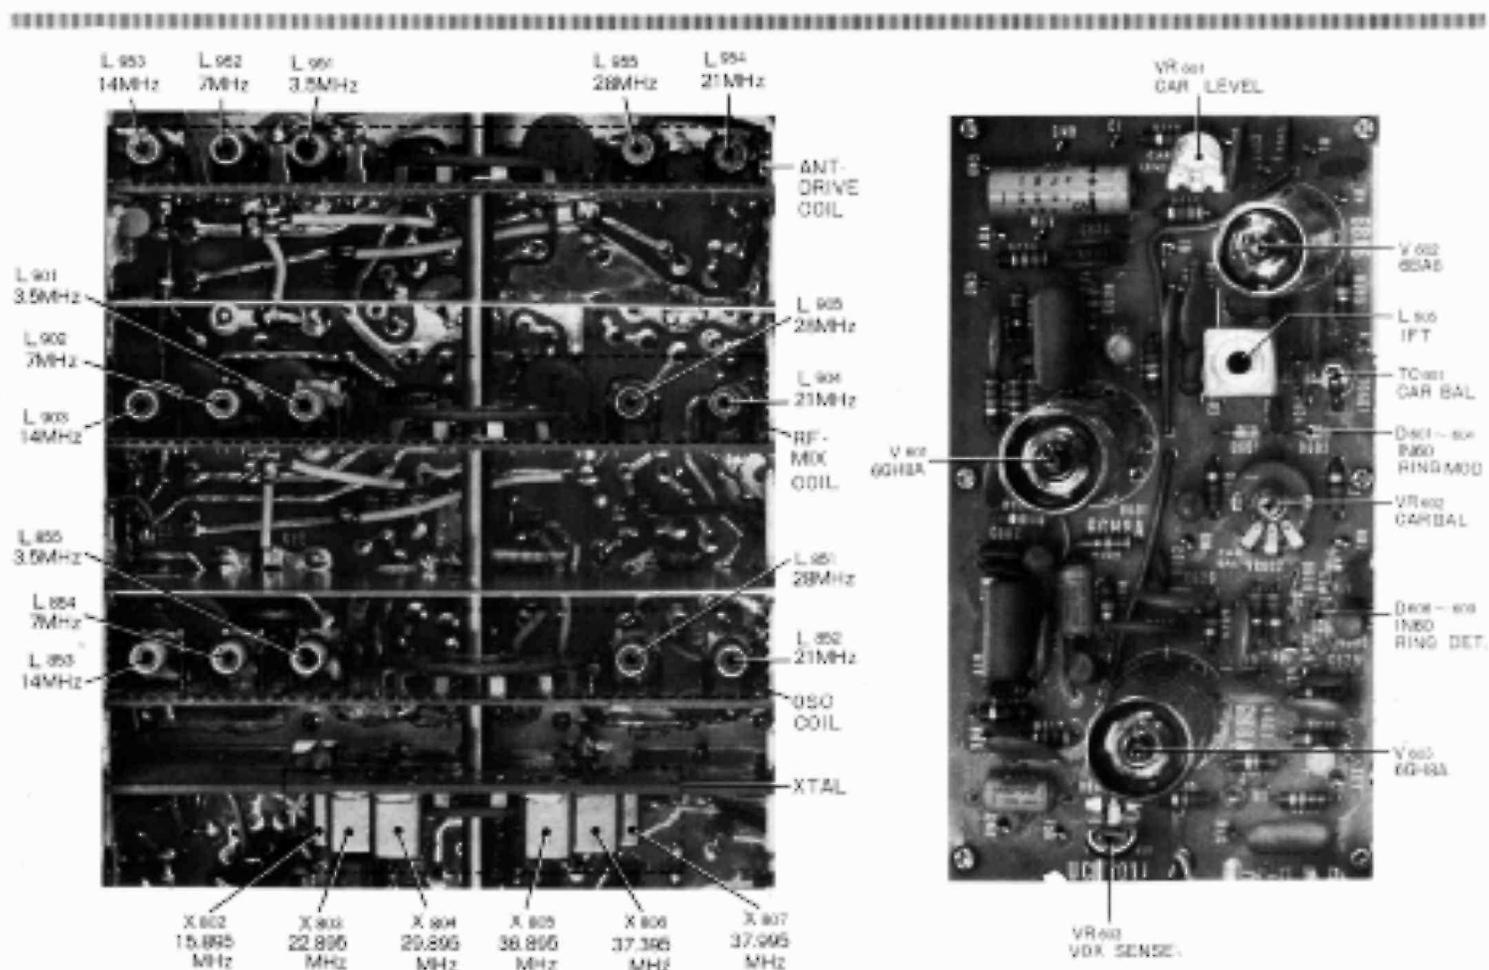


Fig. 23 Coil Pack

Fig. 24 BM Block

Now adjust the carrier level adjust VR (VR601) on the BM block so that the ALC voltage becomes approximately 200 mA on the Ip scale.

Switch the MODE to LSB and set the RF voltmeter to its maximum sensitivity. The voltmeter will deflect if the circuit is out of balance. The MIC GAIN VR should be set to its minimum value during this adjustment.

To balance the carrier, alternately adjust the trimmers (TC601) and VR (VR602) on the BM block. Then switch the MODE to USB and readjust so that the same amount of carrier suppression is obtained at both LSB and USB.

(2) Neutralization of final power amplifier stage

Tune the driving and final power stages with the MODE set to CW (28 MHz).

Remove the voltage from the screen grid and anode of the S2001 tubes, and measure the output at the antenna terminal with a high sensitivity voltmeter. Adjust the neutralizing capacitor (TC1, attached to the final power tube shielding box) so that the output is minimized. A receiver which is capable of receiving the 28 MHz band can be used in place of a high sensitivity voltmeter.

Remove the high voltage from the screen grid and anode before disconnecting the wiring.

3. TROUBLES RESULTING FROM MALADJUSTMENT

(1) Carrier oscillator

The transmit output will not be delivered when the oscillation stops. Nor is a beat produced during reception. Therefore, SSB and CW cannot be received.

Carrier frequency changes may result in a double beat, higher reproduced SSB tone, or reduced output if the CW filter is used but not tuned exactly to 3395.0 kHz.

(2) IF stage and coil pack

Receive sensitivity and transmit output drop. Malfunctioning of the crystal heterodyne oscillator makes transmit driving and reception of the amateur bands impossible.

(3) 8.6 MHz trap

Trouble appears as interference in the receive 1st IF frequency (8.895 ~ 8.295 MHz) at the 7 MHz band.

(4) Carrier balance

The RF voltmeter does not return to the zero position even in the absence of an SSB signal. This can be observed when all the stages are finely tuned and the set is in the CW mode. If this signal is received the carrier cannot be received.

(5) Neutralization of the final stage

Abnormal oscillation occurs at the final tubes, Ip current of greater than 60 mA flows in the absence of SSB input, or the SSB signal is distorted, resulting in increased splutter.

(6) VOX

Relay do not operate even in the presense of an AF input, do not open in the absence of an RF input, or operation is delayed.

(7) RIT

Tuning the transmit frequency to that of the associated station becomes impossible.

(8) Balance with the final stage

The plate dissipation of the S2001 tubes increases and the service life of the tubes is shortened or distortion and hence splutter increases.

(9) S-meter

If the zero point is on the negative side of the scale, deflection will become sluggish or in the worst case it does not deflect at all.

(10) Drop power source voltage

Receive sensitivity and transmit output decrease. Caution is necessary when there are large line voltage fluctuations.

Voltage drop of the 150 V line of the voltage regulated power supply in the PS-510 also appears as the identical trouble. When it goes higher, the service life of the vacuum tubes will be reduced.

4. MAINTENANCE

(1) Removal of the case

Top cover: The top cover can be removed in the upward direction by removing the two black screws on top and the four large and small decorative screws on each (right and Left) side.

Bottom cover: The bottom cover can be removed by removing the nine screws from the bottom of the chassis. The Hyzex legs need not be removed, as they are not connected to the chassis.

A Phillips screwdriver must be used to remove the screws, while a coil may be used for the decorative screws.

Prepare a container in which the (removed) screws may be kept, to avoid misplacement.

(2) Vacuum tubes and transistors

Do not use the S2001 tubes under a voltage of higher than 1000 volts or under detuned conditions since the will increase plate dissipation beyond the rated value and hence reduce their service life.

When replacing vacuum tubes, use a tube from the same manufacturer, if possible.

Avoid use of a second hand tubes, which might result in unexpected troubles.

Even the simplest shortage in the printed circuits can damage the transistors. Take adequate care when checking on them.

(3) Resistors and capacitors

Resistors, when defective, may be replaced with those having a value of $\pm 10\%$. For example, a 330Ω resistor may be replaced with a 300Ω resistor.

The same applies to replacement of capacitors, except for consideration of their working voltage.

Capacitors used with the vacuum tubes are almost always 500 WV unless otherwise indicated.

(4) Dial gear

Apply machine oil to the dual gears and bearings after removing any dust. Lubrication interval is once a year.

(5) Pilot lamps

There are two pilot lamps with a voltage rating of 15V. Use a swan base type.

(6) Dirt and dust

The knobs will be come oxidized or contaminated with fingerprints after long use. Remove them and clean with a neutral cleaner. Cleaning will add to the operating pleasure.

The panel is exposed to dust and dirt and has minute corrugations, which collect dust. Clean it with a piece of soft cloth.

The interior also accumulates dust over a period of time. Dust is a good media to impair insulation, causing troubles. Remove it with an electric cleaner every six months.

(7) Troubles


There is no limit to the type of troubles. A visit your dealers for correction of troubles, especially in the VFO, BPF, or crystal filters, whenever they prove to be beyond the coverage of the instruction book is recommended.

BE CAREFUL OF THE HIGH VOLTAGES !


The S2001 power tubes normally have a voltage of higher than 800V. When checking the interior of the final tube shield box for example, be sure to remove the high voltage by disconnecting the power plug and discharging the residual voltage by shunting with a screwdriver, etc.

BE CAREFUL OF THE HIGH VOLTAGES !

CHASSIS TOP VIEW

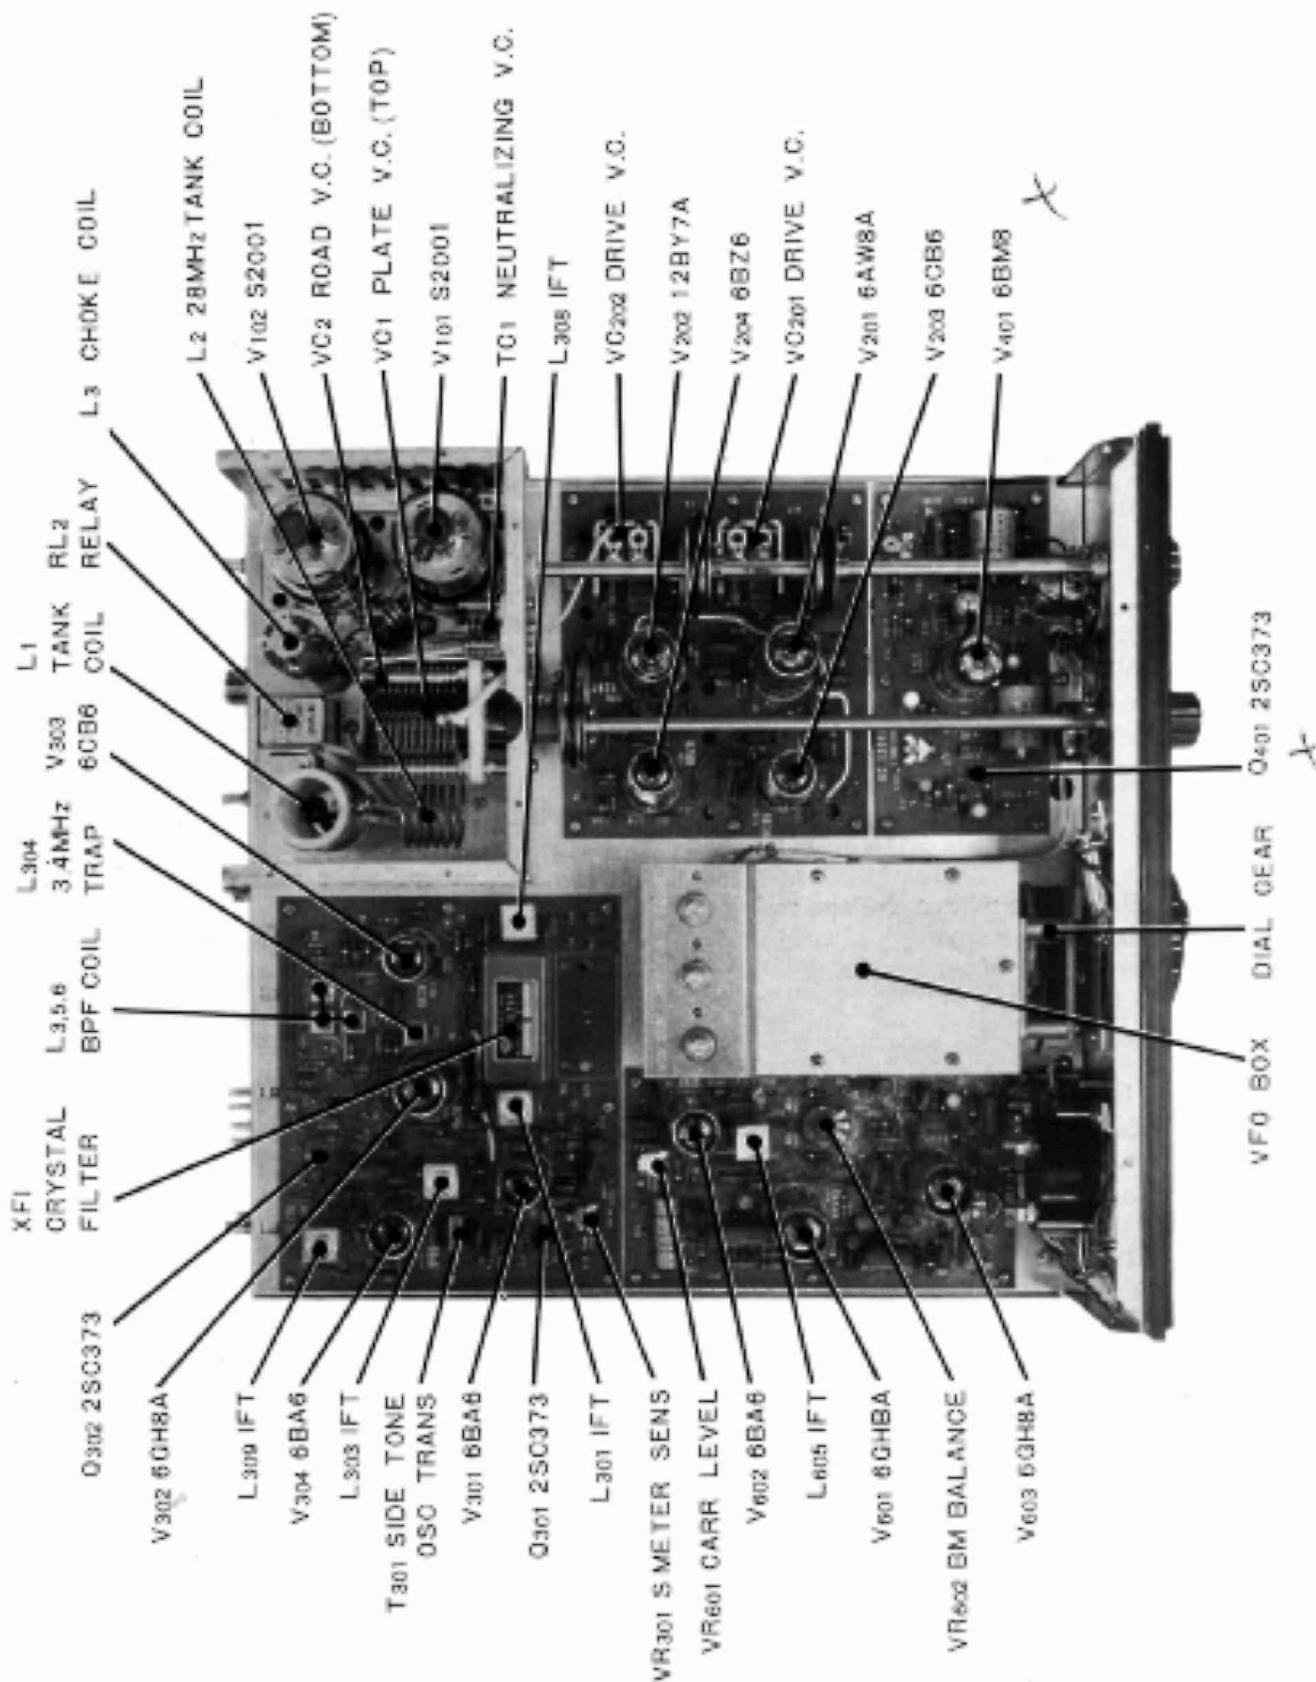

■ CHASSIS BOTTOM VIEW

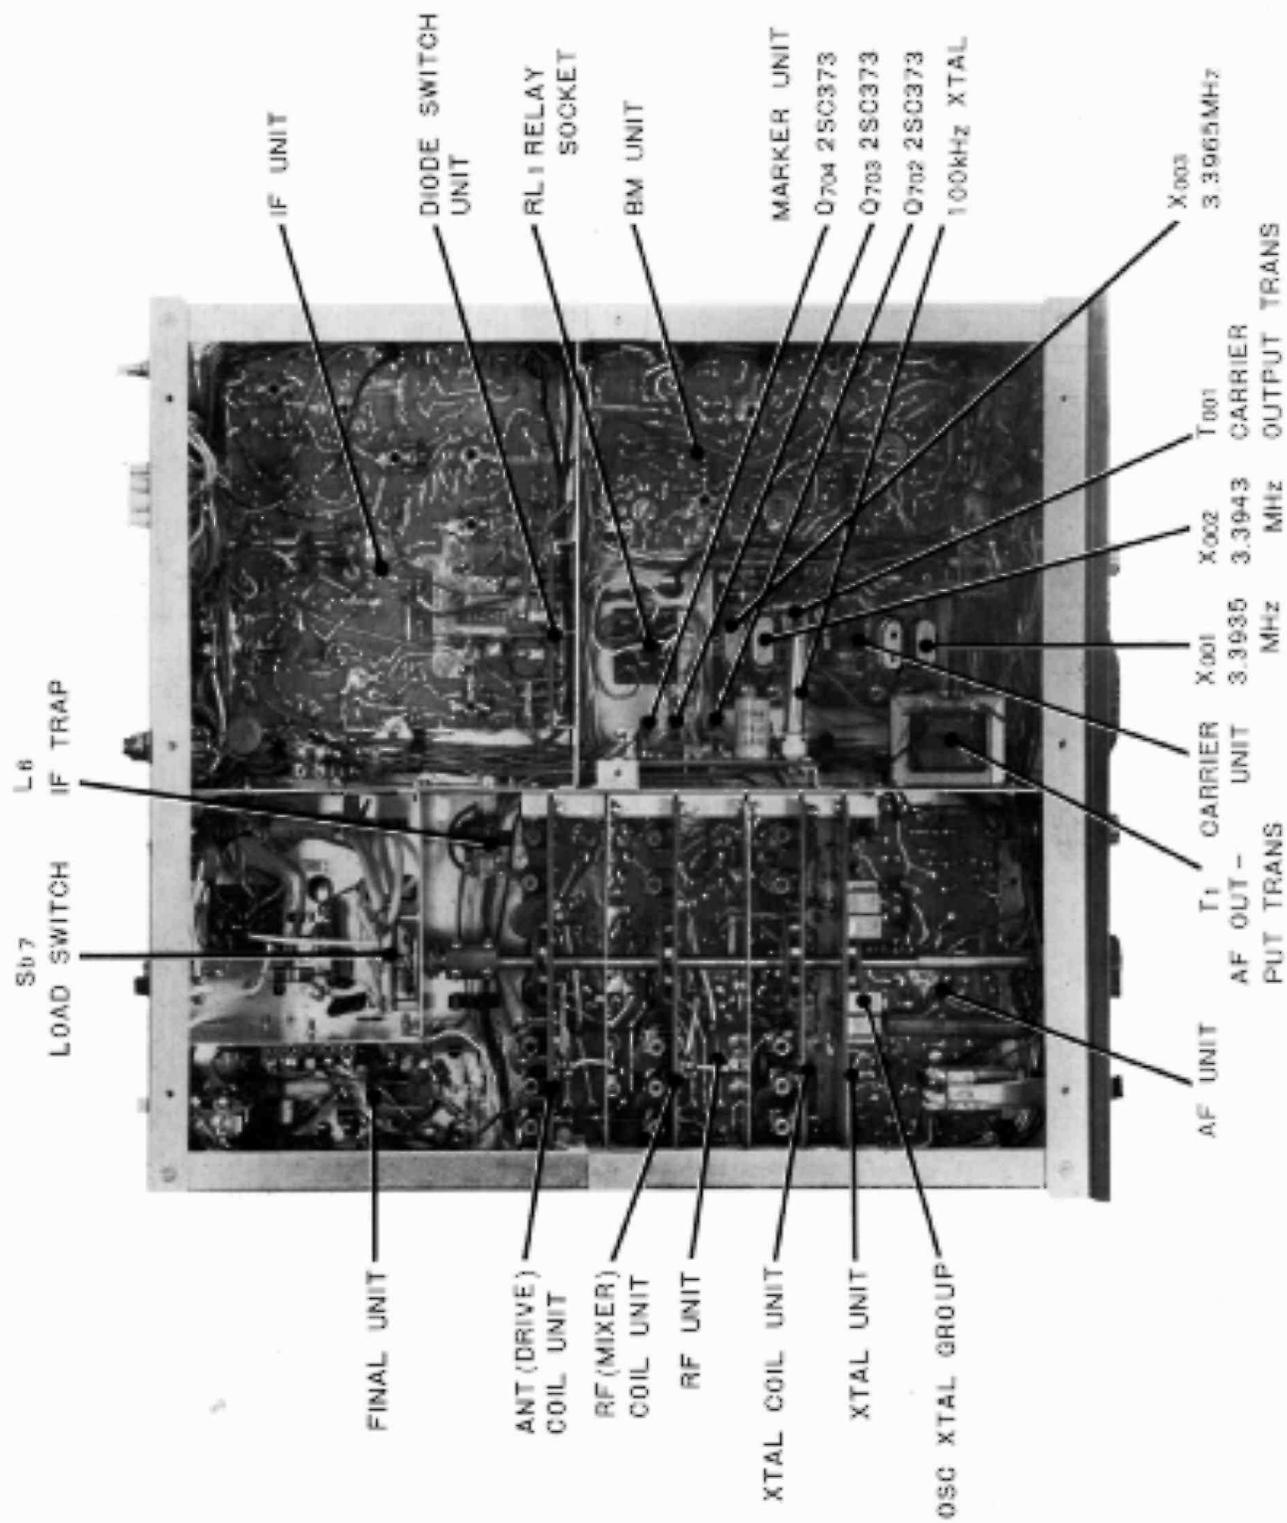

SPECIFICATIONS

RECEIVE AND TRANSMIT FREQUENCIES:	80 meter band 3.5 ~ 4.000 MHz 40 meter band 7.0 ~ 7.300 MHz 20 meter band 14.0 ~ 14.35 MHz 15 meter band 21.0 ~ 21.45 MHz 10 meter band A 28.0 ~ 28.5 MHz B 28.5 ~ 29.1 MHz C 29.1 ~ 29.7 MHz
TYPE OF EMISSION:	SSB (A3J), CW (A1)
RATED INPUT TO FINAL STAGE:	160 W at 3.5 ~ 21 MHz 120 W at 28 MHz
ANTENNA INPUT IMPEDANCE:	50 ~ 75 Ω
CARRIER SUPPRESSION:	Less than -40 dB
SIDEBAND SUPPRESSION:	Less than -40 dB
MICROPHONE IMPEDANCE:	50 K Ω (high impedance)
TRANSMIT FREQUENCY CHARACTERISTIC:	300 ~ 2700 Hz (-6 dB)
RADIATION OF UNWANTED COMPONENTS:	Less than -50 dB
RECEIVE SENSITIVITY:	0.5 μ V, S/N ratio of 10 dB at 3.5 ~ 21 MHz 1.5 μ V, S/N ratio of 10 dB at 28 MHz
IMAGE RATIO:	More than 50 dB
IF INTERFERENCE:	More than 50 dB
FREQUENCY STABILITY:	Within +2 kHz 60 minutes after the power switch is turned on. Within 100 Hz after 30 minutes.
SELECTIVITY:	SSB: More than ± 1.2 kHz (at -6 dB) Less than ± 2.4 kHz (at -60 dB) CW: More than ± 250 Hz (-6 dB) Less than ± 750 Hz (at -60 dB) Note: Selectivity values in the CW mode applies to a transceiver with the CW filter used.
AF OUTPUT:	More than 1 watts (with 10% distortion)
RECEIVER OUTPUT IMPEDANCE:	8 Ω for both speaker and headphones
POWER CONSUMPTION:	315 watts at maximum output of reception (When the PS-510 is used)
VACUUM TUBES AND TRANSISTORS:	14 vacuum tubes, 2 FET's, 13 transistors, and 29 diodes
DIMENSIONS:	330 (W) \times 180 (H) \times 345 (D) mm (13" W, 7" H, 13 $\frac{5}{8}$ " D)
WEIGHT:	9.5 kg (20.9 lbs)

65K6

6C86



ALL BAND SSB TRANSCEIVER

TS-510



OPERATING MANUAL

SPECIAL FEATURES

1. Designed as an A.C. power supply unit exclusively for the SSB transceiver TS-510.
2. 6½" communication speaker is incorporated.
3. Provided with a power supply cord for connection with the transceiver.
4. A.C. power supply switch is attached to the transceiver, providing a great convenience for the operator. When no space is available, the PS-510 can be placed under the table on which the transceiver is installed.
5. For a high voltage current, silicon rectifiers are in use, and the unique design of the stabilized power supply system assures greater stability.
6. Special design consideration is given so as to match the TS-510 transceiver.

CIRCUIT DESCRIPTION

AC LINE

The A.C. line of the power transformer primary winding employs filters of the π type, thereby preventing the possible emission of undesired electric waves from the power supply line.

800-VOLT LINE

For the 800-volt current, a silicon voltage doubler rectifier circuit is used. To withstand the peak-inverse voltages involved, silicon rectifiers in pairs are placed in series. Resistors of high magnitude, arranged in parallel to the silicon rectifier and chemical condenser, serve to avoid an overload resulting from the imbalance of voltages.



CIRCUIT DESCRIPTION

300-VOLT LINE

To minimize variations and ripple in the line, a silicon bridge rectifier circuit and chalk input system are employed for the 300-volt B line.

210-VOLT LINE

Resistors are placed in series between the 300-volt line and the 210-volt line for the purpose of dropping the voltage.

150-VOLT LINE

If the 150-volt line voltage drops due to a variation of load, the grid voltage on the triod side of V_{201} 6BM8 will also drop. This causes the plate current to decrease, since the cathod voltage is fixed.

When the plate current decreases, the voltage drop across the R_{201} 470 $K\Omega$ becomes less, while the plate voltage tends to rise. Accordingly, the grid bias on the pentode side of 6BM8 tends to decrease, thereby stabilizing the 150-volt output at the operating point. This output voltage can be varied by adjusting the VR_1 half-fixed resistor.

(-) C LINE FOR BIAS

The half-wave current is supplied to the (-) C line for the bias through a silicon diode.

12.6-VOLT LINE

To supply heater voltages, the power transformer has two 12.6-volt secondary windings; that is, one for the final S2001 \times 2 line exclusively for the transceiver and the other for other vacuum tubes. Taking into consideration a possible voltage drop at the power supply cord between the PS-510 and the TS-510, the transformer is provided with two 13.5-volt windings.

6.3-VOLT LINE

A 6.3-volt winding is used for heating the 6BM8. To prevent the breakage of the insulation between the cathode heaters, this winding is applied with a voltage of + 150 V.

SPEAKER TERMINALS

The power supply jack incorporates speaker line terminals. The on-off power switch is attached to the transceiver. Part of the lead wire to the transformer primary winding is connected with the power supply socket. This enables the operator to turn on or off the machine from the transceiver side.

1. Accessories

The PS-510 is furnished with the following accessories.

Power supply connecting cord - 2m	1
(with plug and jack)	
Hyzex legs	2
Fuse (8A)	1
Operation Manual	1

2. Connecting Method

As shown in Fig. 1, the PS-510 should be connected to the TS-510, with the cord furnished. With this connection, the speaker unit is also connected to the transceiver.

The power on-off switch is attached to the transceiver. (No power switch is attached to the PS-510.) When power supply is on, the neon tube located on the lower right end of the PS-510 goes on.

3. A.C Power Voltage Selector

A.C power voltage selector is provided on the back panel of the PS-510. The selector is set at 230 volts before shipment from the factory. To set the selector at 250 volts, remove the stopper from the selector and set the selector, then placing the stopper again.

1. How to Take Out the Chassis


Remove the two flat-head bolts from the top of the enclosure, four decorative bolts from its sides, and seven locking bolts from the bottom. Then the chassis can be drawn out from the enclosure toward you. The Hyzex legs need not be removed from the chassis.

2. Fuse

This unit is fused at 6 Ampere. The fuse holder is located at the rear. When replacing the burnt fuse, inspect the cause.

3. 150-Volt Line

The stabilized 150-volt line is so designed as to be exactly fixed at 150 volts. If the voltage is off the specified voltage for some reasons, the TS-510 should be placed on the receiving condition. Then adjust the voltage to 150 volts by turning the half-fixed resistor VR₁ located on the back of the PS-510.

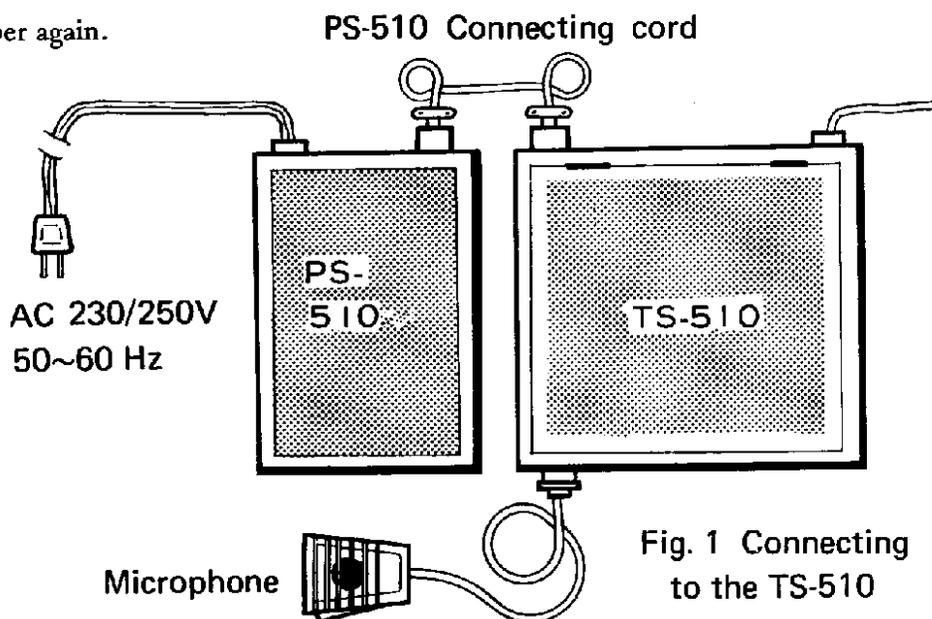

SPECIFICATION

○ Power Unit

Primary side input: 230/250 volts,
50/60 Hz

Secondary side output: (When TS-510 is
transmitting CW, and
output is 90 W)

Terminal	Voltage (V)	Current (mA)	
900 V	880 (970)	196 (14.3)	DC
300 V	285 (295)	36.5 (10.0)	DC
210 V	202 (212)	64 (56.0)	DC
150 V	150	90 (107.0)	DC
- C	-91	11.1 (13.8)	DC
12.6 V	13.6 (14)	1.07 A (1.09A)	AC
12.6 V	12.7 (13.1)	2.76 A (2.81A)	AC

The above figures are the values measured at
the connector section of the TS-510.

The figures in the parentheses are the values
measured when receiving in CW mode.

○ **Power Consumption:** 360 W (Max.)

○ Speaker:

Diameter: 6½"

Impedance: 8 Ω

Frequency: 150 ~ 5,000 Hz

Allowable maximum

input: 1.5 W

Dimensions: 200 (w) x 180 (h) x
360 (d) mm (exclud-
ing legs)

Weight: 15 kg


TRIO

PS-510


POWER SUPPLY and SPEAKER UNIT



OPERATING MANUAL

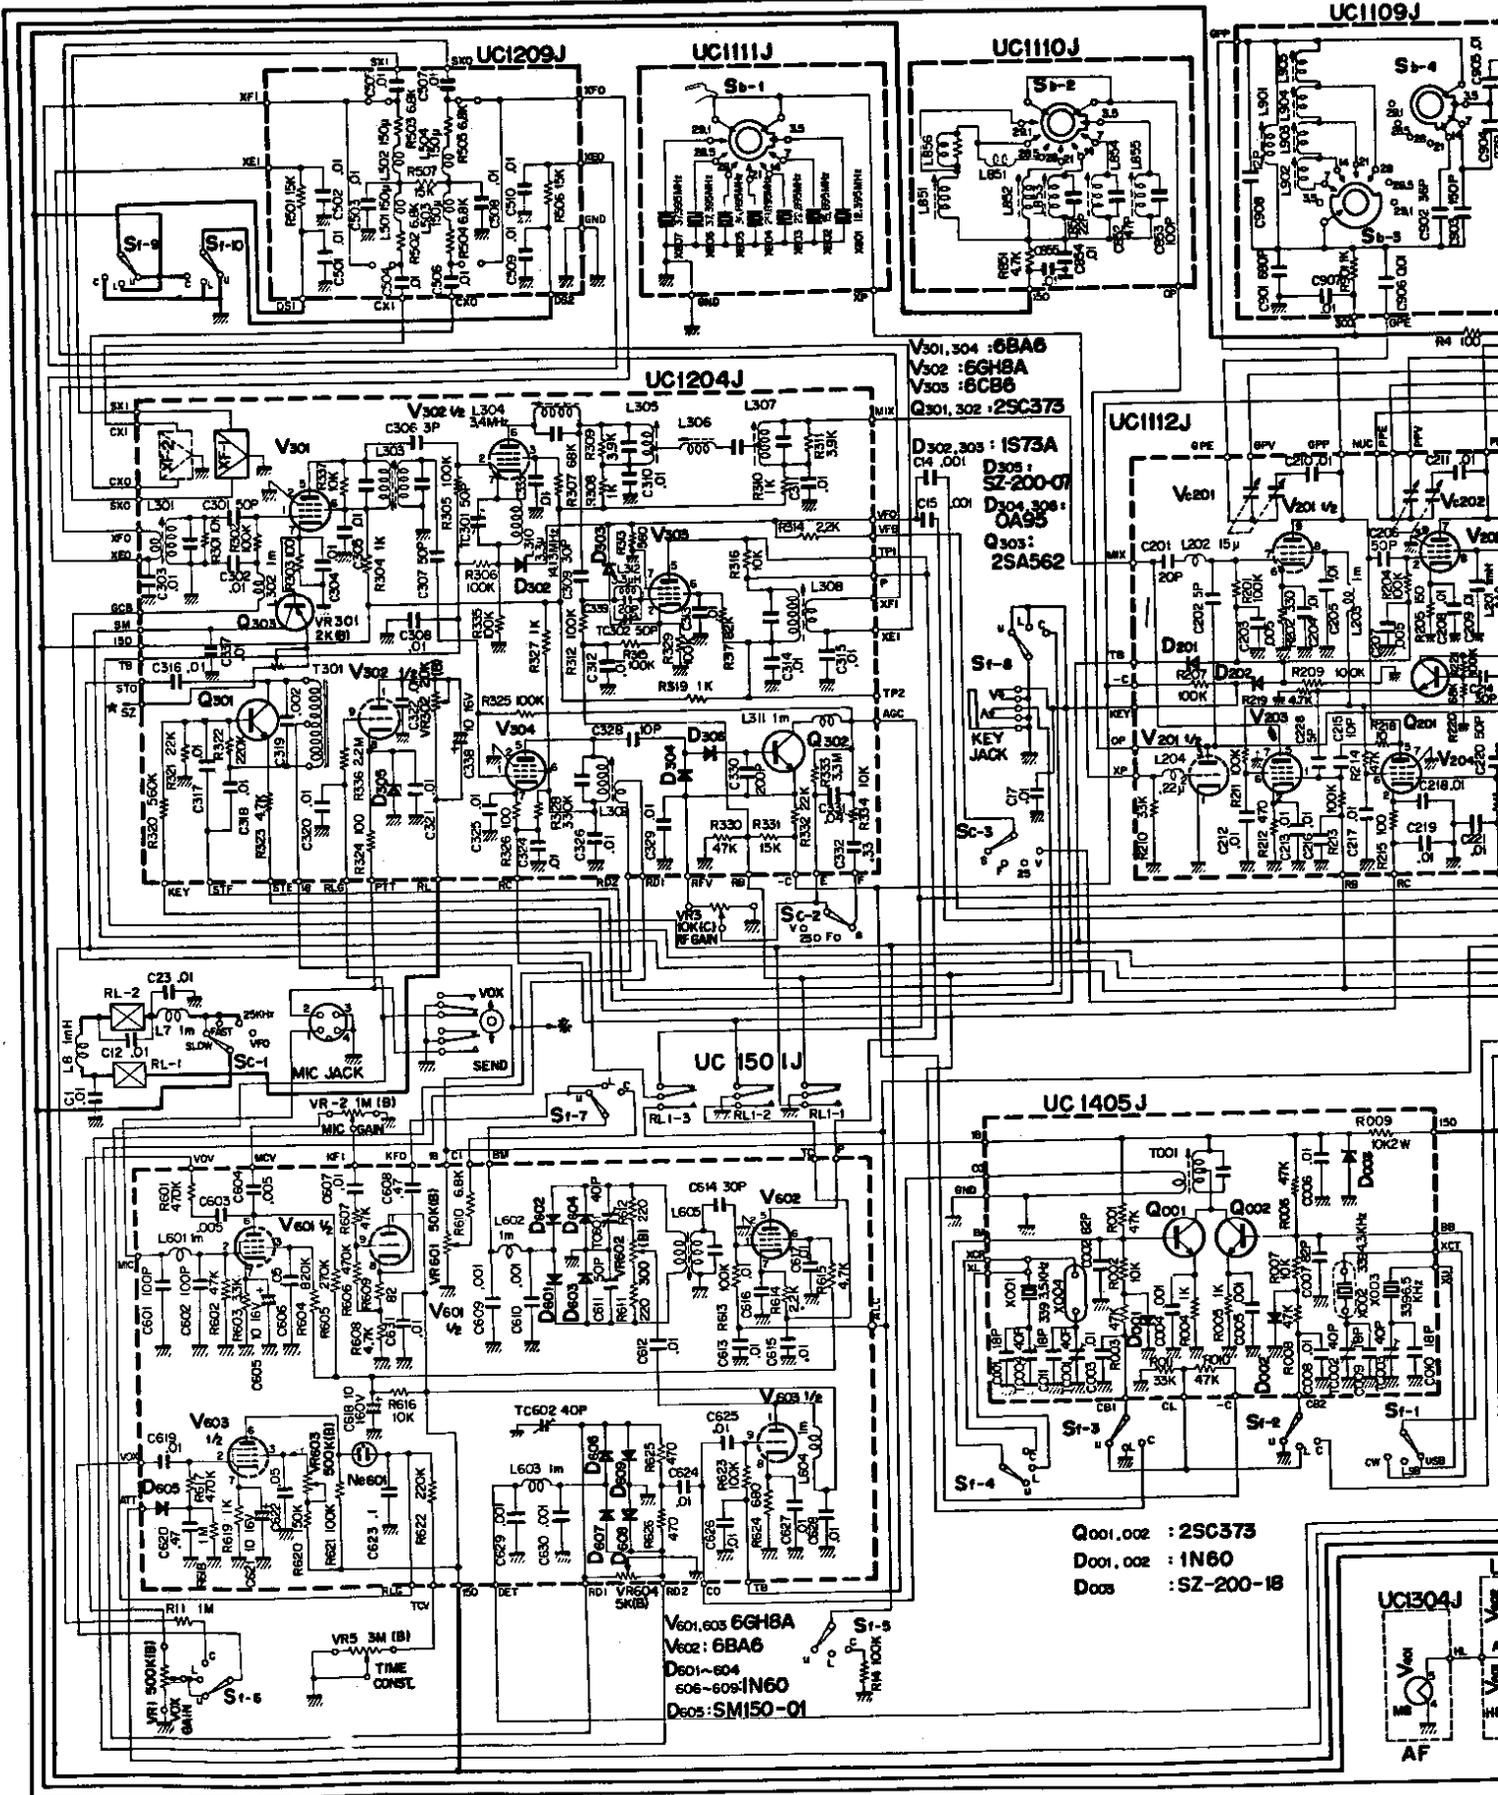

SCHEMATIC DIAGRAM

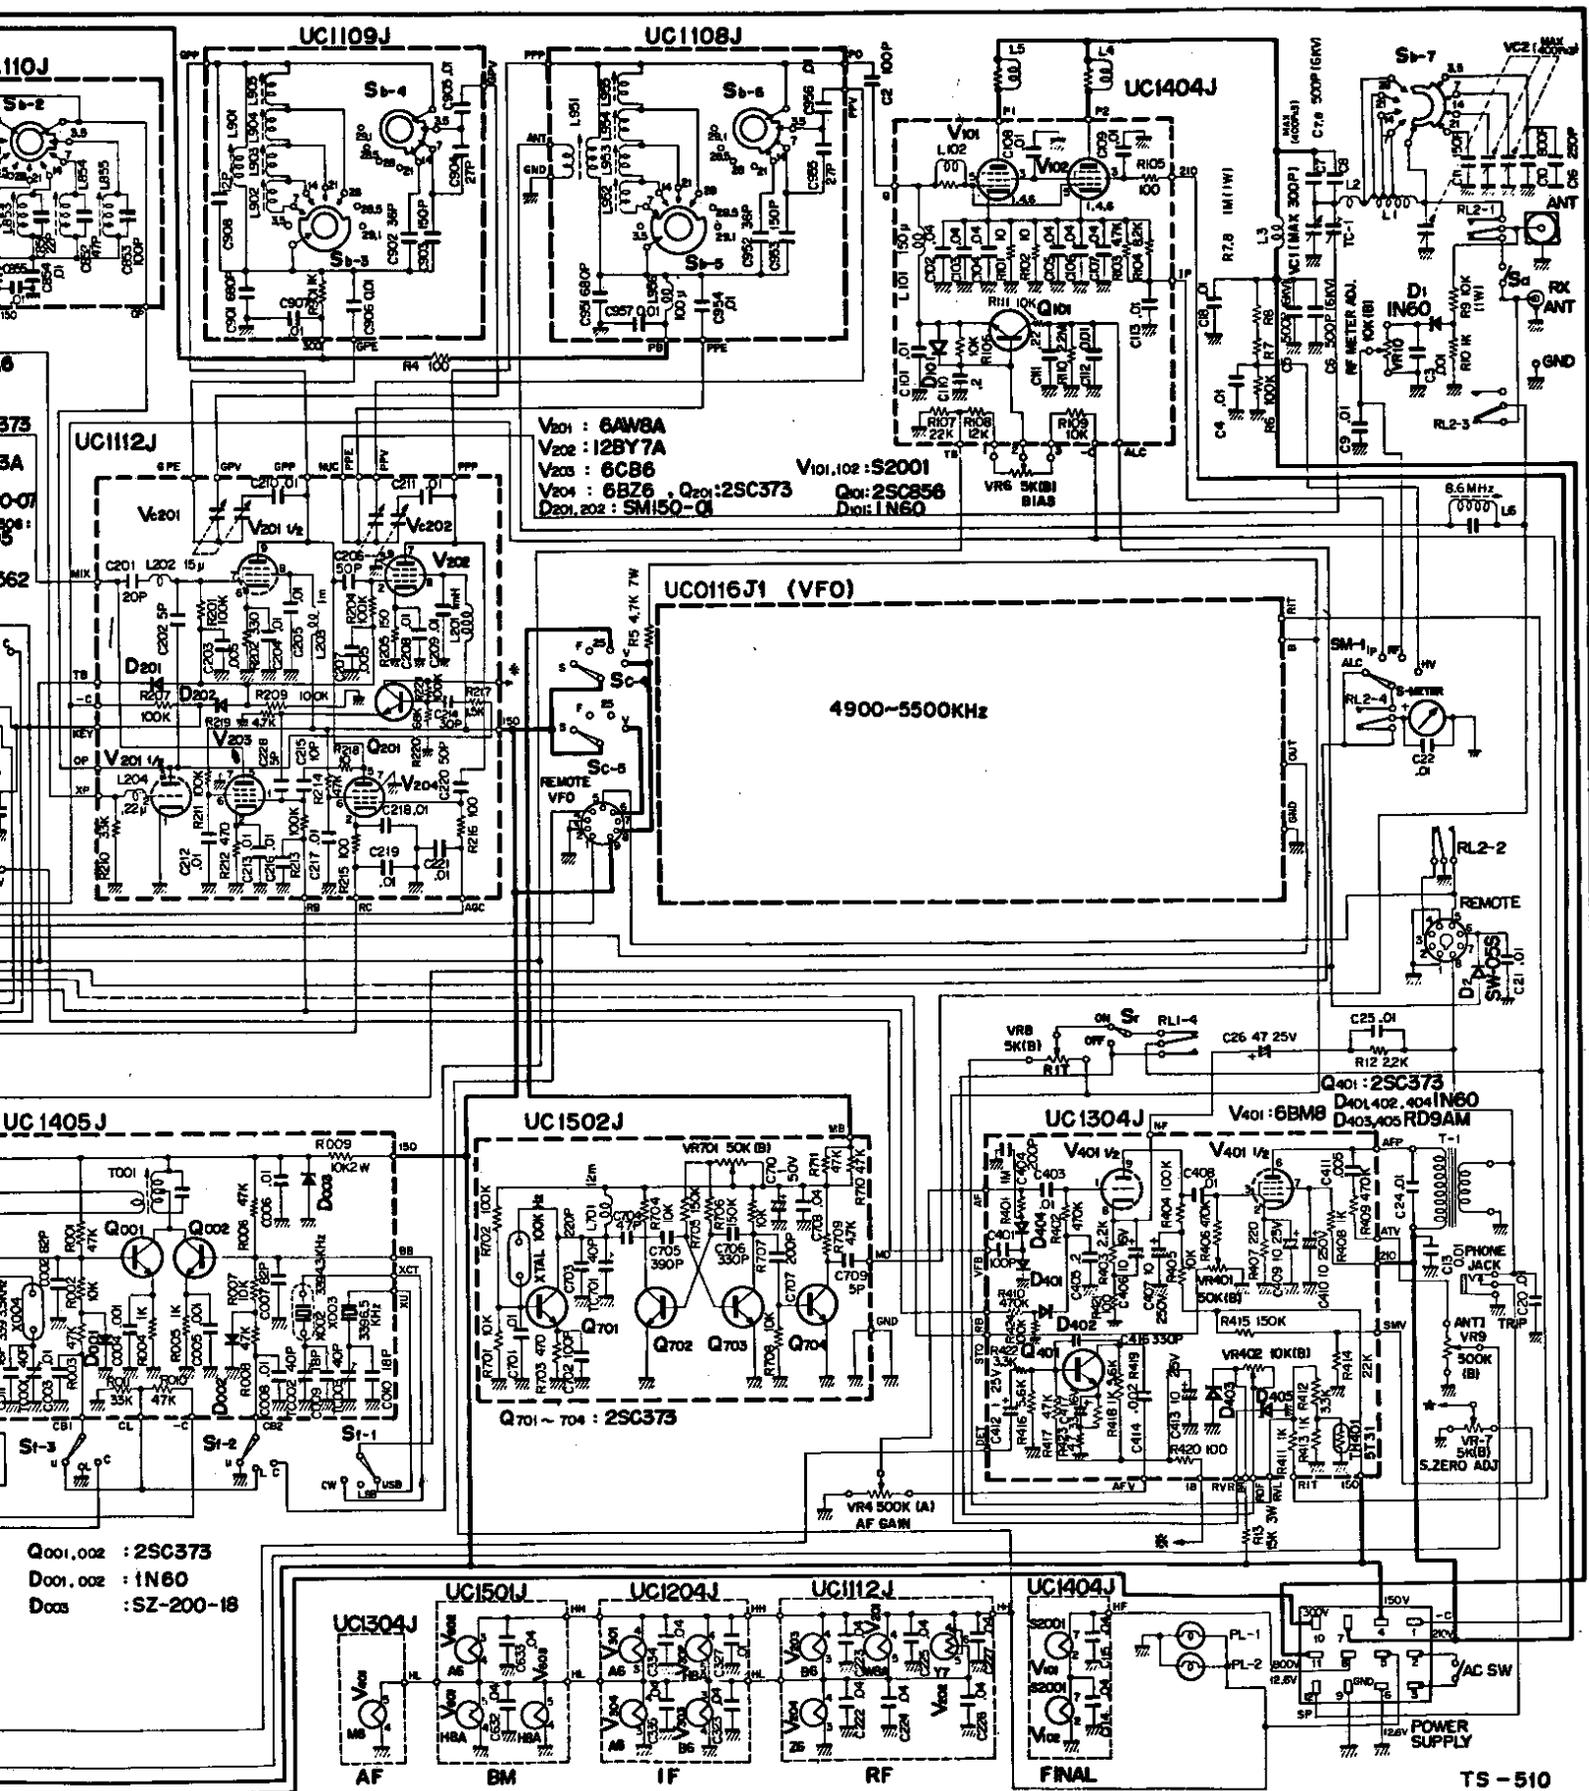

PARTS DESCRIPTION LIST

■ MAIN CHASSIS (LB-6J) SECTION

PRINTED CIRCUIT

-	DIODE S.W. BLOCK	(UC1209J)
-	COIL PACK D BLOCK	(UC1111J)
-	COIL PACK C BLOCK	(UC1110J)
-	COIL PACK B BLOCK	(UC1109J)
-	COIL PACK A BLOCK	(UC1108J)
-	FINAL UNIT BLOCK	(UC1404J)
-	IF UNIT BLOCK	(UC1204J)
-	RF UNIT BLOCK	(UC1112J)
-	VFO BLOCK	(UC0116J1)
-	BM UNIT BLOCK	(UC1501J)
-	CARRIER BLOCK	(UC1405J)
-	MARKER UNIT BLOCK	(UC1502J)
-	AF UNIT BLOCK	(UC1304J)

Symbol No.	Description	Part No.	Remarks
------------	-------------	----------	---------

CAPACITORS

C1	Ceramic	0.01 μ F	+100%	-0%		
C3	Ceramic	0.001 μ F	+100%	-0%		
C4	Ceramic	0.01 μ F	+100%	-0%		
C5~8	Ceramic	500PF	+100%	-0%		
C9	Ceramic	0.01 μ F	+100%	-0%		
C10	Mica	800PF	\pm 10%			
C11	Mica	150PF	\pm 10%			
C12,13	Ceramic	0.01 μ F	+100%	-0%		
C14,15	Ceramic	0.001 μ F	+100%	-0%		
C16	Mica	250PF	\pm 5%			
C17	Ceramic	0.01 μ F	+100%	-0%		
C18	Ceramic	0.01 μ F	\pm 20%			
C20~23	Ceramic	0.01 μ F	+100%	-0%		
C24	Oil Impregnated Paper	0.01 μ F	\pm 20%			
C25	Ceramic	0.01 μ F	+100%	-0%		
C26	Electrolytic Tubular	47 μ F		25WV		

RESISTORS

R5	Metallic Oxide Film Composition	4.7k Ω	\pm 5%	7W		
R6	Fixed Carbon Composition	100k Ω	\pm 10%	1/2W		
R7,8	Carbon Composition	1M Ω	\pm 5%	1W		
R9	Carbon Composition	10k Ω	\pm 5%	1W		
R10	Fixed Carbon Composition	1k Ω	\pm 10%	1/2W		
R11	Fixed Carbon Composition	1M Ω	\pm 10%	1/2W		
R12	Fixed Carbon Composition	2.2k Ω	\pm 10%	1/2W		
R13	Metallic Oxide Film Composition	15k Ω	\pm 5%	3W		
R14	Fixed Carbon Composition	100k Ω	\pm 10%	1/2W		

POTENTIOMETERS

VR1	500k Ω	(B)	VOX GAIN	R01-0422	
VR2	1M Ω	(B)	MIC GAIN	R01-0423	
VR3	10k Ω	(C)	RF GAIN (with S.W.)	R01-1123	
VR4	500k Ω	(A)	AF GAIN (with S.W.)	R01-1124	
VR5	3M Ω	(B)	TIME CONST.	R01-0424	
VR6	5k Ω	(B)	BIAS	R01-0420	
VR7	5k Ω	(B)	S. ZERO ADJ.	R01-0420	
VR8	5k Ω	(B)	RIT	R01-0425	
VR9	500k Ω	(B)	ANTI.	R01-0422	
VR10	10k Ω	(B)	RF METER ADJ.	R01-0421	

COILS/TRANSFORMER

L1	Output Coil (A)	L13-136
L2	Output Coil (B)	L13-147
L3	Choke Coil	L20-102G
L4,5	Parasitic Filter	L18-26

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
L6	IF Trap	L13-135	
L7,8	Ferrite Inductor (1 mH)		
T1	Output Transformer (5k Ω : 8 Ω)	T02-63	
SWITCHES			
Sa	ANT Slide S.W.	S10-22D	
Sb	LOAD/BAND Rotary S.W.	S03-676	
Sc	AGC/CAL Rotary S.W.	S07-149	
Sf	MODE Rotary S.W.	S07-150	
SM1	METER Rotary S.W.	S04-140	
-	VOX Siemens S.W.	S-4139	
VARIABLE CAPACITORS			
VC1	PLATE V.C. (300PF)	D01-161	
VC2	LOAD V.C. (400PF)	D01-118	
TC1	NEUTRALIZING V.C.	D01-07	
DIODES			
D1	1N60		
D2	SW-05S		
MISCELLANEOUS			
-	Case	A01-LB6J	
-	Chassis	A03-LB6J	
-	Panel	A05-LB6J	
-	Sub Panel	A06-LB6J	
-	Sole Plate	A08-LB6J	
-	Shield Board x 2	A13-LB6J	
-	P.L. Metal Fittings	A44-38	
-	Spring	A62-12	
-	Dual Shaft	A64-36	
-	Drive Shaft	A64-37	
-	Band S.W. Shaft	A64-38	
-	Patch	A90-LA215	
-	Final Box	A90-LB6J	
-	Final Cover (L Type)	A91-LB6J	
-	Decorative Plate	A94-LA01	
-	Load Holder x 16	A4880	
-	Shaft Shield Fittings x 3	A4947	
-	Angle (for load S.W.)	A5034	
-	Side Angle x 2	A5035	
-	Coil Pack Holder x 2	A5036	
-	Meter Holder	A5037	
-	Relay Holder x 2	A5038	
-	Angle (for Bobbin) x 2	A5039	
-	Angle (for VOX)	A5040	
-	Coil Pack Cover	A5045	
-	Panel Framework (AA03-LB6J)		
-	Name Plate	B08-31	
-	Address	B59-0001-00	
-	Pulley x 4	D04-29	
-	Mold Socket (9p MT)	E01-19A	
-	US Socket	E01-38A	
-	PL Holder	E03-02F	
-	Lug x 3	E04-101	
-	Lug x 4	E04-101B	
-	Lug x 2	E04-202B	
-	M Type Receptacle	E07-11P	
-	4P Plug Socket (Jack)	E07-14C	
-	Square Plug Socket (with 12P)	E07-212B	
J	1P Jack	E08-11C	
-	M Type Receptacle (Plug)	E09-11P	
-	4P Plug Socket (Plug)	E09-14C	
-	1P Pin Plug	E09-410	

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
-	Shielded Wire 5m	W11-016K	
-	Reticular Wire 0.15m	W14-01	
-	Vinyl Tube (Layflat Width, Black) 0.7m	W17-17	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 2m	W62-509	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 2.5m	W62-519	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 2m	W62-529	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 3.5m	W62-539	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 2m	W62-549	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 3m	W62-559	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 2m	W62-569	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 3m	W62-579	
-	P.V.C. Insulated Wire (Spiral) 0.5φ 3m	W62-589	
-	Screw (M6 x 18-F)		
-	Nut (N6-F)		
-	Washer (W6 x 13 x 1-F) x 2		
-	Spring Washer (SW6-P)		
-	Hexagon Nut (N9-F)		
-	Flat Head Washer (W3-F) x 13		
-	Flat Head Washer (W4-F) x 4		
-	Pan Head Washer (⊕P3 x 4-F) x 14		
-	Pan Head Washer (⊕P3 x 6-F) x 14		
-	Pan Head Washer (⊕P3 x 8-F) x 14		
-	Pan Head Washer (⊕P4 x 8-F) x 5		
-	Flat Head Screw (⊕S2.6 x 4-F) x 2		
-	Flat Head Screw (⊕S3 x 8-F) x 6		
-	Nut (N3-F) x 18		

■ UC1209J

CAPACITOR

C501~510	Ceramic	0.01μF	+100%,	-0%
----------	---------	--------	--------	-----

RESISTORS

R501	Fixed Carbon Composition	15kΩ	±10%,	1/2W
R502~505	Fixed Carbon Composition	6.8kΩ	±10%,	1/2W
R506,507	Fixed Carbon Composition	15kΩ	±10%,	1/2W

COIL

L501~504	Ferri-Inductor	150μH
----------	----------------	-------

MISCELLANEOUS

-	Printed Circuit Board	S23-284
-	Shielding Board	A13-UC1209J
-	Terminal (for P.C.B) x 10	N4086

■ UC1111J

CRYSTALS

X801	HC18U	12.395 MHz	T13-88
X802	HC18U	15.895 MHz	T13-89
X803	HC18U	22.895 MHz	T13-90
X804	HC18U	29.895 MHz	T13-91
X805	HC18U	36.895 MHz	T13-92
X806	HC18U	37.395 MHz	T13-93
X807	HC18U	37.995 MHz	T13-94

MISCELLANEOUS

-	Printed Circuit Board	S23-281
-	Terminal (for P.C.B) x 3	N4085
-	Wafer	S4141
-	P.V.C Insulated Wire (0.5φ Black) 0.12m	W02 50

PARTS DESCRIPTION LIST

■ UC1110J				
Symbol No.	Description	Part No.	Remarks	
CAPACITORS				
C851	Mica 22PF ±5%			
C852	Mica 47PF ±5%			
C853	Mica 100PF ±5%			
C854,855	Ceramic 0.01μF +100%, -0%			
RESISTOR				
R851	Fixed Carbon Composition 4.7kΩ ±10% 1/2W			
COILS				
L851	OSC Coil 28MHz (A)	L11-82		
L852,853	OSC Coil 14MHz, 21MHz	L11-81		
L854	OSC Coil 7MHz	L11-80		
L855	OSC Coil 3.5MHz	L11-79		
L856	OSC Coil 28MHz (B)	L11-83		
MISCELLANEOUS				
-	Printed Circuit Board	S23-289		
-	Terminal (for P.C.B) x 2	N4085		
-	Wafer	S4141		
■ UC1109J				
CAPACITORS				
C901	Mica 680PF ±5%			
C902	Mica 36PF ±5%			
C903	Mica 150PF ±5%			
C904	Mica 27PF ±5%			
C905~907	Ceramic 0.01μF +100%, -0%			
C908	Mica 12PF ±5%			
RESISTOR				
R901	Fixed Carbon Composition 1kΩ ±10% 1/2W			
COILS				
L901	Tune Coil 3.5MHz	L13-142		
L902	Tune Coil 7MHz	L13-138		
L903	Tune Coil 14MHz	L13-139		
L904	Tune Coil 21MHz	L13-140		
L905	Tune Coil 28MHz	L13-141		
MISCELLANEOUS				
-	Printed Circuit Board	S23-280		
-	Terminal (for P.C.B) x 4	N4086		
-	Wafer	S4140		
-	P.V.C Insulated Wire (0.8φ white) 0.2m	W02-89		
■ UC1108J				
CAPACITORS				
C2	Mica 100PF ±10%			
C951	Mica 680PF ±5%			
C952	Mica 36PF ±5%			
C953	Mica 150PF ±5%			
C954	Ceramic 0.01μF +100%, -0%			
C955	Mica 27PF ±5%			
C956,957	Ceramic 0.01μF +100%, -0%			
RESISTOR				
R4	Fixed Carbon Composition 100Ω ±10% 1/2W			

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
COILS			
L951	Tune Coil 3.5MHz	L13-137	
L952	Tune Coil 7MHz	L13-138	
L953	Tune Coil 14MHz	L13-139	
L954	Tune Coil 21MHz	L13-140	
L955	Tune Coil 28MHz	L13-141	
L956	Ferri-Inductor 100 μ H		
MISCELLANEOUS			
—	Printed Circuit Board	S23-279	
—	Terminal (for P.C.B) x 7	N4086	
—	Wafer	S4140	
—	P.V.C Insulated Wire (0.8 ϕ White) 0.2m	W02-89	
■ UC1404J			
CAPACITORS			
C101	Ceramic 0.01 μ F +100%, -0%		
C102~107	Ceramic 0.04 μ F +100%, -0%		
C108,109	Ceramic 0.01 μ F +100%, -0%		
C110	Metalized Paper 0.2 μ F \pm 20%		
C111	Polyester 0.22 μ F \pm 10%		
C112,113	Ceramic 0.01 μ F +100%, -0%		
C114,115	Ceramic 0.04 μ F +100%, -0%		
RESISTORS			
R101,102	Fixed Carbon Composition 10 Ω \pm 10% 1/2W		
R103	Fixed Carbon Composition 4.7k Ω \pm 10% 1/2W		
R104	Fixed Carbon Composition 8.2k Ω \pm 10% 1/2W		
R105	Fixed Carbon Composition 100 Ω \pm 10% 1/2W		
R106	Fixed Carbon Composition 10k Ω \pm 10% 1/2W		
R107	Fixed Carbon Composition 22k Ω \pm 10% 1/2W		
R108	Fixed Carbon Composition 12k Ω \pm 10% 1/2W		
R109	Fixed Carbon Composition 10k Ω \pm 10% 1/2W		
R110	Fixed Carbon Composition 2.2M Ω \pm 10% 1/2W		
R111	Fixed Carbon Composition 10k Ω \pm 10% 1/2W		
COILS			
L101	Ferri-Inductor 150 μ H		
L102	Parasitic Filter	L18-31	
TUBE			
V101,102	S2001		
TRANSISTOR/DIODE			
Q101	2SC856		
D101	1N60		
MISCELLANEOUS			
—	Final Chassis	AD3-UC1404J	
—	US Socket x 2	E01-38A	
—	Lug	E04-101B	
—	Lug x 4	E04-202B	
—	P.V.C Insulated Wire (0.5 ϕ Black) 0.2m	W02-50	
—	P.V.C Insulated Wire (0.5 ϕ Yellow) 0.4m	W02-54	
—	P.V.C Insulated Wire (0.5 ϕ White) 0.3m	W02-59	
—	P.V.C Insulated Wire (0.8 ϕ Red) 0.4m	W02-82	
—	P.V.C Insulated Wire (0.8 ϕ Yellow) 0.5m	W02-84	
—	P.V.C Insulated Wire (0.8 ϕ Blue) 0.2m	W02-86	
—	Tinned Wire (1.2 ϕ) 0.4m	W03-12	
—	P.V.C Insulated Wire (0.5 ϕ Green) 0.6m	W62-559	
—	P.V.C Insulated Wire (0.5 ϕ Blue) 0.1m	W62-569	
—	P.V.C Insulated Wire (0.5 ϕ Purple) 0.1m	W62-579	
—	P.V.C Insulated Wire (0.5 ϕ Gray) 0.3m	W62-589	
—	Screw (⊕P3 x 4-F) x 9		

PARTS DESCRIPTION LIST

■ UC1204J				
Symbol No.	Description	Part No.	Remarks	
CAPACITORS				
C301	Ceramic	50PF	±10%	
C302~305	Ceramic	0.01 μF	+100%, -0%	
C306	Ceramic	3PF	±0.5PF	
C307	Ceramic	50PF	±10%	
C308	Ceramic	0.01 μF	+100%, -0%	
C309	Ceramic	30PF	±10%	
C310~318	Ceramic	0.01 μF	+100%, -0%	
C319	Ceramic	0.002 μF	+100%, -0%	
C320~322	Ceramic	0.01 μF	+100%, -0%	
C323	Ceramic	0.04 μF	+100%, -0%	
C324~326	Ceramic	0.01 μF	+100%, -0%	
C327	Ceramic	0.04 μF	+100%, -0%	
C328	Ceramic	10PF	±0.5PF	
C329	Ceramic	0.01 μF	+100%, -0%	
C330	Ceramic	200PF	±10%	
C331	Ceramic	0.04 μF	+100%, -0%	
C332	Polyester	0.33 μF	±5%	
C333	Ceramic	0.01 μF	+100%, -0%	
C334,335	Ceramic	0.04 μF	+100%, -0%	
C337	Ceramic	0.01 μF	+100%, -0%	
C338	Electrolytic Tubular	10 μF	16WV	
TC301	Ceramic Trimmer	50PF		
RESISTORS				
R302	Fixed Carbon Composition	100k Ω	±10%	1/2W
R303	Fixed Carbon Composition	100 Ω	±10%	1/2W
R304	Fixed Carbon Composition	1k Ω	±10%	1/2W
R305,306	Fixed Carbon Composition	100k Ω	±10%	1/2W
R307	Fixed Carbon Composition	68k Ω	±10%	1/2W
R308	Fixed Carbon Composition	1k Ω	±10%	1/2W
R309	Fixed Carbon Composition	3.9k Ω	±10%	1/2W
R310	Fixed Carbon Composition	1k Ω	±10%	1/2W
R311	Fixed Carbon Composition	3.9k Ω	±10%	1/2W
R312	Fixed Carbon Composition	100k Ω	±10%	1/2W
R313	Fixed Carbon Composition	560 Ω	±10%	1/2W
R314	Fixed Carbon Composition	2.2k Ω	±10%	1/2W
R315	Fixed Carbon Composition	100k Ω	±10%	1/2W
R316	Fixed Carbon Composition	10k Ω	±10%	1/2W
R317	Fixed Carbon Composition	82k Ω	±10%	1/2W
R319	Fixed Carbon Composition	1k Ω	±10%	1/2W
R320	Fixed Carbon Composition	560k Ω	±10%	1/2W
R321	Fixed Carbon Composition	22k Ω	±10%	1/2W
R322	Fixed Carbon Composition	220k Ω	±10%	1/2W
R323	Fixed Carbon Composition	4.7k Ω	±10%	1/2W
R324	Fixed Carbon Composition	100 Ω	±10%	1/2W
R325	Fixed Carbon Composition	100k Ω	±10%	1/2W
R326	Fixed Carbon Composition	100 Ω	±10%	1/2W
R327	Fixed Carbon Composition	1k Ω	±10%	1/2W
R328	Fixed Carbon Composition	330k Ω	±10%	1/2W
R329	Fixed Carbon Composition	100k Ω	±10%	1/2W
R330	Fixed Carbon Composition	47k Ω	±10%	1/2W
R331	Fixed Carbon Composition	15k Ω	±10%	1/2W
R332	Fixed Carbon Composition	22k Ω	±10%	1/2W
R333	Fixed Carbon Composition	3.3M Ω	±10%	1/2W
R334	Fixed Carbon Composition	10k Ω	±10%	1/2W
R335	Fixed Carbon Composition	100k Ω	±10%	1/2W
R336	Fixed Carbon Composition	2.2M Ω	±10%	1/2W
R337	Fixed Carbon Composition	10k Ω	±10%	1/2W

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
POTENTIOMETERS			
VR301	2k Ω (B)	R10-113	
VR302	20k Ω (B)	R10-104	
COILS/TRANSFORMER			
L301	IFT (3.395MHz)	L01-83	
L302	Ferri-Inductor 1mH		
L303	IFT (3.395MHz)	L01-84	
L304	Trap (3.395MHz)	L13-146	
L305	B.P.F. (A)	L13-143	
L306	B.P.F. (B)	L13-144	
L307	B.P.F. (C)	L13-145	
L308	IFT (3.395MHz)	L01-83	
L309	IFT (3.395MHz)	L01-85	
L310	Ferri-Inductor 3.3 μ H		
L311	Ferri-Inductor 1mH		
T301	AF Transformer	L11-85	
TUBES			
V301	6BA6		
V302	6GH8A		
V303	6CB6		
V304	6BA6		
TRANSISTORS/DIODES			
Q301,302	2SC373		
Q303	2SA562Y		
D302,303	1S73A		
D304	0A95		
D305	SZ-200-07		
D306	0A95		
X'TAL FILTERS			
XF1,2	X'tal Filter	L4013	
MISCELLANEOUS			
-	Printed Circuit Board	S23-283	
-	9pMT Shield Case	E24-01	
-	7pMT Shield Case x 3	E24-06	
-	7pMT Molded Socket (for P.C.B) x 3	E51-17A	
-	9pMT Molded Socket (for P.C.B)	E51-19C	
-	Terminal (for P.C.B) x 41	N4085	
-	P.V.C Insulated Wire (0.5 ϕ Yellow) 0.07m	W02-54	
-	P.V.C Insulated Wire (0.8 ϕ Blue) 0.225m	W02-86	
-	P.V.C Insulated Wire (0.8 ϕ White) 0.09m	W02-89	
-	P.V.C Insulated Wire (0.5 ϕ Spiral) 0.275m	W62-529	
-	P.V.C Insulated Wire (0.5 ϕ Spiral) 0.15m	W62-579	
■ UC1112J			
CAPACITORS			
C201	Ceramic 20PF \pm 10%		
C202	Ceramic 5PF \pm 0.5PF		
C203	Ceramic 0.005 μ F +100%, -0%		
C204,205	Ceramic 0.01 μ F +100%, -0%		
C206	Ceramic 50PF \pm 10%		
C207	Ceramic 0.005 μ F +100%, -0%		
C208~213	Ceramic 0.01 μ F +100%, -0%		
C214	Ceramic 30PF \pm 10%		
C215	Ceramic 10PF \pm 0.5PF		
C216~219	Ceramic 0.01 μ F +100%, -0%		
C220	Ceramic 50PF \pm 10%		
C221	Ceramic 0.01 μ F +100%, -0%		
C222~227	Ceramic 0.04 μ F +100%, -0%		
C228	Ceramic 5PF \pm 0.5PF		

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
RESISTORS			
R201	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R202	Fixed Carbon Composition 330Ω ±10% 1/2W		
R204	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R205	Fixed Carbon Composition 150Ω ±10% 1/2W		
R207,209	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R210	Fixed Carbon Composition 33kΩ ±10% 1/2W		
R211	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R212	Fixed Carbon Composition 470Ω ±10% 1/2W		
R213	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R214	Fixed Carbon Composition 47kΩ ±10% 1/2W		
R215	Fixed Carbon Composition 100Ω ±10% 1/2W		
R216	Fixed Carbon Composition 100kΩ ±10% 1/2W		
R217	Fixed Carbon Composition 1.5kΩ ±10% 1/2W		
R218	Fixed Carbon Composition 10Ω ±10% 1/2W		
R219	Fixed Carbon Composition 4.7kΩ ±10% 1/2W		
R220	Fixed Carbon Composition 68kΩ ±10% 1/2W		
R221	Fixed Carbon Composition 100kΩ ±10% 1/2W		
COILS			
L201	Ferri-Inductor 1mH		
L202	Ferri-Inductor 15μH		
L203	Ferri-Inductor 1mH		
L204	Choke Coil 0.22μH	L22-01	
TUBES			
V201	6AW8A		
V202	12BY7A		
V203	6CB6		
V204	6BZ6		
TRANSISTOR/DIODES			
Q201	2SC373		
D201,202	SM-150-01		
MISCELLANEOUS			
—	Printed Circuit Board	S23-282	
VC201,202	Variable Capacitor	D01-162	
—	Pulley x 2	D04-29	
—	9PMT Shield Case x 2	E24-01	
—	7PMT Shield Case x 2	E24-06	
—	7PMT Molded Socket (for P.C.B) x 2	E51-17A	
—	9PMT Molded Socket (for P.C.B) x 2	E51-19C	
—	Terminal (for P.C.B) x 16	N4085	
—	P.V.C Insulated Wire (0.5φ Black) 0.07m	W02-50	
—	P.V.C Insulated Wire (0.8φ Blue) 0.26m	W02-86	
—	P.V.C Insulated Wire (0.8φ White) 0.23m	W02-89	
—	P.V.C Insulated Wire (0.5φ Spiral) 0.24m	W62-529	
■ UC0116J₁			
CAPACITORS			
C1	Temperature Compensating Ceramic 47PF ±5%		
C2,3	Temperature Compensating Ceramic 150PF ±5%		
C4	Temperature Compensating Ceramic 70PF ±5%		
C5	Temperature Compensating Ceramic 470PF ±5%		
C6	Temperature Compensating Ceramic 220PF ±5%		
C7,8	Super Mica 1500PF		
C9	Hi Q Mica 3PF ±0.5PF		
C10	Ceramic 0.02μF +80%, -20%		
C11,12	Ceramic 0.04μF +80%, -20%		
C13	Ceramic 0.02μF +80%, -20%		
C14	Ceramic 33PF ±0.5%		
C15	Ceramic 5PF ±0.5PF		

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
C16	Ceramic 10PF ±0.5PF		
C17	Ceramic 5PF ±0.5PF		
C18	Ceramic 0.01μF +80%, -20%		
C19	Ceramic 0.04μF +80%, -20%		
C20	Temperature Compensating Ceramic (CC94CG1H100J)		
RESISTORS			
R1	Fixed Carbon Composition 270kΩ ±5% 1/4W		
R2	Fixed Carbon Composition 100Ω ±5% 1/4W		
R3,4	Fixed Carbon Composition 1MΩ ±5% 1/4W		
R5	Fixed Carbon Composition 330Ω ±5% 1/4W		
R6	Fixed Carbon Composition 33kΩ ±5% 1/4W		
R7	Fixed Carbon Composition 47kΩ ±5% 1/4W		
R8	Fixed Carbon Composition 1kΩ ±5% 1/4W		
R9	Fixed Carbon Composition 100Ω ±5% 1/4W		
COILS			
L2~4	Ferrite Inductor (FL5H-102K)		
L5	Ferrite Inductor (FL5H-220K)		
L6~7	Ferrite Inductor (FL5H-102K)		
L	OSC Coil	L11-78	
TRANSISTORS/DIODES			
Q1	3SK22 (Y)		
Q2	2SK19 (Y)		
Q3,4	2SC460 (B)		
D1	SD111		
D2,3	1N60		
MISCELLANEOUS			
—	Printed Circuit Board	J25-0019-04	
—	Dial Scale	A07-UC0110J	
—	Name Plate	B42-0010-04	
V.C.	Variable Capacitor	C01-0001-05	
V.C.	Midget Capacitor	C03-0001-05	
—	Trimmer (ECV-1ZW 10P12)	C4036	
—	Dial	D03-18	
—	V.F.O. Box (A)	F11-0004-13	
—	V.F.O. Box (B)	F11-0005-04	
—	V.F.O. Box (C)	F11-0006-03	
—	V.F.O. Box (D)	F11-0007-04	
—	V.F.O. Box (E)	F11-0008-04	
—	V.F.O. Box (F)	F11-0013-04	
—	V.F.O. Box (G)	F11-0010-04	
—	V.F.O. Box (H)	F11-0011-04	
—	V.F.O. Box (I)	F11-0012-04	
—	Lug	E04-101B	
—	Acme Terminal	E4071	
—	Terminal x 5	N4085	
—	Earth Lug	N28-0.32	
—	Shaft Coupling	S4082	
—	P.V.C. Insulated Wire 0.5/s. 0.3m	W02-50	
—	P.V.C. Insulated Wire 0.2m	W02-52	
—	P.V.C. Insulated Wire 0.3m	W02-54	
—	P.V.C. Insulated Wire 0.2m	W02-56	
—	Tinned Wire 0.8/s. TCW 0.2m	W03-08	
—	Pan Head Screw (⊕P2 x 4-F) x 3		
—	Pan Head Screw (⊕P3 x 6-F) x 38		
—	Flat Head Washer (W3-F) x 4		
—	Pan Head Screw (⊕P3 x 4-F)		

PARTS DESCRIPTION LIST

■ UC1501J				
Symbol No.	Description	Part No.	Remarks	
CAPACITORS				
C601,602	Mica	100PF	±5%	
C603,604	Ceramic	0.005μF	+100%, -0%	
C605	Electrolytic Tubular	10μF	16WV	
C606	Metalized Paper	0.05μF	±20%	
C607	Ceramic	0.01μF	+100%, -0%	
C608	Polyester	0.47μF	±5%	
C609,610	Ceramic	0.001μF	+100%, -0%	
C611	Mica	50PF	±5%	
C612,613	Ceramic	0.01μF	+100%, -0%	
C614	Ceramic	30PF	±10%	
C615~617	Ceramic	0.01μF	+100%, -0%	
C618	Electrolytic Tubular	10μF	160WV	
C619	Ceramic	0.01μF	+100%, -0%	
C620	Polyester	0.47μF	±5%	
C621	Electrolytic Tubular	10μF	16WV	
C622	Metalized Paper	0.05μF	±20%	
C623	Polyester	0.1μF	±5%	
C624~628	Ceramic	0.01μF	+100%, -0%	
C629,630	Ceramic	0.001μF	+100%, -0%	
C631	Ceramic	0.01μF	+100%, -0%	
C632,633	Ceramic	0.04μF	+100%, -0%	
RESISTORS				
R601	Fixed Carbon Composition	470kΩ	±10%	1/2W
R602	Fixed Carbon Composition	47kΩ	±10%	1/2W
R603	Fixed Carbon Composition	3.3kΩ	±10%	1/2W
R604	Fixed Carbon Composition	820kΩ	±10%	1/2W
R605	Fixed Carbon Composition	270kΩ	±10%	1/2W
R606	Fixed Carbon Composition	470kΩ	±10%	1/2W
R607	Fixed Carbon Composition	47kΩ	±10%	1/2W
R608	Fixed Carbon Composition	4.7kΩ	±10%	1/2W
R609	Fixed Carbon Composition	82Ω	±10%	1/2W
R610	Fixed Carbon Composition	6.8kΩ	±10%	1/2W
R611,612	Fixed Carbon Composition	220Ω	±10%	1/2W
R613	Fixed Carbon Composition	100kΩ	±10%	1/2W
R614	Fixed Carbon Composition	2.2kΩ	±10%	1/2W
R615	Fixed Carbon Composition	4.7kΩ	±10%	1/2W
R616	Fixed Carbon Composition	10kΩ	±10%	1/2W
R617	Fixed Carbon Composition	470kΩ	±10%	1/2W
R618	Fixed Carbon Composition	1MΩ	±10%	1/2W
R619	Fixed Carbon Composition	1kΩ	±10%	1/2W
R620	Fixed Carbon Composition	150kΩ	±10%	1/2W
R621	Fixed Carbon Composition	100kΩ	±10%	1/2W
R622	Fixed Carbon Composition	220kΩ	±10%	1/2W
R623	Fixed Carbon Composition	100kΩ	±10%	1/2W
R624	Fixed Carbon Composition	680Ω	±10%	1/2W
R625,626	Fixed Carbon Composition	470Ω	±10%	1/2W
POTENTIOMETERS				
VR601	50kΩ (B)			R10-56
VR602	300Ω (B)			R10-112
VR603	500kΩ (B)			R10-105
VR604	5kΩ (B)			R10-53
COILS/TRANSFORMER				
L601~604	Ferri-Inductor	1mH		
L605	IFT (for B.M)			L01-87
TUBES				
V601	6GH8A			
V602	6BA6			
V603	6GH8A			

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
DIODES			
D601~604 D605 D606~609	1N60 SM-150-01 1N60		
MISCELLANEOUS			
— TC601,602 — — — — — Ne601 — — —	Printed Circuit Board Ceramic Trimmer 40PF Shielding Case (9 pin MT) x 2 Shielding Case (7 pin MT) x 2 Molded Socket (7 pin MT) Molded Socket (9 pin MT) x 2 Terminal (for P.C.B) x 29 Neon Tube (NE-2) P.V.C Insulated Wire (0.8φ Blue) 0.2m Vinyl Tube 0.05m P.V.C Insulated Wire (0.5φ Spiral) 0.1m	S23-287 C4047 E24-01 E24-06 E51-17A E51-19C W02-86 W07-014 W62-529	
■ UC1405J			
CAPACITORS			
C001 C002 C003 C004,005 C006 C007 C008 C009~011	Mica 18PF ±10% Mica 82PF ±10% Ceramic 0.01μF +100%, -0% Ceramic 0.001μF +100%, -0% Ceramic 0.01μF +80%, -20% Mica 82PF ±10% Ceramic 0.01μF +100%, -20% Mica 18PF ±10%		
RESISTORS			
R001 R002 R003 R004,005 R006 R007 R008 R009 R010 R011	Fixed Carbon Composition 47kΩ ±10% 1/4W Fixed Carbon Composition 10kΩ ±10% 1/4W Fixed Carbon Composition 47kΩ ±10% 1/4W Fixed Carbon Composition 1kΩ ±10% 1/4W Fixed Carbon Composition 47kΩ ±10% 1/4W Fixed Carbon Composition 10kΩ ±10% 1/4W Fixed Carbon Composition 47kΩ ±10% 1/4W Metallic Oxide Film 10kΩ ±10% 2W Fixed Carbon Composition 47kΩ ±10% 1/4W Fixed Carbon Composition 33kΩ ±10% 1/4W		
CRYSTALS			
X001 X002 X003	3393.5kHz 3394.3kHz 3396.5kHz	T13-95 T13-96 T13-97	
TRANSISTORS/DIODES			
Q001,002 D001,002 D003	2SC373 1N60 SZ-200-18		
TRANSFORMER			
Tool	IFT	L01-86	
MISCELLANEOUS			
— — TC001 004 — — — —	Printed Circuit Board Crystal Holder x 2 Ceramic Trimmer 40PF Crystal Socket x 2 Terminal (for P.C.B) x 16 Screw (⊕P3 x 12-F) x 2 Nut (N3-F) x 2	S23-286 A4896 C4047 E4058 N4086	


PARTS DESCRIPTION LIST

■ UC1502J				
Symbol No.	Description	Part No.	Remarks	
CAPACITORS				
C701	Ceramic	0.01 μ F	+80%, -20%	
C702	Mica	100PF	\pm 10%	
C703	Mica	220PF	\pm 10%	
C704	Mica	47PF	\pm 10%	
C705	Mica	390PF	\pm 10%	
C706	Mica	330PF	\pm 10%	
C707	Ceramic	200PF	\pm 10%	
C708	Ceramic	0.04 μ F	+80%, -20%	
C709	Ceramic	5PF	\pm 0.5PF	
C710	Electrolytic Tubular	1 μ F	50WV	
RESISTORS				
R701	Fixed Carbon Composition	10k Ω	\pm 10%	1/4W
R702	Fixed Carbon Composition	100k Ω	\pm 10%	1/4W
R703	Fixed Carbon Composition	470 Ω	\pm 10%	1/4W
R704	Fixed Carbon Composition	10k Ω	\pm 10%	1/4W
R705,706	Fixed Carbon Composition	150k Ω	\pm 10%	1/4W
R707,708	Fixed Carbon Composition	10k Ω	\pm 10%	1/4W
R709	Fixed Carbon Composition	4.7k Ω	\pm 10%	1/4W
R710,711	Fixed Carbon Composition	47k Ω	\pm 10%	1/2W
POTENTIOMETER				
VR701	50k Ω (B)			R10-56
COIL				
L701	Ferri-Inductor	12mH		
TRANSISTORS				
Q701~704	2SC373			
MISCELLANEOUS				
-	Printed Circuit Board			S23-288
-	Crystal Holder			A4853
TC701	Ceramic Trimmer	40PF		C4047
-	Crystal Socket			E4058
-	Terminal (for P.C.B)	x 3		N4086
-	Screw (\oplus P3 x 12-F)			
-	Nut (N3-F)			
■ UC1304J				
CAPACITORS				
C401	Ceramic	100PF	\pm 10%	
C403	Ceramic	0.01 μ F	\pm 100%, -0%	
C404	Ceramic	200PF	\pm 10%	
C405	Metalized Paper	0.2 μ F	\pm 20%	
C406	Electrolytic Tubular	10 μ F	16WV	
C407	Electrolytic Tubular	10 μ F	250WV	
C408	Ceramic	0.01 μ F	+100%, -0%	
C409	Electrolytic Tubular	10 μ F	25WV	
C410	Electrolytic Tubular	10 μ F	250WV	
C411	Ceramic	0.005 μ F	+100%, -0%	
C412	Electrolytic Tubular	1 μ F	25WV	
C413	Electrolytic Tubular	10 μ F	25WV	
C414	Ceramic	0.002 μ F	\pm 20%	
C416	Mica	330PF	\pm 10%	
C417	Electrolytic Tubular	33 μ F	16WV	
RESISTORS				
R401	Fixed Carbon Composition	1M Ω	\pm 10%	1/2W
R402	Fixed Carbon Composition	470k Ω	\pm 10%	1/2W
R403	Fixed Carbon Composition	2.2k Ω	\pm 10%	1/2W

PARTS DESCRIPTION LIST

Symbol No.	Description	Part No.	Remarks
R404	Fixed Carbon Composition 100k Ω \pm 10% 1/2W		
R405	Fixed Carbon Composition 10k Ω \pm 10% 1/2W		
R406	Fixed Carbon Composition 470k Ω \pm 10% 1/2W		
R407	Fixed Carbon Composition 220 Ω \pm 10% 1/2W		
R408	Fixed Carbon Composition 1k Ω \pm 10% 1/2W		
R409,410	Fixed Carbon Composition 470k Ω \pm 10% 1/2W		
R411	Fixed Carbon Composition 1k Ω \pm 10% 1/2W		
R412	Fixed Carbon Composition 3.3k Ω \pm 10% 1/2W		
R413	Fixed Carbon Composition 1k Ω \pm 10% 1/2W		
R414	Fixed Carbon Composition 22k Ω \pm 10% 1/2W		
R415	Fixed Carbon Composition 150k Ω \pm 10% 1/2W		
R416	Fixed Carbon Composition 5.6k Ω \pm 10% 1/2W		
R417	Fixed Carbon Composition 47k Ω \pm 10% 1/2W		
R418	Fixed Carbon Composition 1k Ω \pm 10% 1/2W		
R419	Fixed Carbon Composition 5.6k Ω \pm 10% 1/2W		
R420,421	Fixed Carbon Composition 100 Ω \pm 10% 1/2W		
R422	Fixed Carbon Composition 3.3k Ω \pm 10% 1/2W		
R423	Fixed Carbon Composition 47 Ω \pm 10% 1/2W		
R424	Fixed Carbon Composition 100k Ω \pm 10% 1/2W		
POTENTIOMETERS			
VR401	50k Ω (B)	R10-56	
VR402	10k Ω (B)	R10-54	
TUBE			
V401	6BM8		
TRANSISTOR/DIODES/THERMISTOR			
Q401	2SC373		
D401,402	1N60		
D403	RD9AM		
D404	1N60		
D405	RD9AM		
TH401	5T-31		
MISCELLANEOUS			
-	Printed Circuit Board	S23-285	
-	Molded Socket (9 pin MT)	E51-19B	
-	Terminal (for P.C.B) x 2	N4085	
-	Terminal (for P.C.B) x 14	N4086	
-	Insulating Sleeve 0.05m	W06-154	

CHASSIS TOP VIEW

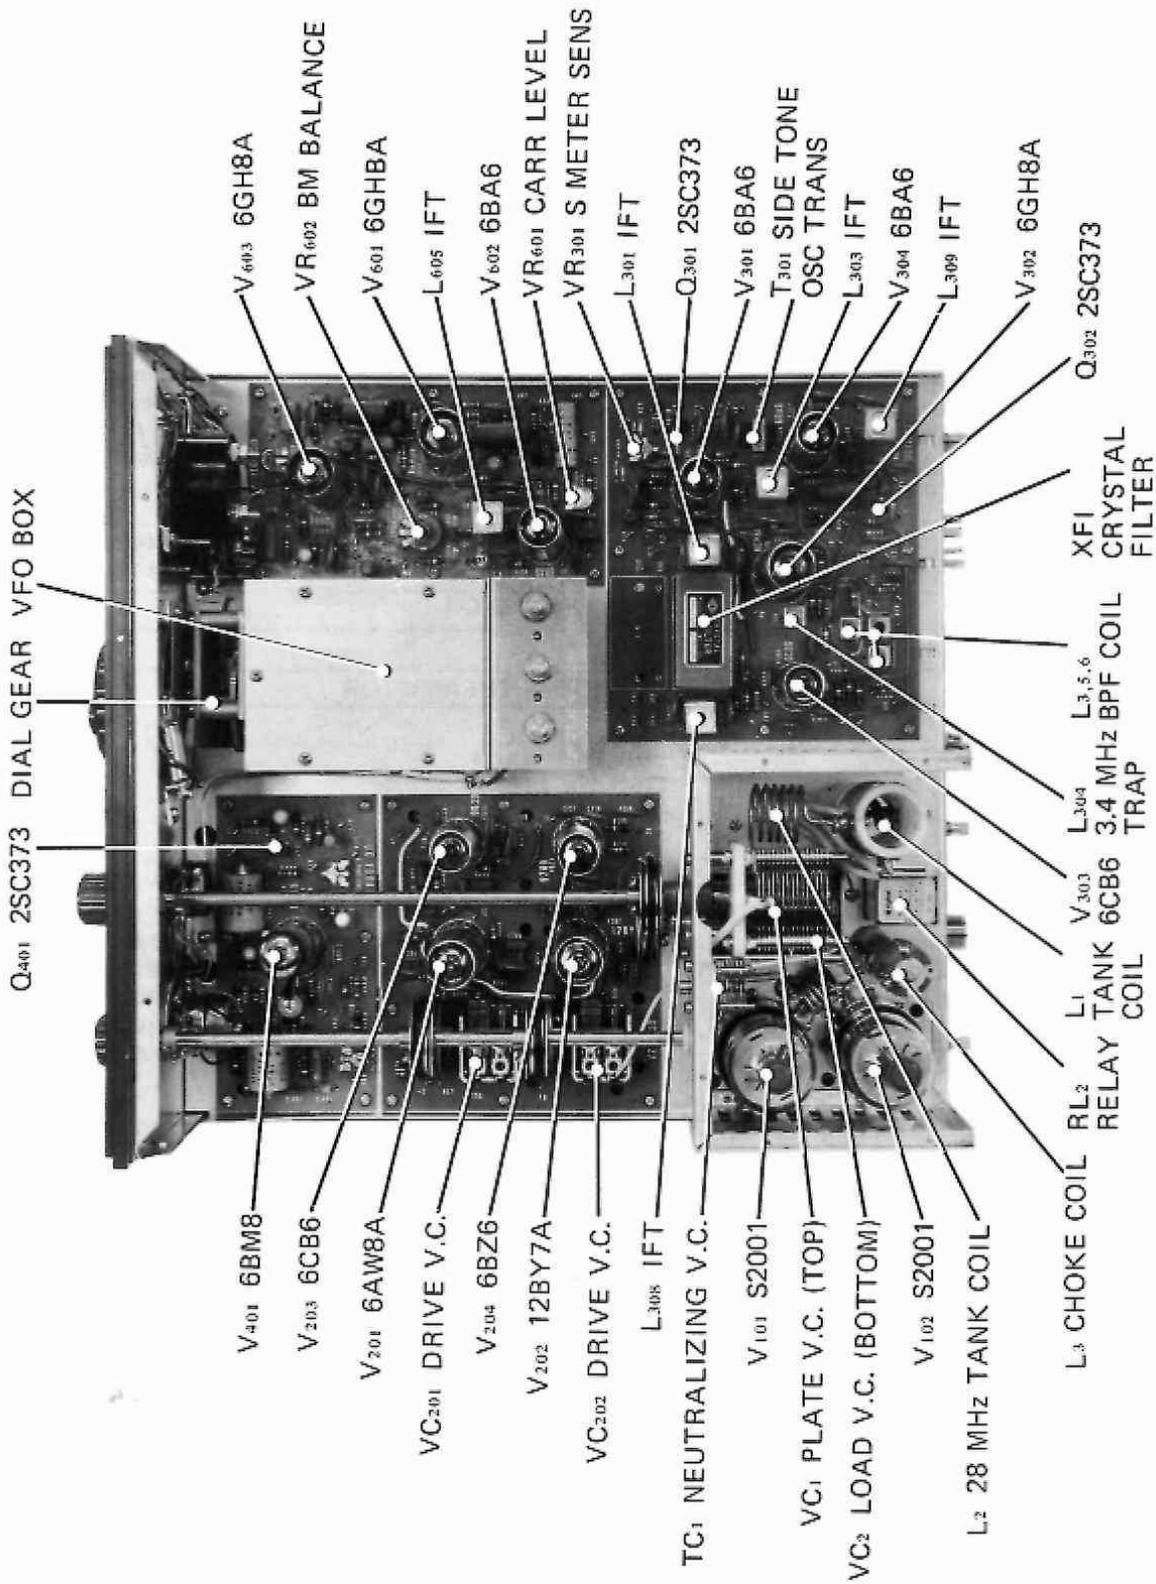

Q401 2SC373 DIAL GEAR VFO BOX

V401 6BM8

VR602 BM BALANCE

V601 6GH8A

L605 IFT

V602 6BA6

VR601 CARR LEVEL

VR301 S METER SENS

L301 IFT

Q301 2SC373

V301 6BA6

T301 SIDE TONE

OSC TRANS

L303 IFT

V304 6BA6

L309 IFT

V302 6GH8A

Q302 2SC373

XF1 CRYSTAL FILTER

L3.5.6 3.4 MHz BPF COIL

L304 TRAP

V303 6CB6

L1 TANK COIL

RL2 RELAY COIL

V203 6CB6

V201 6AW8A

VC201 DRIVE V.C.

V204 6BZ6

V202 12BY7A

VC202 DRIVE V.C.

L308 IFT

TC1 NEUTRALIZING V.C.

V101 S2001

VC1 PLATE V.C. (TOP)


VC2 LOAD V.C. (BOTTOM)

V102 S2001

L2 28 MHz TANK COIL

L3 CHOKE COIL

CHASSIS BOTTOM VIEW

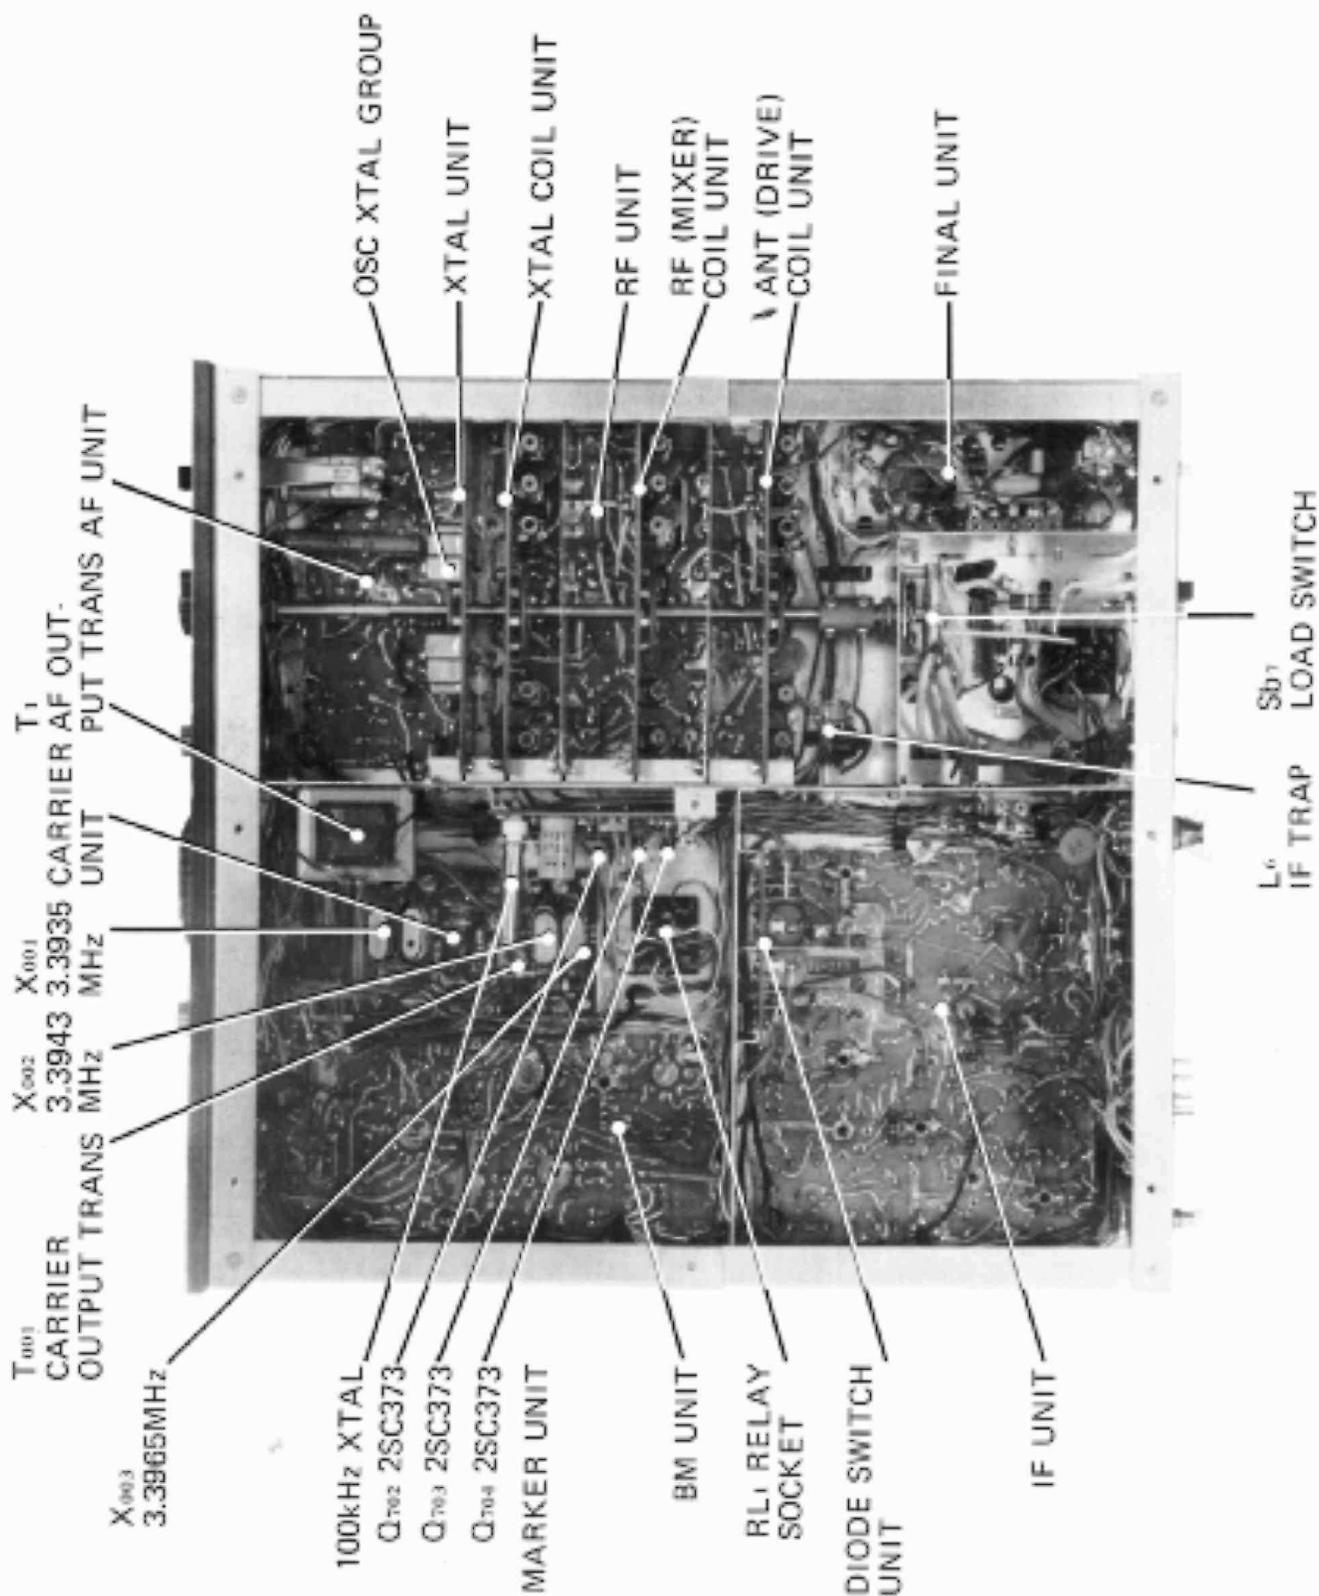


- PHANTOM VIEWS


UC1110J




UC1109J

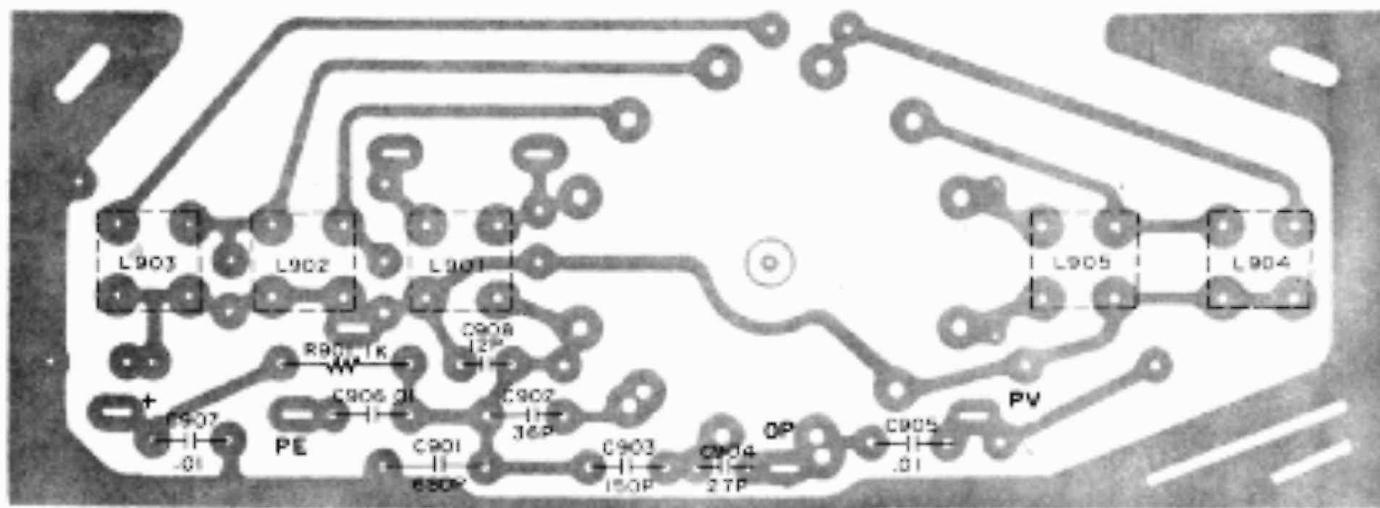

UC1209J

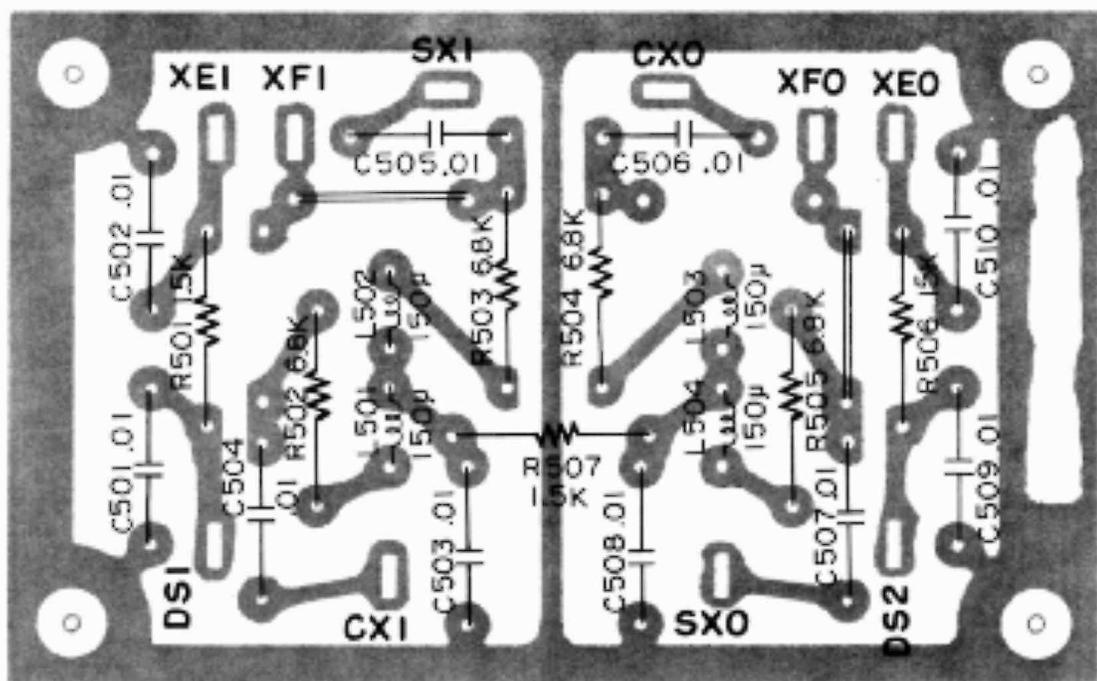

UC1111J

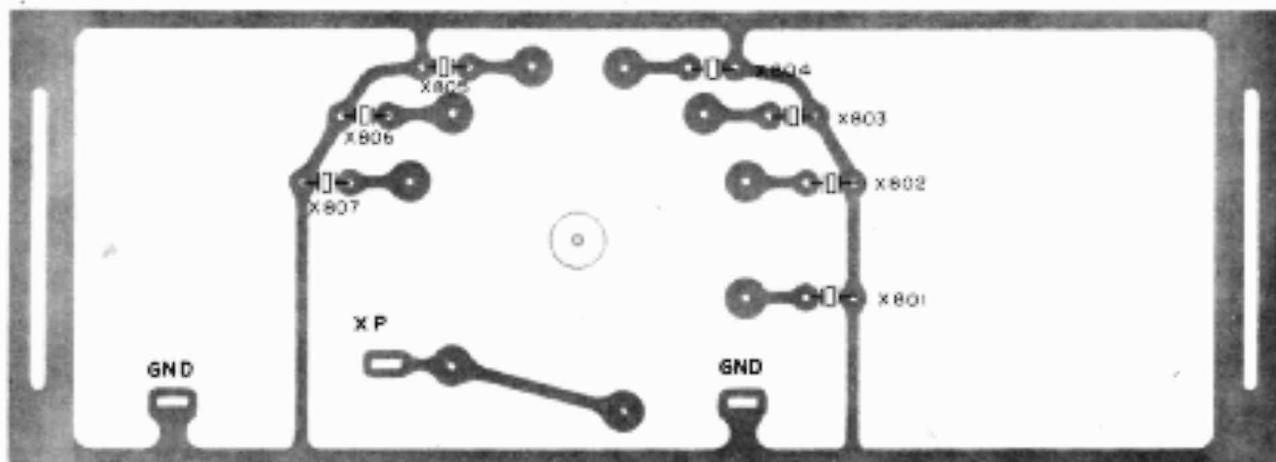


SEALED CIRCUIT ASSEMBLIES - PHANTOM VIEWS


UC1112J

BOTTOM VIEW OF TRANSISTOR

25C373

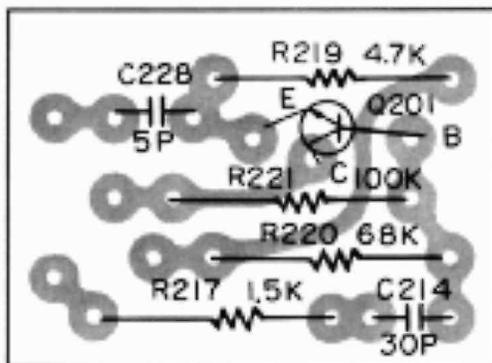


Q201 25C373

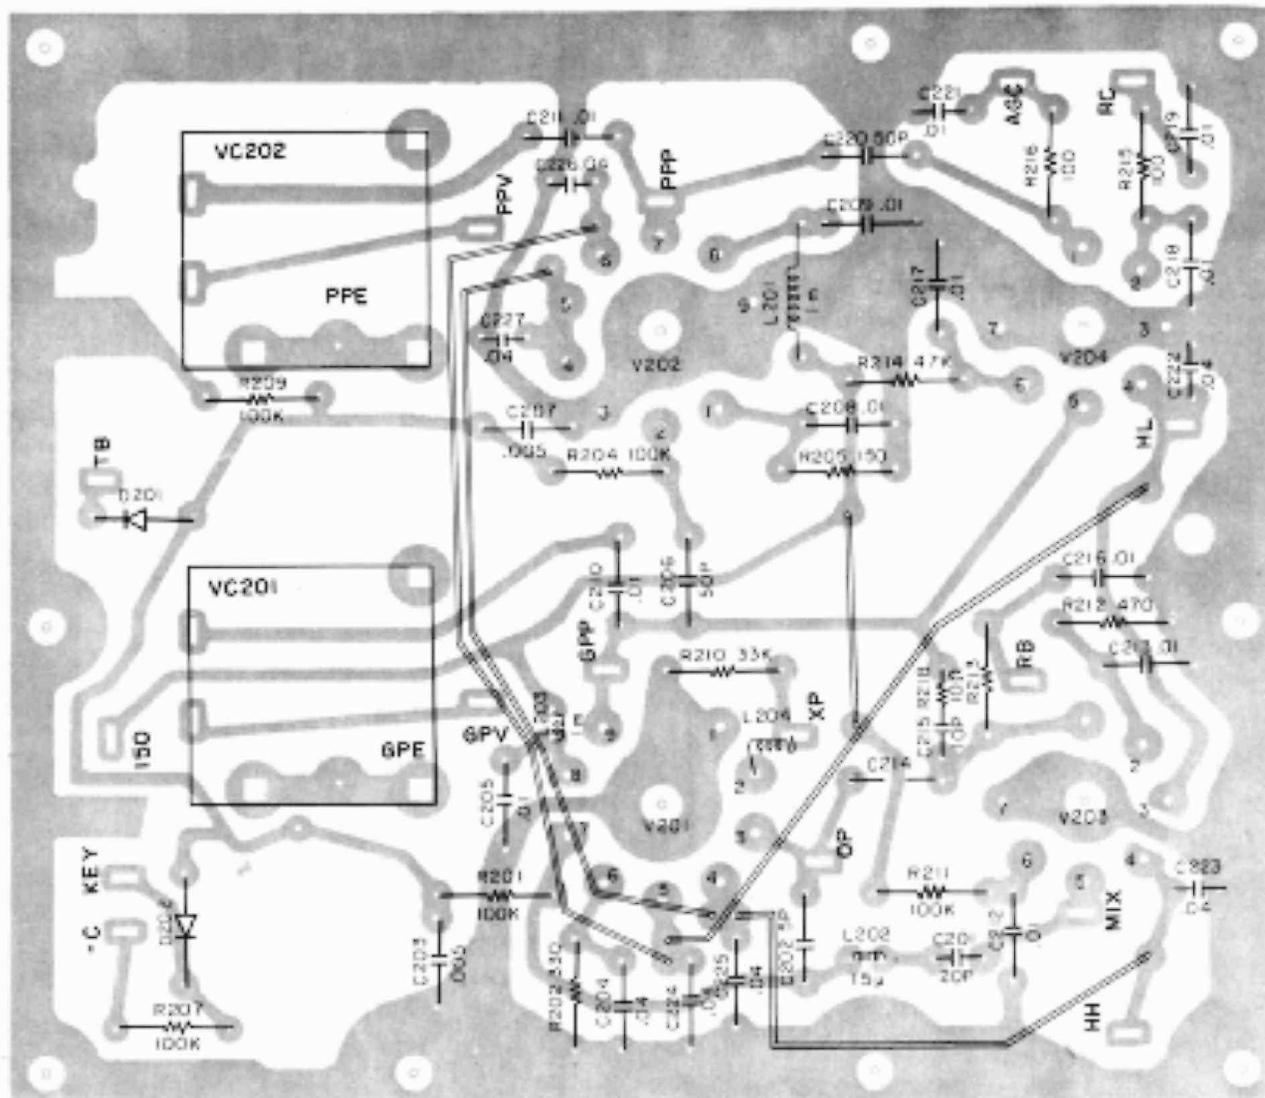

SEALED CIRCUIT ASSEMBLIES - PHANTOM VIEWS


UC1501J

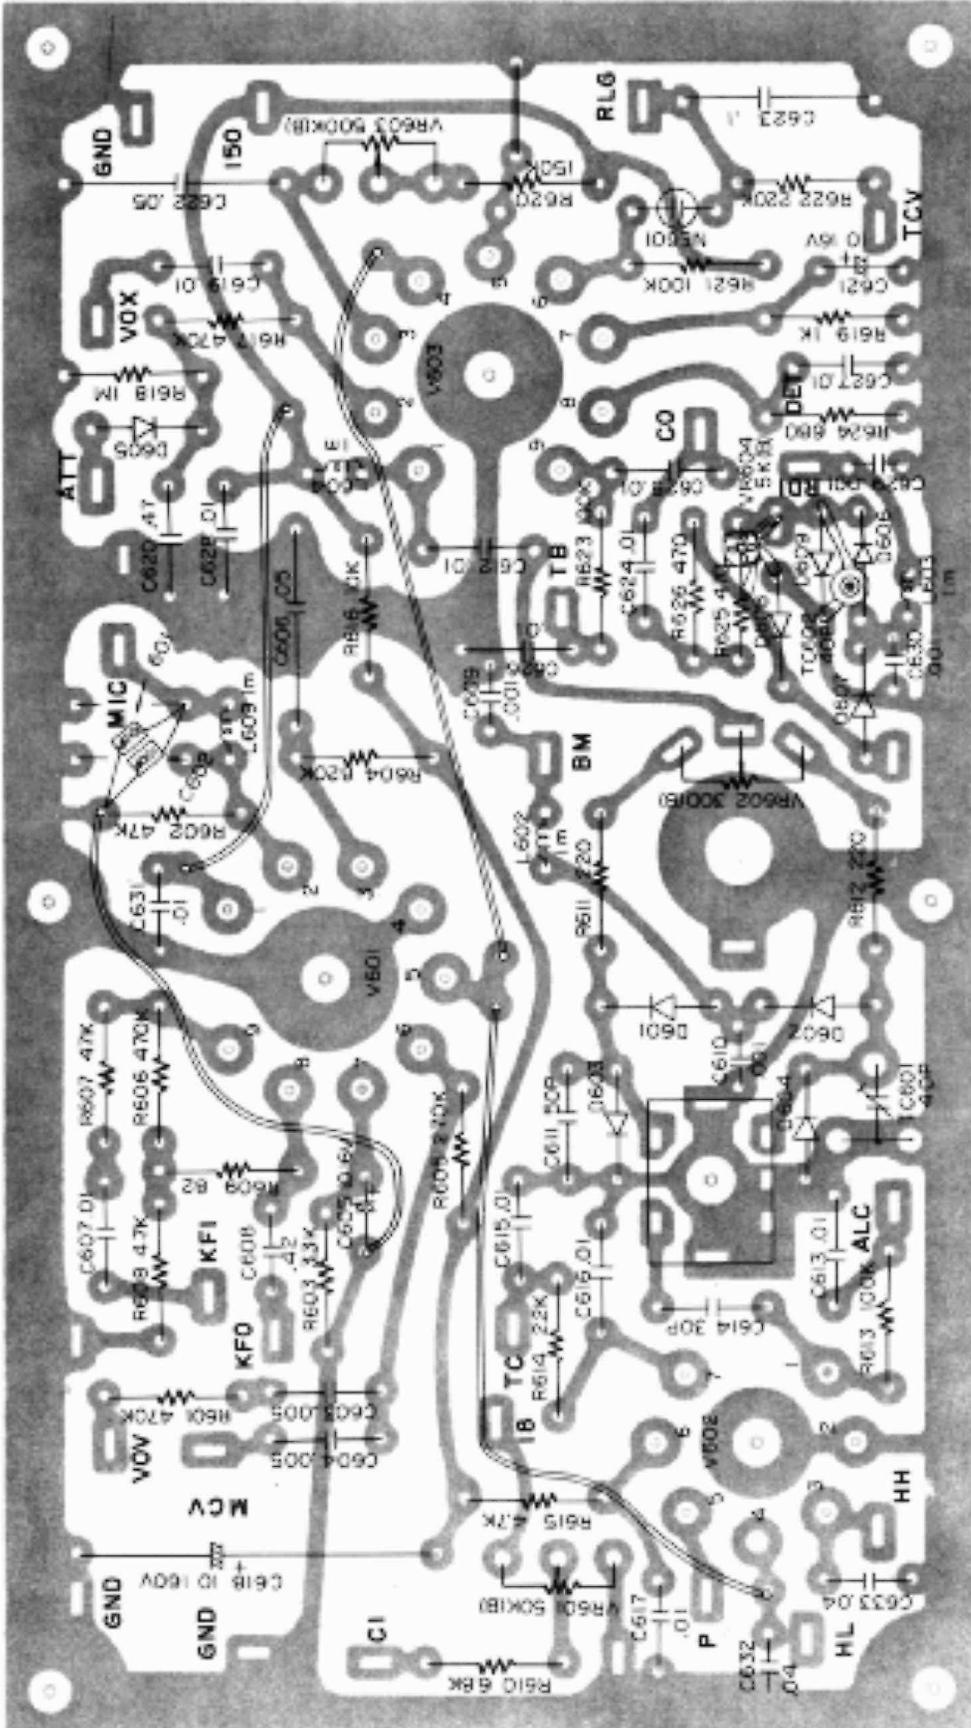

V601, 603 : 65H84 D601 ~ 604, 606 ~ 609 : 1N60
 V602 : 68A6 D605 : 5M 150 - 01

SEALED CIRCUIT ASSEMBLIES - PHANTOM VIEWS

UA1405J

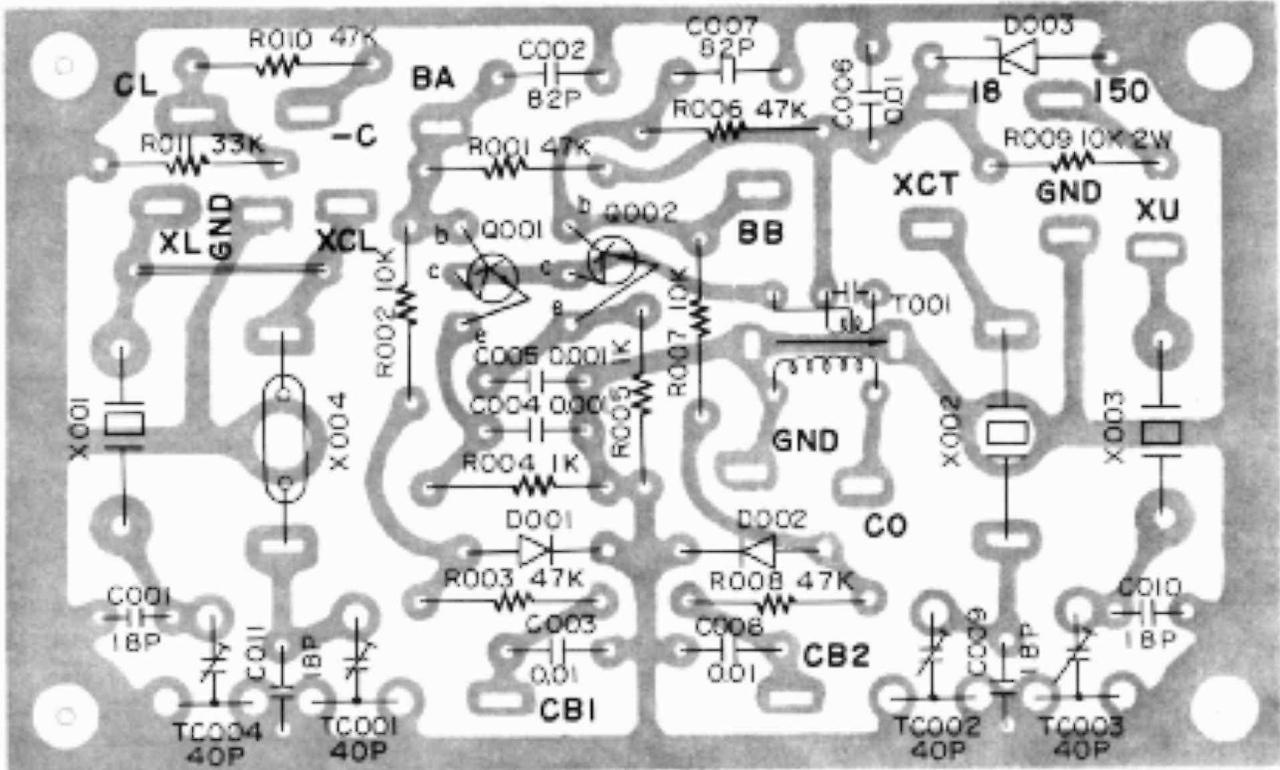


Q001,002 ; 25C373 D001,002 ; 1N60 D003 ; 5Z-200-18 25C373

BOTTOM VIEW OF TRANSISTOR



UC1502J

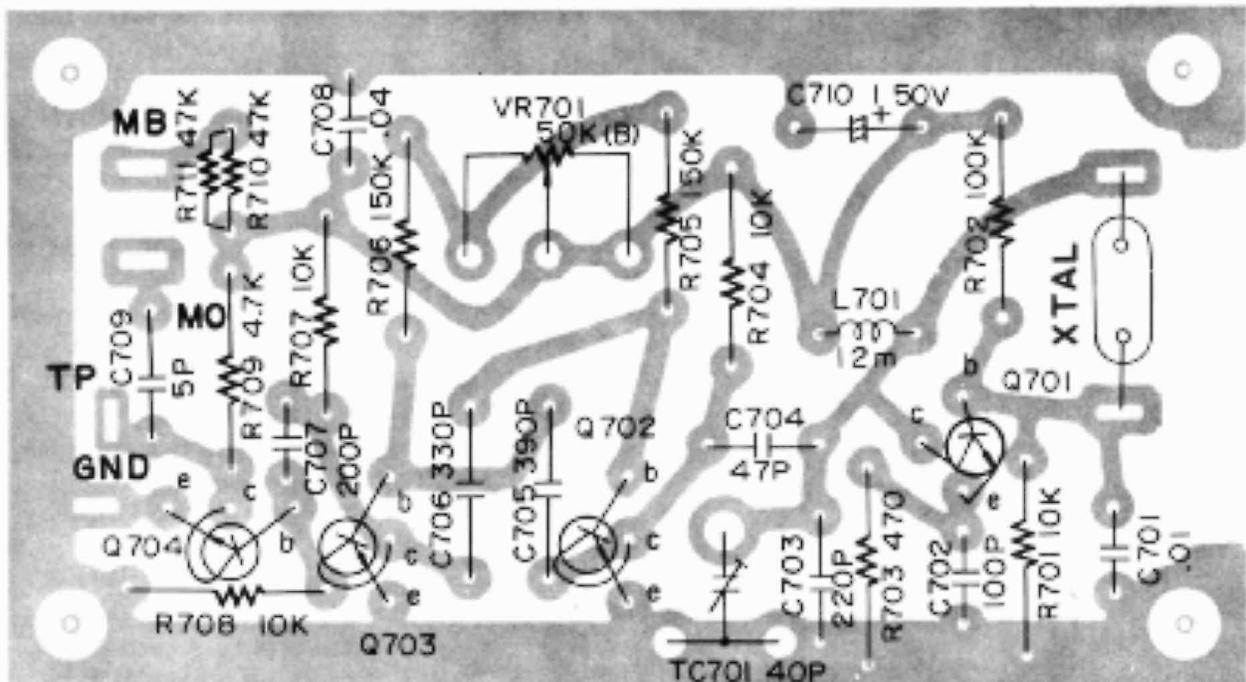

Q701~704 ; 25C373

ALIGNMENT PROCEDURE

I. General Description

This manual describes the adjusting sequence and procedures of the transmitter, receiver and accessory circuits of the Model TS-510 SSB transceiver.

II. Preliminary Operations

1. Checking the parts

- 1) Check the crystals and vacuum tubes.
- 2) Plug of VFO remote terminal
- 3) Connect a 8Ω (3W) dummy resistor to the PHONES terminal.

2. Setting the variable resistors and others

- 1) Final bias VR (VR6) Fully clockwise position
- 2) UC-1204J S meter SENSE VR (VR301) Fully clockwise position
- 3) UC-1501J CAR. LEVEL VR (VR601) Fully counter-clockwise position
- 4) RF GAIN VR (VR3) Fully clockwise position
- 5) UC-1405J T001 core Fully clockwise position
- 6) Set the antenna switch to REC.

3. Checking the voltages (receiving condition)

Use a DC vacuum tube voltmeter to measure the DC voltages.

Use a moving iron type meter higher than Class 2.5 to measure the AC voltages.

1) DC (+)

- (1) Power connector terminal No. 4 +150V
- (2) Power connector terminal No. 7 +210V \pm 10V
- (3) Power connector terminal No. 10 +300V \pm 10V

2) DC (-)

- (1) Power connector terminal No. 1 -90V \pm 10V
 - (2) RB relay (RL1) pin 1 0V
 - (3) TB relay (RL1) pin 5 Approx. -40V
 - (4) Final bias S2001 1st grid (pin 5) Approx. -70V
- (Note) When connecting the measuring terminal to the first grid, be sure not to short it to another circuit.

3) AC (heater voltage)

- (1) Power connector terminal No. 5 12.5V \pm 1V
- (2) Power connector terminal No. 8 12.5V \pm 1V
- (3) HL terminal located on UC-1204J 6.3V \pm 0.5V

4. Others

- 1) In principle, the STAND BY switch should be placed at REC during the receiver adjustment and preliminary stages.
- 2) When I_p more than 150mA is flowing, the final stage should always be kept completely tuned.

III. Receiver Adjustment

1. Heterodyne crystal oscillator

1) Purpose

To set heterodyne crystal in oscillation.

2) Measuring instrument

RF vacuum tube voltmeter

3) Adjusting procedures

- (1) Connect the RF vacuum tube voltmeter to the GPP terminal of the UC-1112J with a $0.01\mu\text{F}$ (titanium variable condenser 500WV) in between.

- (2) Set the band switch to:

3.5MHz L855

7 MHz L854

14 MHz and adjust the cores L853 located in the

21 MHz L852

28 MHz L851

UC-1110J of the coil pack to a point 10% lower than when maximum oscillation is obtained.

- (3) Check that oscillation is obtained in the 28.5MHz and 29.1MHz bands as well.

- (4) Disconnect the $0.01\mu\text{F}$ condenser.

2. BPF filter

1) Purpose

To obtain a required bandwidth by adjusting the bandpass filter (BPF).

2) Measuring instruments

Sweep generator

Detector

Oscilloscope

3) Adjusting procedures

- (1) Connect the output of the sweep generator through a $0.01\mu\text{F}$ condenser to the first grid (pin 1) of the 6BC6 of the UC-1112J.


- (2) Set the band switch to 28MHz.

- (3) Disconnect the VFO remote terminal.

- (4) Connect the terminals P and TP2 located in the UC-1204J.

- (5) Connect the detector to the terminal TP1 located in the UC-1204J.

- (6) Adjust the L305 (yellow), L306 (green) and

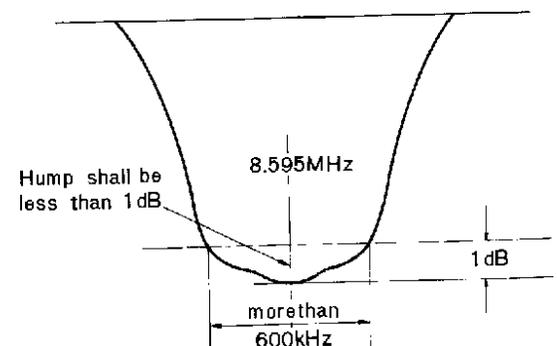

L307 (blue) so that a characteristic curve such as shown below can be obtained.

(Note) One dB corresponds to approx. 1/10 of the total amplitude.

The center frequency is 8.595MHz as shown.

(7) After obtaining the required characteristic, lock the L305, L306 and L307 by the use of wax material.

(8) Remove the 0.01 μ F condenser and detector, disconnect jumper wire from the P and TP2, connect the P and TP1 with a lead, and solder the joints.

(9) Put the connector in the VFO remote terminal.

IFT and crystal filter

1) Purpose

To adjust the IFT to 3.395MHz and shape the waveform of the crystal filter.

2) Measuring instrument

Slow sweep generator

Detector

Afterglow type oscilloscope

3) Adjusting procedures


(1) Connect the sweep output through a 0.01 μ F condenser to the first grid (pin 1) of the 6CB6 of the UC-1204J. (Output approx. 0.1V)

(2) Connect the AGC terminal to GND.

(3) Connect the detector to the plate (pin 5) of the IF final-stage 6BA6 (V306).

(4) Increase the sweep speed (to approx. 10m/cm), plot the characteristic of the IF stage on the oscilloscope, and adjust the L303 and L309. Since the L303 is a double tuning IFT, adjust both the upper and lower cores.

(5) Next, reduce the sweep speed (to approx. 0.5 sec/cm), get the waveform of the crystal filter plotted, and adjust the L301 and L308 to adjust the waveform of the crystal filter as shown below.

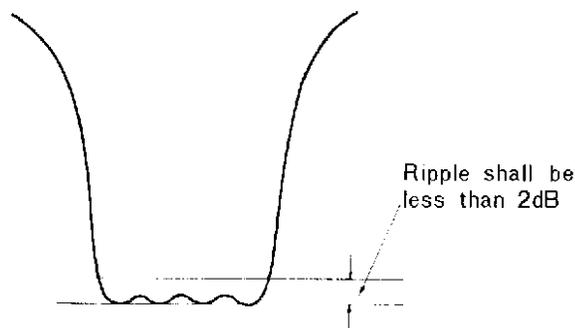

(6) Reduce the ripple to a minimum by adjusting the 3.4MHz trap of the L304 (white).

If the L304 has practically no effects on the waveform, place the core in the innermost position.

(7) Disconnect the 0.01 μ F condenser and detector, and disconnect the AGC from GND.

(8) While keeping watch on the S meter, retune the L309 so that S will reach a maximum.

4. Zero adjustment of S meter

1) Purpose

To adjust the base point of the S meter to the position 0 of the meter.

2) Measuring instrument

None required

3) Adjusting procedures

(1) Connect the AGC terminal of the UC-1204J to GND.

(2) Adjust the pointer of the meter to the zero point of Ip (not the zero point of S) by the ZERO ADJ VR (VR7) located in the rear of the chassis.

(Note) The pointer hardly swings toward the negative direction because of a diode. So care must be taken to adjust the pointer precisely to 0.

(3) Disconnect the AGC terminal from GND.

(4) Change over the MODE switch to each position and check to ensure that the pointer of the meter remains stationary in each position.

(5) Rotate the RF GAIN VR (VR3 on the front panel) fully counter-clockwise and check that the pointer of the S meter swings full scale. Thereafter, rotate the VR back to fully clockwise position.

5. Carrier oscillator

1) Purpose

To adjust the carrier oscillator and oscillation frequency.

2) Measuring instruments

RF vacuum tube voltmeter (the same as in III, 1)

Frequency counter

3) Adjusting procedures

(1) Remove the connector from the VFO remote terminal.

(2) Connect the RF vacuum tube voltmeter to the terminal CO of the UC-1405J through a 10pF condenser (titanium condenser 250WV for example), and adjust the T001 so that the USB, LSB and CW crystal units will provide a maximum oscillation strength as read on the vacuum tube voltmeter.

(3) Connect the counter to the terminal CO through a 10pF condenser and adjust the trimmers so that the specified frequency in each mode can be obtained.


ALIGNMENT PROCEDURE

USB 3396.5kHz (± 10 Hz) TC003
 LSB CW 3393.5kHz (± 10 Hz) TC004

- (4) Set the STAND BY switch to SEND and adjust the CW transmitting frequency.

CW 3394.3kHz (± 10 Hz) TC002

- (5) Set the STAND BY switch to REC.
 (6) Set the TC001 to the same blade (of the trimmer) position as the TC002.

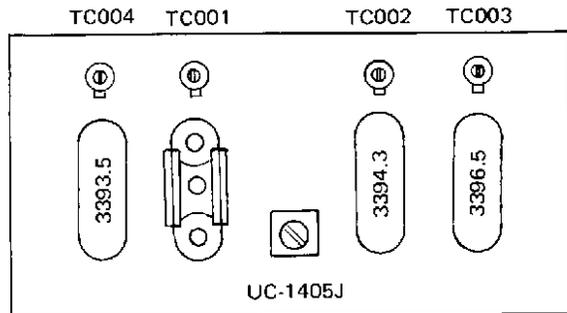

6. Coil pack

1) Purpose

To achieve the antenna RF tuning of the coil pack.

2) Measuring instruments

SSG

Oscilloscope

AF vacuum tube voltmeter

3) Adjusting procedures

- (1) Connect the SSG output to the BEC ANT terminal and set the ATT to 40dB. (Non-modulation signal)
 (2) Connect the oscilloscope AF vacuum tube voltmeter to the 8Ω dummy resistor of the PHONES terminal so that observation can be made.
 (3) Set the DRIVE knob of the front panel to the 12 o'clock position. In this case, make sure that the DRIVE knob has no divisional differences at both sides.

- (4) Set the BAND switch to
- | | |
|---------|-----|
| 3.5MHz | |
| 28.5MHz | |
| 21 MHz | and |
| 14 MHz | |
| 7 MHz | |

adjust SSG frequencies and VFO frequencies to

3.750MHz	
28.800MHz	
21.225MHz	to produce approx. 1,000Hz beat.
14.175MHz	
7.150MHz	

L901, L951

L905, L955

Next, adjust the coil cores

L904, L954

L903, L953

L902, L952

of coil packs UC1109J and UC-1108J

so that maximum S meter indication and beat note can be obtained.

- (Note 1) If you fail to observe the correct band adjusting sequence, proper adjustment will become impossible. Tune the 3.5MHz L951 (UC-1108J) core on the innermost side and the other cores on the outermost side.

- (Note 2) Be careful not to damage the cores, If there is any core that fails to rotate smoothly, inject white powder (acro wax) and make sure that it rotates smoothly before adjusting it.

7. 8.6MHz trap

1) Purpose

To improve IF rejection by adjusting 8.6MHz trap.

2) Measuring instruments

SSG

AF vacuum tube voltmeter

Oscilloscope

3) Adjusting procedures

- (1) Connect the 8Ω load, AF vacuum tube voltmeter and oscilloscope to the PHONES terminal.
 (2) Adjust the SSG frequency to 8.595MHz and supply 100dB input signal to the REC ANT terminal.
 (3) Set the BAND switch to 14MHz and adjust the DRIVE knob to the 12 o'clock position.
 (4) Adjust the VFO dial to 300 or thereabouts and obtain beat output. Adjust the 8.6MHz trap (L6) so that the output will be reduced to a minimum.

8. S meter sensitivity

1) Purpose

Adjust the pointer of the S meter to S9 with specified input.

2) Measuring instrument

SSG

3) Adjusting procedures

- (1) Check that the RF GAIN VR (VR3) is set to fully clockwise position.
 (2) Set the BAND to 14MHz, supply 14.2MHz 40dB SSG signal from the REC ANT, and tune the DRIVE and VFO. (Signal: Non-modulation signal)
 (3) Adjust the SENSE VR (VR-301) of the S meter located on the UC-1204J so that the S meter will point to S9.

- (Note) After the above adjustment, check for "carrier leak".

Carrier leak sometimes occurs, depending on the carrier position or the waveform unbalance of the filter (XF-1). Check for

carrier leak by the following procedures.

- (1) After the 8-3-(3) adjustment, rotate the RF GAIN VR gently counter-clockwise and hold it at a point just before the S meter indication increases from S9.
- (2) Next, turn off the SSG output and check that the S meter gives an indication of more than S7.
- (3) Place the RF GAIN VR in fully clockwise position.

25kHz multivibrator

1) Purpose

To adjust the frequency of the 25kHz multivibrator.

2) Measuring instrument

Frequency counter

3) Adjusting procedures

- (1) Connect the counter to the TP terminal of the UC-1502J through a 10PF/condenser (titanium condenser 250WV for example).
- (2) Insert the 100kHz crystal.
- (3) Set the AGC/CAL switch to 25kHz, operate the multivibrator, and adjust the Multi Adj VR701 so that a reading of approx. 25kHz can be taken from the counter.
- (4) Next, adjust the TC701 so that a reading of exactly 25kHz (± 2 Hz or less) can be taken from the counter.
- (5) Remove the 100kHz crystal.

(Note) Do not forget to remove the 100kHz crystal.

1. ANTI TRIP VR

1) Purpose

To adjust the ANTI TRIP VR.

2) Measuring instruments

AF generator

DC vacuum tube voltmeter

AF vacuum tube voltmeter

Oscilloscope

3) Adjusting procedures

- (1) Inject 1,000Hz AF signal into the middle point of the AF GAIN VR (front panel) and adjust the input so that 100mW output will be available from the PHONES terminal.
- (2) Adjust the ANTI TRIP VR (VR9) so that the DC voltage at the D605 located in the UC-1501J will become 0.5V.

1. PIT

1) Purpose

To adjust to transmitting frequency with the PIT knob at 0 position.

2) Measuring instruments

AF generator

Oscilloscope

3) Adjusting procedures

(Adjust on the basis of Lissajous figure.)

- (1) Set the SWEEP RANGE of the oscilloscope to EXT HORIZONTAL and supply AF generator output (1,000Hz 1V) to the H terminal.
- (2) Adjust the RIT knob (front panel VR8) to exactly 0 and push the RF GAIN VR switch (front panel VR3) in.
- (3) Supply 14.2MHz 40dB (non-modulated) SSG input signal to the REC ANT terminal and obtain approx. 1,000Hz beat note. In this case, adjust the knob of each stage so that the signal can be received with a maximum sensitivity.
- (4) Supply the received output to the V terminal of the oscilloscope and adjust the VFO dial minutely until the Lissajous figure stops. In this case, the figure should be a circle.
- (5) Pull the RF GAIN VR knob toward you, set the RIT to OFF, and adjust the RIT "0" ADJ VR (VR402) located on the UC-1304J so that the Lissajous figure of the oscilloscope will become a circle again.

(Note) The adjustment of Item (5) must be finished in less than a minute. If it cannot be finished in less than a minute, go over again from the adjustment of Item (4).

- (6) Remove the SSG, AF generator and oscilloscope.

IV. Transmitter Adjustment

1. Final bias

1) Purpose

To set the final base current.

2) Measuring instrument

None required

3) Adjusting procedures

- (1) Remove the connector from the VFO remote terminal and set the DRIVE knob to the 9 o'clock position.
- (2) Set the MODE switch to LSB, the BAND switch to 14MHz, and the STAND BY switch to SEND.
- (3) Set the METER switch to I_p and adjust the BIAS VR (VR6) so that I_p will become 60mA.
- (4) At this point, rotate the FINAL VC and check that I_p remains unchanged.
- (5) Return the STAND BY switch to REC and connect the VFO connector.

2. BM stage IFT and carrier level and RF meter sensitivity

1) Purpose


To adjust the 3.395MHz IFT of the BM stage and to set the CW carrier level and RF meter sensitivity.

2) Measuring instrument

75 Ω dummy or power meter (100W or more)

3) Adjusting procedures

- (1) Connect the 75Ω dummy to the ANT terminal.
- (2) Set the BAND to 14MHz, the VFO to 14.175MHz, the DRIVE knob to the 12 o'clock position, and the FINAL variable condenser to the 14MHz position (division).
- (3) Set the MODE switch to CW.
- (4) Set the STAND BY switch to SEND, make I_p dip adjustment quickly, and adjust the DRIVE, FINAL and LOAD knobs so that the power will reach a maximum.
- (5) Next, set the meter changeover switch to ALC and adjust the L605 of the UC-1501J from behind the chassis so that ALC will reach a maximum. The core has two tuning positions. Make the adjustment at the position shown below.

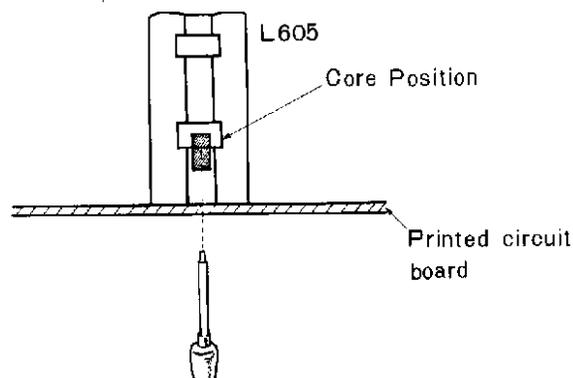

- (6) In this condition, return the STAND BY switch to REC.
 - (7) Approx. 1 minute thereafter, set the switch again to SEND and adjust all the knobs so that the power will reach a maximum.
 - (8) Set the meter switch to ALC and reduce carrier injection until the ALC deflection comes to the 150mA position on the I_p scale.
 - (9) Retune each section and check that the specified value of ALC deflection is obtained.
 - (10) In this condition, adjust the deflection of the RF meter (VR10) located in the rear of the chassis to the 200mA position.
 - (11) Return the STAND BY switch to REC.
 - (12) Set the switch to SEND, adjust each knob, and check that more than 80W 3.530MHz power is available.
 - (13) Similarly, check that more than 80W 7.050MHz and 21.2MHz powers are available.
 - (14) Similarly, check that more than 50W 28.3MHz, 28.8MHz and 29.4MHz powers are available.
- (Note) a. If the final stage is out of tuning, there is danger of damage to the S2001. So be sure to tune the final stage completely and quickly.

- b. When I_p more than 15mA is used for adjustment, it is desirable to turn it on for one minute and off for 20 seconds for example.

3. 14.13MHz trap

- 1) Purpose
To reduce spurious radiation near 14.13MHz.
- 2) Measuring instruments
 75Ω dummy (power meter)
Synchroscope
- 3) Adjusting procedures
 - (1) Connect the 75Ω dummy to the ANT terminal.
 - (2) Turn the ATT of the synchroscope to the minimum position and connect the probe to the ANT terminal. Set the SWEEP RANGE of the synchroscope to approx. 2cm/sec.
 - (3) Set the BAND switch and VFO to 14.13MHz and adjust each knob so that a maximum power can be obtained.
 - (4) Adjust the ATT of the synchroscope to obtain a proper amplitude and adjust the VFO so that the number of envelope ripples will be 4 to 5.
 - (5) Next, reduce the ripples to a minimum by adjusting the trimmer (TC301) of the 14.13MHz trap inserted in the cathode of the V302 6GH8A of the UC-1204J.
 - (6) Set the STAND BY switch to REC.

(Note) Limit the time ratio of transmission to reception to 3 : 1. (Transmission 3 : 1 Reception)

4. Neutralization adjustment

- 1) Purpose
To stabilize operation by the RF neutralization of the S2001.
- 2) Measuring instruments
 75Ω dummy (power meter)
RF vacuum tube voltmeter
- 3) Adjusting procedures
 - (1) Connect the 75Ω dummy to the ANT terminal.
 - (2) Obtain maximum output at 21.225MHz (CW).
 - (3) Set the STAND BY switch to REC and cut off the plate screen voltage of the S2001.

(Note) When the circuit is cut off directly, care must be taken to prevent electrical shock.

 - (4) Connect the RF vacuum tube voltmeter to the ANT terminal, set the STAND BY switch to SEND, and adjust the neutralizing variable condenser (VC) located in the final shield box so that the RF vacuum tube voltmeter will give a minimum deflection.
 - (5) Return the STAND BY switch to REC, remove the RF vacuum tube voltmeter, and return the plate screen circuit to the original state.
 - (6) Set the switch to SEND again and check that the power is available as before.

(7) Return the switch to REC.

- (Note) 1. Pay special heed to electrical shock.
2. Turn off the final-stage tube at a ratio of 3 : 1 against the transmission time.

5. BM and carrier position

1) Purpose

To adjust the carrier position by balancing the balanced mixer.

2) Measuring instruments

AF generator
AF vacuum tube voltmeter
75 Ω dummy (power meter)
RF vacuum tube voltmeter

3) Adjusting procedures

- (1) Connect the 75 Ω dummy and RF vacuum tube voltmeter to the ANT terminal.
- (2) Set the MODE switch to CW, adjust the frequency to 14.2MHz, and adjust each knob so that a maximum power can be obtained.
- (3) Next, set the MODE switch to LSB and adjust the balancing VR (VR602) and trimmer (TC601) of the UC-1501J so that the RF vacuum tube voltmeter will give a minimum indication.
- (4) Set the RANGE of the RF vacuum tube voltmeter to a position where a maximum voltage can be obtained, supply 7mV 1,500Hz AF signal to the microphone terminal, and adjust the output to 50W by adjusting the MIC GAIN VR (VR2).
- (5) Next, change over the frequency of AF signal to 400Hz and 2,600Hz and make fine adjustment of the trimmer TC005 located in the UC-1405J (carrier unit) so that the output difference between 400Hz and 2,600Hz will be reduced to less than 5W.
- (6) Set the MODE switch to USB and make fine adjustment of the trimmer TC003 so that the output difference between AF signal 400Hz and 2,600Hz will be reduced to less than 5W as in Item (5).
- (7) Disconnect the AF generator from the MIC terminal and rotate the MIC GAIN VR fully counter-clockwise.
- (8) Set the MODE switch to LSB again and adjust the trimmer of the balancing VR of the UC-1501J so that RF vacuum tube voltmeter will give a minimum indication. (The same procedures as in Item (3))
- (9) Set the MODE switch to USB. If the RF vacuum tube voltmeter gives a larger indication, adjust the VR and trimmer to points where the RF vacuum tube voltmeter at USB and LSB give the same minimum indication, and let the reading of the RF vacuum tube voltmeter at the time be A.

(When the MODE switch is changed over from LSB to USB, if the RF vacuum tube voltmeter gives a lower indication, do not readjust the VR and trimmer but let the reading at LSB be A.)

- (10) Turn the ATT of the RF vacuum tube voltmeter to the maximum position.
 - (11) Supply 7mV 1,500Hz AF signal to the MIC terminal of the UC-1501J and check that more than 80W power is available. Let the reading of the RF vacuum tube voltmeter be B.
 - (12) Check that the difference between the RF vacuum tube voltmeter readings A and B is more than 40dB.
- (Note) Limit the time ratio of transmission to reception to 3 : 1.

6. MIC GAIN

1) Purpose

To set the MIC GAIN VR.

2) Measuring instruments

AF generator
AF vacuum tube voltmeter

3) Adjusting procedures

- (1) Disconnect the connector from the VFO remote terminal.
- (2) Set the MODE switch to USB.
- (3) Supply 7mV 1,500Hz AF signal to the MIC terminal located in the UC-1501J.
- (4) Set the STAND BY switch to SEND and adjust the MIC GAIN VR (VR2) located in the rear of the chassis so that AF voltage 400mV will be available at the BM terminal of the UC-1501J.
- (5) Return the STAND BY switch to REC and put the connector in the VFO remote terminal.

7. VOX operation

1) Purpose

To set the gain and time constant of the VOX circuit.

2) Measuring instruments

AF generator
AF vacuum tube voltmeter
Watch (stop watch or wrist watch with second hand)

3) Adjusting procedures

- (1) Disconnect the connector from the VFO remote terminal.
- (2) Set the STAND BY switch to VOX and adjust the VOX SENSE VR (VR603) of the UC-1501J to a point just before the neon tube makes discharge.
In this case, do not supply input signal to the MIC terminal.
- (3) Next, supply 7mV 1,500Hz AF signal to the MIC terminal of the UC-1501J and increase the VOX gain by the VOX GAIN VR (VR1) until the relay starts operation.

- (4) If the relay starts operation, cut off the AF input signal, and adjust the TIME CONST VR (VR5) so that the relay will be reset in approx. 1 second after that instant.
- (5) Return the STAND BY switch to REC and put the VFO connector in the original position.

8. SIDE TONE

1) Purpose

To set the output level of side tone and to check semi-break-in operation.

2) Measuring instruments

75Ω dummy (power meter)

Key, AF vacuum tube voltmeter

Oscilloscope

3) Adjusting procedures

- (1) Connect the dummy to the ANT terminal and connect the AF vacuum tube voltmeter and oscilloscope to the PHONES terminal.
- (2) Set the STAND BY switch to SEND, set the MODE switch to CW, and adjust each knob so that a maximum power will be available at 14.2MHz.
- (3) Check that when the key is inserted into the key jack, RF output is reduced to zero.
- (4) Check that when the key is pushed, the power is available as before. Thereafter, adjust the side tone VR (VR401) located in the UC-1304J so that side tone AF output 50mW (0.63V/8Ω) will be available.
- (5) Set the STAND BY switch to VOX and check that when the key is pushed, the semi-break-in keying can be done.

V. Instrument Specifications

DC vacuum tube voltmeter

- * Input resistance More than 1MΩ
- * Range 1.5V to 500 F.S.

AC voltmeter

- * Precision class AC voltmeter or Class 2.5 or higher precision moving iron type voltmeter

RF vacuum tube voltmeter


- * Input impedance More than 1MΩ Less than 20pF
- * Range 10mV to 300V F.S.
ATT usable

Sweep generator

- * Center frequency 8.6MHz
- * Frequency deviation Max. ±500kHz or more
- * Output voltage Approx. 0.1V
- * Sweep speed 50Hz
- * Marker Preferably obtainable at three

points, 8.3MHz, 8.6MHz and 8.9 MHz

Detector

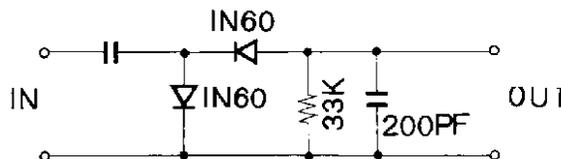

Oscilloscope

Slow sweep generator

- * Center frequency 3.395kHz
- * Frequency deviation Max. ±5kHz
- * Output voltage More than 0.1V
- * Sweep speed Minimum 0.5 sec/cm

Afterglow oscilloscope

- * Has afterglow characteristic. More than 1 sec
- * Both vertical and horizontal amplifiers are DC amplifiers.

SSG

- * Frequency 3.0 to 30MHz
- * Output 0dB/μV to 120dB/μV
- * No modulation and little frequency modulation component

Frequency counter

- * Minimum input voltage Less than 50mV
- * f max. More than 10MHz

AF vacuum tube voltmeter

- * Frequency 100 to 10kHz
- * Input resistance More than 1MΩ
- * Range 10mV to 30V FS

AF generator

- * Output impedance Less than 600Ω
- * Output voltage Max. 1V
- * Frequency 300 to 5kHz
- * Distortion factor Less than 0.5% (at 1,500Hz)

75Ω dummy

- * Frequency 3.5 to 30MHz
- * Power More than 100W
- * 50Ω dummy also usable

Synchroscope

- * F max. 30MHz
- * One which permits easy synchronization.
- * Maximum input RF voltage More than 100V


PARTS DESCRIPTION LIST

PS510

MAIN CHASSIS (MA5J) SECTION			
PRINTED CIRCUIT			
Constant Voltage Block (UC1004J)			
Rectification Block (UC1005J)			
Symbol No.	Description	Part No.	Re- marks
CAPACITORS			
C1, 2	Oil Impregnated Paper 0.01 μ F \pm 20%		
C3, 4	Electrolytic Block 40 μ F x 2P x 2 350WV		
C5, 6	Ceramic 0.01 μ F		
C7, 8	Electrolytic Block 100 μ F 500WV		
C9	Electrolytic Block 40 μ F x 4P 350WV		
C10	Oil Impregnated Paper 0.01 μ F \pm 20%		
RESISTORS			
R1	Fixed Carbon Composition 100k Ω \pm 10% 1/2W		
R2, 3	Fixed Carbon Composition 470k Ω \pm 10% 1/2W		
R4, 5	Insulated Carbon Film 1.5k Ω \pm 5% BW		
R6, 7	Insulated Carbon Film 2.2k Ω \pm 5% BW		
MISCELLANEOUS			
—	Case	A01-MA5J	
—	Chassis	A03-MA5J	
—	Panel	A05-MA5J	
—	Reticular Board	A10-MA31	
—	Lead Holder	A4880	
—	Patch	A5044	
—	Address	B59-0001-00	
—	Bracket (for neon lamp)	E03-16	
—	Lug x 2	E04-101	
—	Lug x 2	E04-202	
—	Square-shaped Concent (Jack)	E07-212C	
—	Square-shaped Concent (Jack)	E07-212B	
—	Square-shaped Concent (Plug)	E09-212C	
—	Leg x 4	G10-02	
—	Leg x 2	G10-08	
—	Cord Bushing	G10-11	
—	Accessory of Corrugated Cardboard Case	H01-MA5JA	
—	Accessory of Corrugated Cardboard Case	H01-MA5JB	
—	Polyethylene Cover	H02-117	
—	Corrugated Cardboard Case	H04-MA5J	
—	Instruction Manual	H05-MA5J	
—	Bag (for Accessory)	H08-043	
—	Instruction Bag	H08-07	
—	Inspection Card	H12-01	
—	Price Card	H18-MA5J	
—	Card	H31-46	
—	Guide	H41-46	
—	AC Filter Choke	L20-150	
—	Decorative Screw x 4	N11-41	
—	Thumb Screw	N4006	
V.R.	Potentiometer 20k (B)	R10-111	
—	Fuse Holder	S15-03B	
F	Fuse (8A)	S17-08	
P.T.	Power Transformer	T01-217A	
—	Filter Choke	T03-13	
—	Speaker	T07-0004-05	
—	P.V.C Insulated Wire (Black, 0.5 ϕ) 0.7m	W02-50	
—	P.V.C Insulated Wire (Yellow, 0.5 ϕ) 1.6m	W02-54	
—	P.V.C Insulated Wire (Blue, 0.5 ϕ) 0.6m	W02-56	

Symbol No.	Description	Part No.	Re- marks
—	P.V.C Insulated Wire (White, 0.5 ϕ) 1.1m	W02-59	
—	P.V.C Insulated Wire (Black, 0.8 ϕ) 0.3m	W02-80	
—	P.V.C Insulated Wire (Red, 0.8 ϕ) 1.1m	W02-82	
—	P.V.C Insulated Wire (Yellow, 0.8 ϕ) 0.7m	W02-84	
—	P.V.C Insulated Wire (White, 0.8 ϕ) 0.6m	W02-89	
—	Tinned Wire (0.8 ϕ) 0.2m	W03-08	
—	Tinned Wire (1.2 ϕ) 0.3m	W03-12	
—	AC Cord	W09-01	
—	Cord	W12-120	
—	Vinyl Tube (Black, Layflat Width 6.5m/m)	W17-17	
—	Decorative Screw (⊖MH3 x 6-F.B) x 2		
—	Screw (⊕2.6 x 6-F) x 2		
—	Screw (⊖P3 x 6-F) x 10		
—	Screw (⊕P4 x 6-F) x 8		
—	Screw (⊕P4 x 8-F) x 4		
—	Screw (⊕P6 x 20-F)		
—	Flat Head Screw (S3 x 6-F) x 4		
—	Flat Head Screw (S3 x 10-F) x 4		
—	Nut (N3-F) x 4		
—	Nut (N6-F)		
—	Flat Head Washer (W4-F) x 12		
—	Washer (Special, W6 x 13 x 1-F) x 2		
—	Spring Washer (SW6-P)		
CONSTANT VOLTAGE (UC1004J) SECTION			
—	Printed Circuit Board	S23-277	
V201	Tube (6BM8)		
R201	Fixed Carbon Composition 470k Ω \pm 10% 1/2W		
R202	Fixed Carbon Composition 100k \pm 10% 1/2W		
R203	Fixed Carbon Composition 1k \pm 10% 1/2W		
R204	Fixed Carbon Composition 33k \pm 10% 1/2W		
R205	Fixed Carbon Composition 22k \pm 10% 1/2W		
C201, 202	Ceramic 0.01 μ F +100% -0%		
C203	MP 0.5 μ F \pm 20%		
C204	Ceramic 400PF \pm 10%		
—	Neon Tube (NE-2)	E51-91B	
—	Mold Socket (9P, MT Type)	N4280	
—	Terminal (for Printed Circuit Board)		
RECTIFICATION (UC1005J) SECTION			
—	Printed Circuit Board	S23-278	
D101~4	Silicon Diode SE05c		
D105~8	Silicon Diode SE05b		
D109	Silicon Diode SE05a		
R101~8	Fixed Carbon Composition 470k \pm 10% 1/2W		
R109	Fixed Carbon Composition 2.2k \pm 10% 1/2W		
C101~8	Ceramic 0.01 μ F +100% -0%		
C109, 110	Electrolytic Tubular 40 μ F 160WV	N4085	
—	Terminal (for Printed Circuit Board)		

SCHEMATIC DIAGRAM & SPECIFICATION

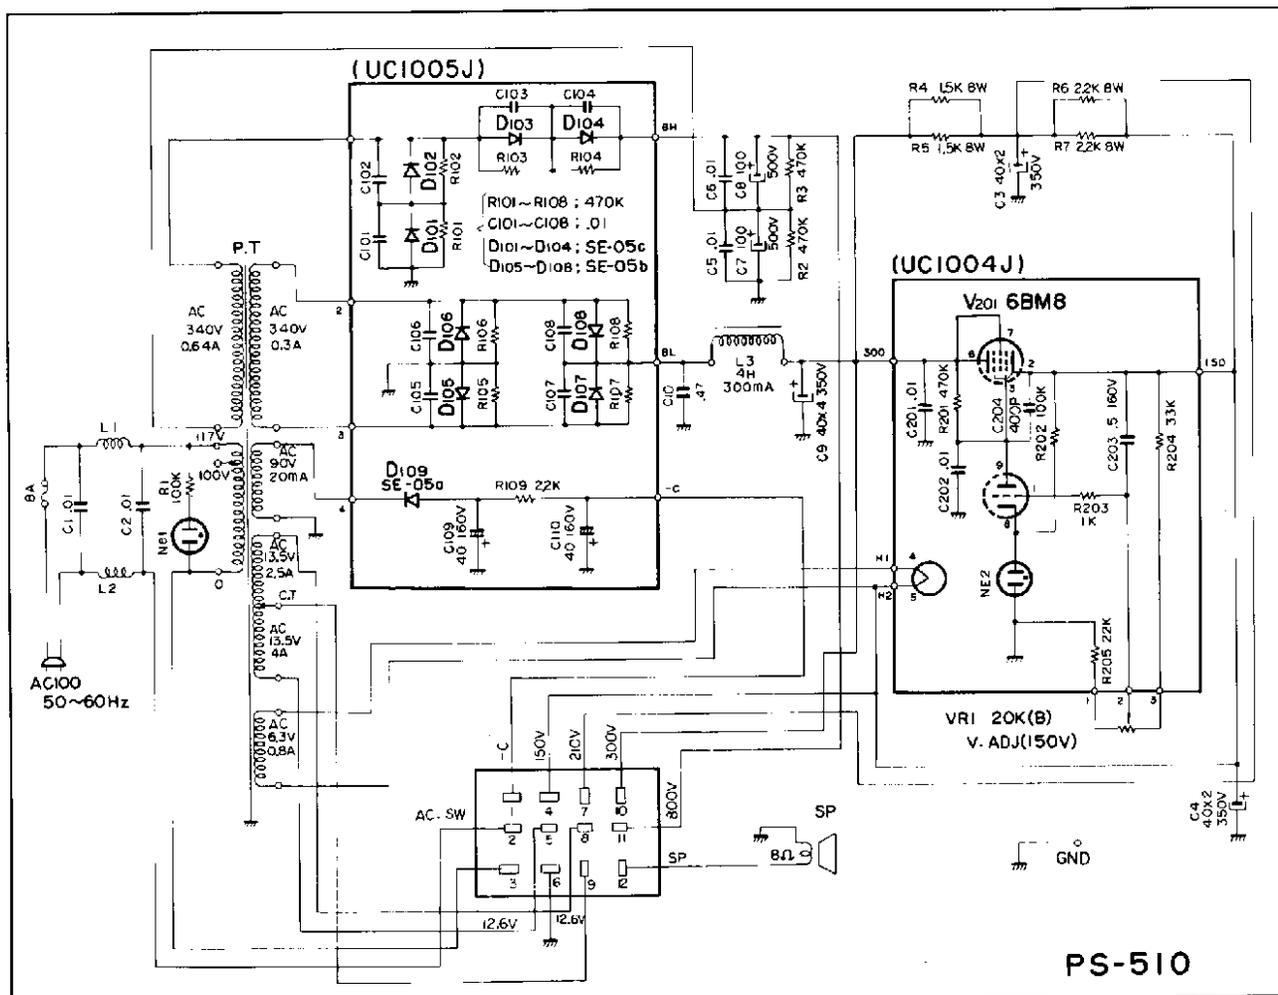

SPECIFICATION

Power Unit

Primary side input: 117 volts, 50/60 Hz
 Secondary side output: (When TS-510 is transmitting CW, and output is 90 W)

Terminal	Voltage (V)	Current (mA)	
900 V	880 (970)	196 (14.3)	DC
300 V	285 (295)	36.5 (10.0)	DC
210 V	202 (212)	64 (56.0)	DC
150 V	150	90 (107.0)	DC
- C	-91	11.1 (13.8)	DC
12.6 V	13.6 (14)	1.07 A (1.09A)	AC
12.6 V	12.7 (13.1)	2.76 A (2.81A)	AC


The above figures are the values measured at the connector section of the TS-510.

The figures in the parentheses are the values measured when receiving in CW mode.

- **Power Consumption:** 360 W (Max.)
- **Speaker:**
 - Diameter: 6-1/2"
 - Impedance: 8Ω
 - Frequency: 150 ~ 5,000 Hz
 - Allowable maximum input: 1.5 W
 - Dimensions: 200 (w) × 180 (h) × 360 (d) mm (excluding legs)
 - Weight: 15 kg


SEALED CIRCUIT ASSEMBLIES - PHANTOM VIEWS

UC1004J

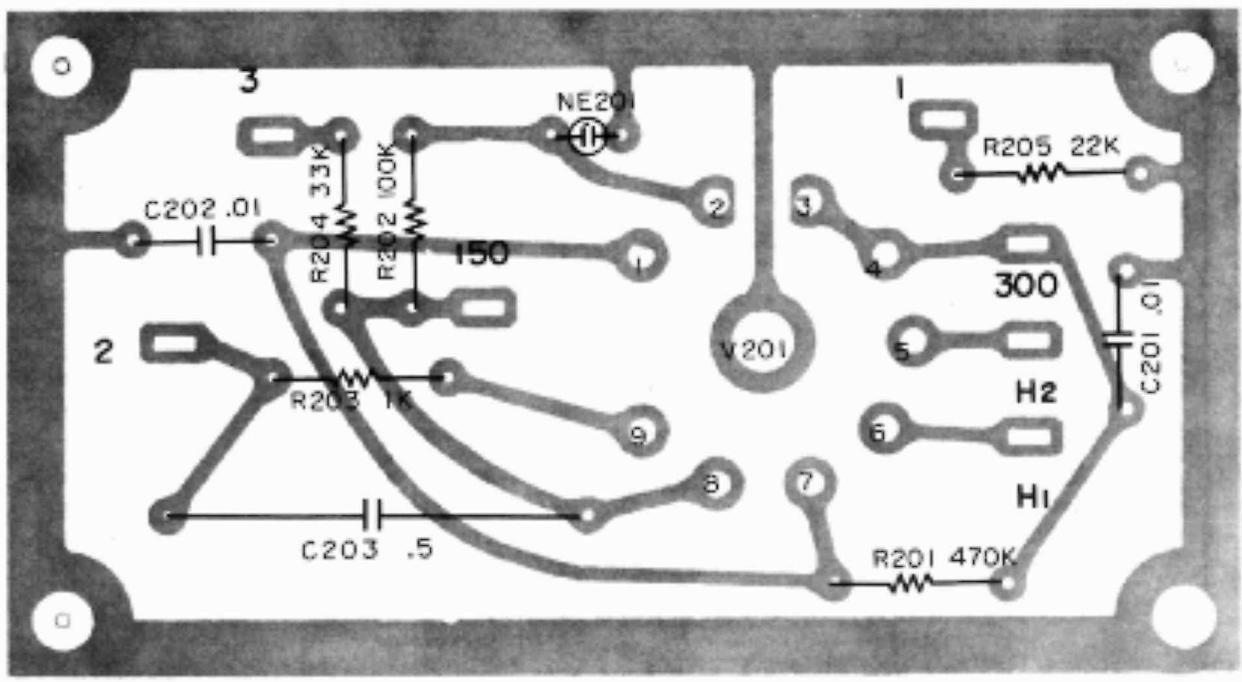

V 201 6BMB

UC1005J

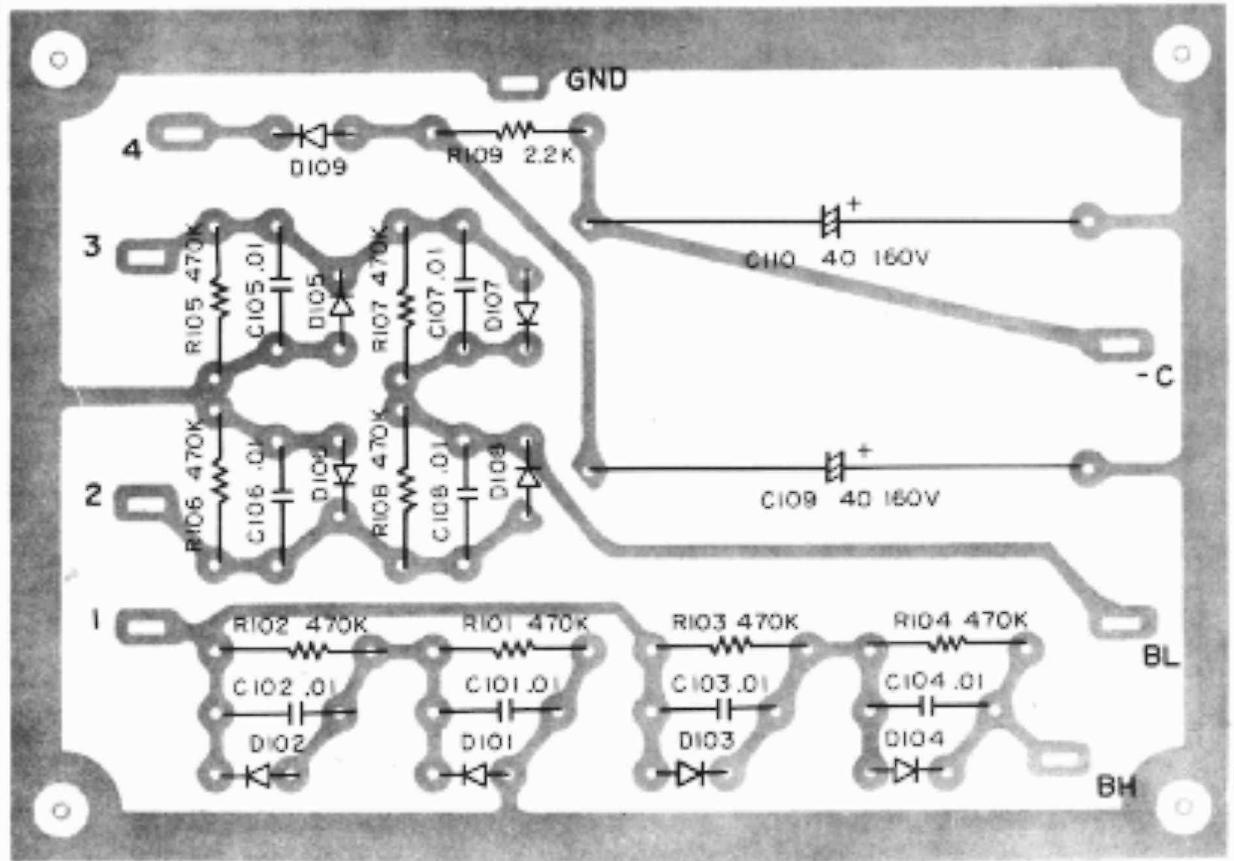

D101~104 SE-05c, D105~108 SE 05b
D109 SE-05a