



ASSEMBLY

Follow the details in the illustration to assemble your speaker. Notice that the two top screws to hold the speaker must be put in place before the grille is put on. Next, remove the protective covering from the back of the grille, and press it firmly against the cabinet front.

Slide the heads of two of the 4-36 x 1/2" screws into the back of the trim strip. Position the screws to line up with the bottom mounting holes for the speaker. Now insert the screws through the grille, the cabinet, and the speaker. Use two lockwashers, and tighten nuts over the screws. Mount the other trim strip at the bottom front of the cabinet in the same way.

Mount the four rubber feet as shown in the illustration. Notice that the cable clamp mounts on one screw with a lockwasher and another nut.

Remove the protective covering from the back of the "k" label. Press it firmly onto the grille in the upper right corner as shown in the photograph.

Position your speaker where desired. Connect a cable (or two wires) between the terminal strip on the speaker and the speaker terminals on your receiver.