

NOTICE

This Equipment is also built for operation from a 115 volt ($\pm 10\%$), 25 cycle power source. When it is so furnished, this manual is applicable, but all references to "115 volt ($\pm 10\%$), 50/60 cycle" are understood to mean "115 volt ($\pm 10\%$), 25 cycle".

TABLE OF CONTENTS

	Page
SECTION 1. DESCRIPTION	1 to 3
1.1 General	1
1.2 Output Circuit	2
1.3 Antenna Requirements	2
1.4 Power Supply	3
1.5 Tube Complement	3
1.6 Loud Speaker	3
SECTION 2. INSTALLATION	4
2.1 General	4
2.2 Loud Speaker Mounting	4
SECTION 3. OPERATING INSTRUCTIONS	4 to 8
3.1 Controls	4
3.2 MCW or Phone Reception	6
3.3 CW Reception	7
3.4 Measurement of Signal Strength	7
SECTION 4. ALIGNMENT	8 to 12
4.1 General	8
4.2 I.F. Amplifier Alignment	9
4.3 H.F. Oscillator Alignment	10
4.4 First Detector and R.F. Amplifier Alignment	11
4.5 Tracking of High Frequency Circuits	11
4.6 S-Meter Adjustment	12