

PARTS LIST

NC-140

ALL READILY AVAILABLE RESISTORS AND CAPACITORS ARE OMITTED FROM THE FOLLOWING PARTS LIST, BUT ARE COMPLETELY IDENTIFIED ON THE SCHEMATIC

A-12617	Panel Terminal (Speaker)		A-50148-52	Hose Clamp, BFO
E-265-28	Panel Terminal (Antenna)		B-50188-4	Iron Core, BFO
B-27669-3	Socket, 7 Pin		B-50470	Coil BFO
B-27668-1	Socket, 9 Pin		A-50421	Spring Slug Screw, BFO
B-27674-1	Socket, Octal		B-K641-20	Coil Shield, with Fasteners, BFO
B-22025-3	Transformer, Output	T15	C-50437-5	Window, Main Tuning
C-50719	Transformer, Power	T14	B-50631-1	Bandsread Dial Ass'y
C-19458-5	Capacitor Electrolytic	C54	A-50439	Spring, Bandsread
A-50137	Capacitor Mica Trimmer— 1.5-20 uuf C62 through C71		B-50648-1	Assembly—Female Detent, Bandsread
A-50408	Pulley Bracket, Dial Cord		C-50438-4	Dial Back Plate
A-20165-2	Pulley, Dial Cord		B-50110-2	Pointer Rail
C-50415-2	Main Tuning Capacitor	C1	C-50441-1	S Meter
A-50448	Disc Drive, Main Tuning		C-50441-2	Clip Mounting, S Meter
C-50423-2	Bandsread Tuning Capacitor	C2	B-50424	Pointer
A-50501	Bracket, Light		B-19347-6	Dial Cord Ass'y, Main Tuning
B-50466	Potentiometer S-Meter	R38	A-50118-1	Bushing Panel, Main Tuning
B-50089	Potentiometer AF-Gain	R40	A-50117-1	Bushing Nut, Main Tuning
B-50640	Potentiometer, Q Multiplier	R41	B-50407	Pinch Ass'y, Main tuning with flywheel and E rings.
B-50092	Potentiometer RF-Gain	R39	B-19347-11	Dial Cord Ass'y Bandsread
A-50263	Phone Jack		B-50688-4	Shaft Bandsread
C-50412-2	RF Shield		A-20285-5	Flat "E" Ring, Bandsread
C-50658	Switch, Band	S1	A-12346	Washer, Spring, Bandsread
B-50095-2	Variable Capacitor, Antenna	C3	D-22500-X42-X-4AA	Knob Band
B-50103	Transformer IF, 230 Kc.	T11, T13	B-50661-1	Bezel, Front Panel
B-50641	Q Multiplier Transformer	T12	B-50661-2	Base, Bezel
B-50209	Transformer 2215 Kc.	T10	B-50518-2	Knob, BFO with Set Screw
B-50429	Coil Antenna—1.6-4 Mc.	T2	B-50519-2	Knob, RFG, ANT with Set Screw
B-50452	Coil Antenna—4-10 Mc.	T3	B-50499	Knob Bandsread Chg.
B-50451	Coil Antenna—10-20 Mc.	T4	D-22500-X42-X-4T	Knob, AFG and Selectivity
B-50460	Coil Antenna—20-30 Mc.	T5	C-22034-49	Knob, Main Tuning and Bandsread
B-50643	Coil, 2nd Oscillator	L7	NPL-47	Panel Lamp
B-50430	Transformer Mixer—500-1600 Kc.	T1	6BZ6	6BZ6 Tube V1
B-50432	Transformer Mixer—1.6-4 Mc.	T6	12BE6	12BE6 Tube V2,V3
B-50447	Transformer Mixer—4-10 Mc.	T7	12BA6	12BA6 Tube V4
B-50453	Transformer Mixer—10-20 Mc.	T8	12AV6	12AV6 Tube V6
B-50459	Transformer Mixer—20-30 Mc.	T9	6BN8	6BN8 Tube V7
A-19405	Mounting Clips, Coil Cans		6CW5	6CW5 Tube V8
B-50463	Coil Oscillator—500-1600 Kc.	L1	5Y3-GT	5Y3-GT Tube V9
B-50464	Coil Oscillator—1.6-4 Mc.	L2	B-50300	Panel Lamp Socket Ass'y
B-50465	Coil Oscillator—4-10 Mc.	L3	B-50145-2	Flip Foot
B-50467	Coil Oscillator—10-20 Mc.	L4	SR-125-B-14-N	Rivets, Flip foot
B-50469	Coil Oscillator—20-30 Mc.	L5	A-50284-3	Push-on Tinnerman, Flip foot
B-17436-9	330 Ohms, 7 Watt Resistor	R34	A-50280	Glide
NCS-15-221-G-5	220 $\pm$ 2% Mica Capacitor	C4,C10	A-50281-2	Rubber Foot
NCS-15-331-G-5	330 $\pm$ 2% Mica Capacitor	C5, C11	D-50462-2	Bottom Cover Painted
NCS-15-991-G-5	990 2% Mica Capacitor	C14	D-50418-5	Cabinet Ass'y.
NCS-19-252-G-5	2500 2% Mica Capacitor	C15	B-50434-2	Switch Bracket
NCS-15-821-G-5	820 2% Mica Capacitor	C16	B-50457-13	Switch AGC
NCS-15-351-G-5	350 2% Mica Capacitor	C17	B-50457-3	Switch, ANL
NCS-15-181-G-5	180 2% Mica Capacitor	C18	B-50457-11	Switch BFO and STBY-REC
B-50473-1	Line Cord		A-50030-7	Tinnerman Nut, Switch Bracket
D-50657-3	Front Panel			