

PARTS LIST

ALL READILY AVAILABLE RESISTORS AND CAPACITORS ARE OMITTED
FROM THE FOLLOWING PARTS LIST. BUT ARE COMPLETELY IDENTIFIED
ON THE SCHEMATIC.

A-11998	Jack Phono. ANT	J1	NCS-20-392-F-5	3900 $\pm 1\%$ Mica Capacitor	C25, C26
A-11153	Plug Phono. ANT	P1	B-50473-1	Line Cord	
A-12616	Panel Terminal (Relay)		D-50436-3	Front Panel	
A-12617	Panel Terminal (Speaker)		A-50148-52	Hose Clamp, BFO	
E-265-28	Panel Terminal (Antenna)		B-50188-4	Iron Core, BFO	
B-27669-3	Socket, 7 Pin		B-50470	Coil BFO	
B-27668-1	Socket, 9 Pin		A-50421	Spring Slug Screw, BFO	
B-27674-1	Socket, Octal		B-K641-20	Coil Shield, with Fasteners, BFO	
B-22025-3	Transformer, Output	T15	C-50437-3	Window, Main tuning	
C-50087	Transformer, Power	T14	B-50417-1	Bandspread Dial Ass'y.	
C-19458-5	Capacitor Electrolytic	C54	A-50439	Spring, Bandspread	
A-50137	Capacitor Mica Trimmer— 1.5-20 μf C62 through	C71	B-50416-1	Assembly—Female Detent, Bandspread	
A-50408	Pulley Bracket, Dial Cord		A-50502	Disc Drive, Bandspread	
A-20165-2	Pulley, Dial Cord		A-50284-4	Push-on Nut, Bandspread Drive	
C-50415-2	Main Tuning Capacitor	C1	C-50438-4	Dial Back Plate	
A-50448	Disc Drive, Main Tuning		B-50110-2	Pointer Rail	
C-50423	Bandspread Tuning Capacitor	C2	C-50441-1	S Meter	
A-50501	Bracket, Light		C-50441-2	Clip Mounting, S Meter	
B-50466	Potentiometer S-Meter	R20	B-50424	Pointer	
B-50089	Potentiometer AF-Gain	R31	B-19347-6	Dial Cord Ass'y.	
B-50431	Switch Selectivity	S2	A-50118-1	Bushing Panel, Main tuning	
B-50092	Potentiometer RF-Gain	R17	A-50117-1	Bushing Nut, Main tuning	
A-50263	Phone Jack	J2	B-50536	Bandspread Vernier with Pinch	
C-50412	RF Shield		A-50117-3	Nut, Bandspread Vernier	
C-50414	Switch, Band	S1	A-50282	Bowed "F" Ring, Bandspread Vernier	
B-50095-2	Variable Capacitor, Antenna	C3	D-22500-X38-X-4AA	Knob Band	
B-50259	Ferrite Filter, Complete	FL1, FL2	B-50132	Bezel Front Panel	
A-50455	Shield Cover, Ferrite Filter		B-50518-2	Knob, BFO with Set Screw	
B-50103	Transformer IF, 230 Kc	T11, T12, T13	B-50519-2	Knob, RFG, ANT with Set Screw	
B-50510	Transformer 2215 Kc	T10	B-50499	Knob Bandspread Chg.	
B-50429	Coil Antenna—1.6-4 Mc	T2	D-22500-X38-X-4T	Knob AFC	
B-50452	Coil Antenna—4-10 Mc	T3	D-22500-X38-X-4Z	Knob Selectivity	
B-50451	Coil Antenna—10-20 Mc	T4	C-22034-48	Knob Main Tuning	
B-50460	Coil Antenna—20-30 Mc	T5		Knob, Bandspread	
B-50443	Coil, 2nd Oscillator	L7	NPL-47	Panel Lamp	
B-50430	Transformer Mixer—500-1600 Kc	T1	6BZ6	6BZ6 Tube	V1
B-50432	Transformer Mixer—1.6-4 Mc	T6	6BE6	6BE6 Tube	V2, V3
B-50447	Transformer Mixer—4-10 Mc	T7	6BA6	6BA6 Tube	V4, V5
B-50453	Transformer Mixer—10-20 Mc	T8	6CW5	6CW5 Tube	V8
B-50459	Transformer Mixer—20-30 Mc	T9	12AX7A	12AX7A Tube	V7
A-19405	Mounting Clips, Coil Cans		5Y3-GT	5Y3-GT Tube	V9
B-50463	Coil Oscillator—500-1600 Kc	L1	B-50300	Panel Lamp Socket Ass'y.	
B-50464	Coil Oscillator—1.6-4 Mc	L2	6T8	6T8 Tube	V6
B-50465	Coil Oscillator—4-10 Mc	L3	0B2	0B2 Tube	V10
B-50467	Coil Oscillator—10-20 Mc	L4	B-50145-2	Flip Foot	
B-50469	Coil Oscillator—20-30 Mc	L5	SR-125-B-14-N	Rivets, Flip foot	
B-17436-9	330 Ohms, 7 Watt Resistor	R37	A-50284-3	Push-On Tinnerman, Flip foot	
K-098-24	2.2 Ohms, 1 Watt Resistor	R49	A-50280	Glide	
NCS-15-221-G-5	220 $\pm 2\%$ Mica Capacitor	C4, C10	A-50281-2	Rubber Foot	
NCS-15-331-G-5	330 $\pm 2\%$ Mica Capacitor	C5, C11	D-50462-2	Bottom Cover Painted	
NCS-15-991-G-5	990 $\pm 2\%$ Mica Capacitor	C14	D-50418-5	Cabinet Ass'y.	
NCS-19-252-G-5	2500 $\pm 2\%$ Mica Capacitor	C15	B-50434	Switch Bracket	
NCS-15-821-G-5	820 $\pm 2\%$ Mica Capacitor	C16	B-50157-1	Switch, CAL	
NCS-15-351-G-5	350 $\pm 2\%$ Mica Capacitor	C17	B-50457-3	Switch, ANT	
NCS-15-181-G-5	180 $\pm 2\%$ Mica Capacitor	C18	B-50157-11	Switch, AGC, BFO and STBY-REC	
			A-50284-2	Push-On Nut, Switch Bracket	