

SECTION XI
PARTS LIST (RF SECTION)
(Contd)

R-12	Resistor, 2000 ohm-7 watt	1	1003-008
R-13	Control, 25K Wire Wound	1	2300-003
R-14	Resistor, 2000 ohm-7 watt	1	1003-008
R-15	Resistor, 22 ohm-1 watt	1	1001-001
R-16	Resistor, 25K-10 watt	1	1003-001
R-17	Resistor, 560 ohm-1 watt	1	1001-002
R-18	Resistor, 5000 ohm-10 watt	1	1003-002
R-19	Resistor, 22 ohm-1 watt	1	1001-001
R-20	Resistor, 22 ohm-2 watt	1	1002-001
R-21	Resistor, 56 ohm-1 watt	1	1001-003
R-22	Resistor, 22 ohm-1 watt	1	1001-001
R-23	Resistor, 20K ohm-20 watt	1	1004-001
R-24	Resistor, 50K ohm-10 watt	1	1003-009
R-42	Resistor, 68K ohm-2 watt	1	1002-006
R-43	Resistor, 47K-1/2 watt	1	1000-002
R-55	Resistor, 450 ohm-5 watt	1	1003-013
ST-1	Safety terminal, RF, B plus	1	2200-002
SR-4	Selenium Rectifier, 65 Ma	1	3700-001
SO-1	Socket, RF Power Input	1	1600-003
SO-2	Socket, VFO Input	1	2001-011
SW-1	Switch, Exciter Metering	1	2100-005
SW-2	Switch, Exciter Band Change	1	2100-002
SW-3	Switch, Bias	1	2101-001
SW-4	Switch, Function	1	2100-004
SW-5	Switch, Final Band Change	1	2100-001A
SW-6	Switch, Antenna Loading	1	2100-001A
SW-7	Switch, Xtal-VFO	1	2101-001
T-1	Transformer, Final Filament	1	1202-001
T-2	Transformer, Screen and Bias Power	1	1200-001