

SB-175 METEOR TRANSMITTER

TABLE OF CONTENTS

SECTION 1 - GENERAL INFORMATION

- 1-1 Introduction
- 1-2 Circuit description

SECTION 2 - SPECIFICATIONS

- 2-1 Specifications

SECTION 3 - INSTALLATION

- 3-1 Unpacking
- 3-2 Location, fixed operation
- 3-3 Location, mobile operation and mounting facilities
- 3-4 Power supply, fixed (AC) operation
- 3-5 Power supply, mobile (DC) operation
- 3-6 Power connections
- 3-7 VFO connection
- 3-8 Push-to-talk connection
- 3-9 Key jack
- 3-10 Mic. jack
- 3-11 R-F output coaxial jack and antenna recommendations
- 3-12 Transmitter installation in and removal from cabinet

SECTION 4 - FUNCTION OF OPERATING CONTROLS

- 4-1 XTAL-VFO switch
- 4-2 Mic.
- 4-3 Function switch
- 4-4 Band switch
- 4-5 Meter switch
- 4-6 Grid
- 4-7 Load
- 4-8 Tune
- 4-9 Meter

SECTION 5 - OPERATION

- 5-1 Preparatory
- 5-2 Neutralization
- 5-3 Choice of bands