


■ MAP LIGHT


- The integration relay starts activating with the map light switch ON by turning OFF the ignition switch or one of the door is opened, and turn off the map light approximately 20 minutes.
- The map light is turned ON when the ignition switch turn ON again or one of the door is opened.

► System Diagram ◀

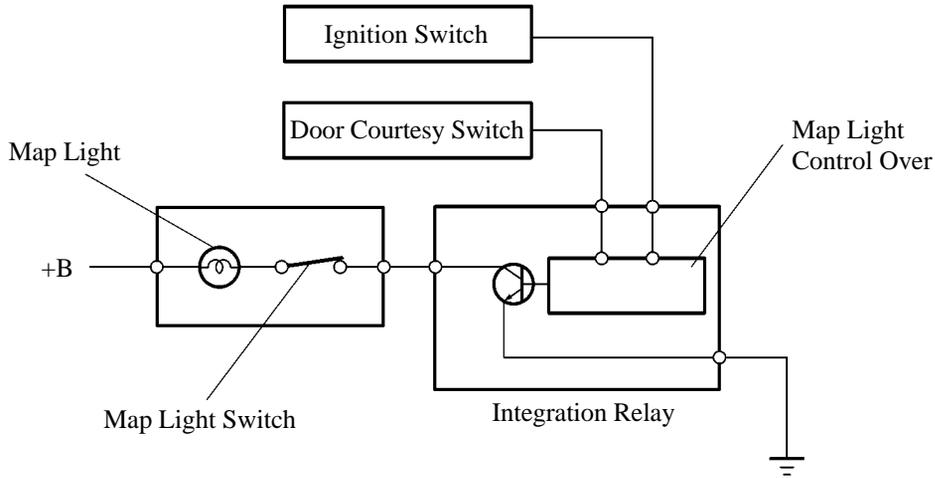

'04 Corolla


257V119

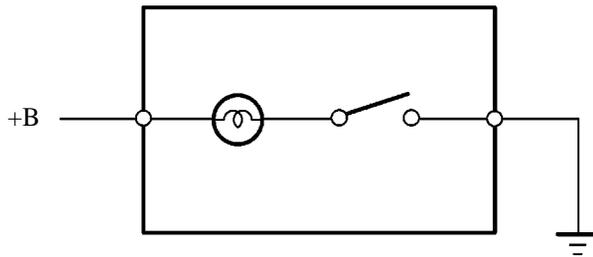

'03 Corolla

257V118

► Timing chart ◀

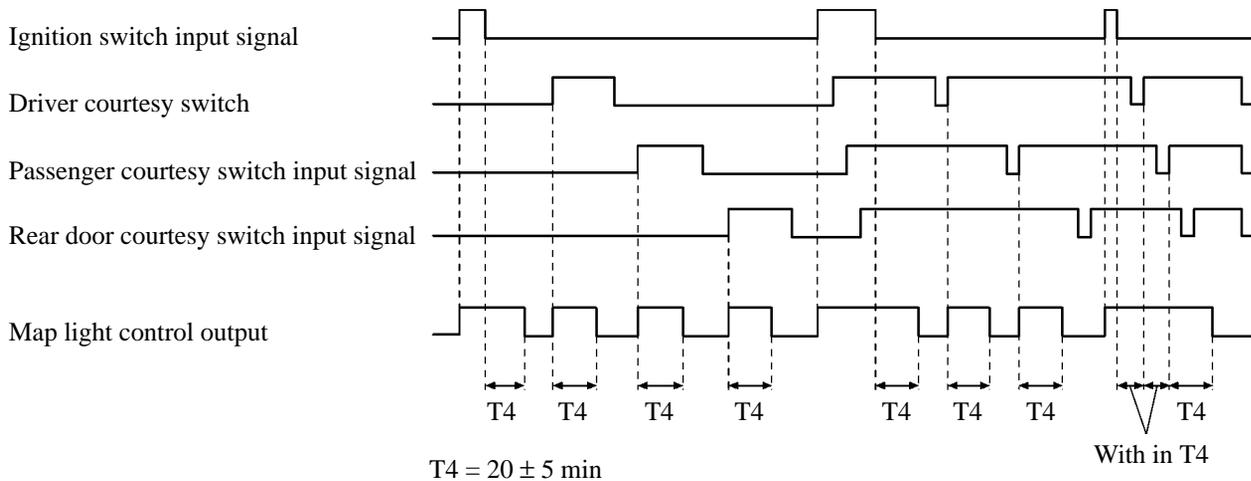

- MEMO -