



**Danny Meatball & Co.**

# Triangle Stonk

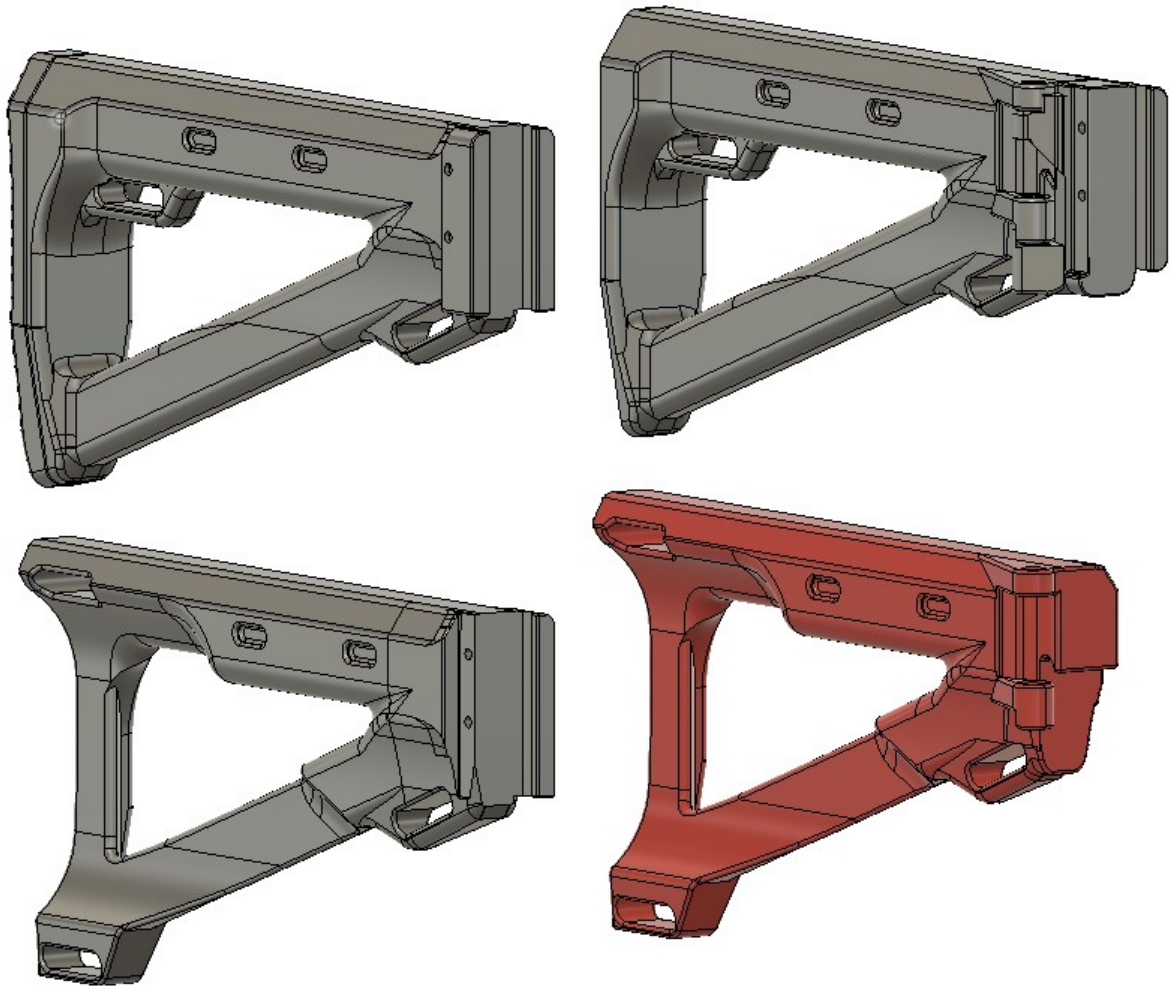

An AWCY? Production

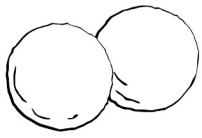

## **Description**

This is a quick guide of the assembly of the Triangle Stonk System

## **Hardware**

- 4x M3 Threaded Heat Inserts
- 2x M3x25mm
- 2x M3x10mm+



Folding Option Requires an additional:

- 1x M3 Threaded Heat Insert
- 1x M3x40mm+ Bolt
- 1x Ender Bed Spring or equivalent

## **Assembly (Fixed Stonk)**

Install your heat inserts:

- 2 in the pic rail adapter
- 2 in on the back f/ Butt Padpad

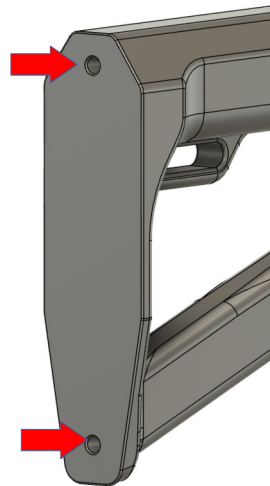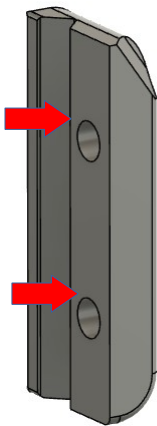


Install Butt Pad.



### Assembly (Folding)

Install your additional M3 Heat Insert into the Folding Adapter.

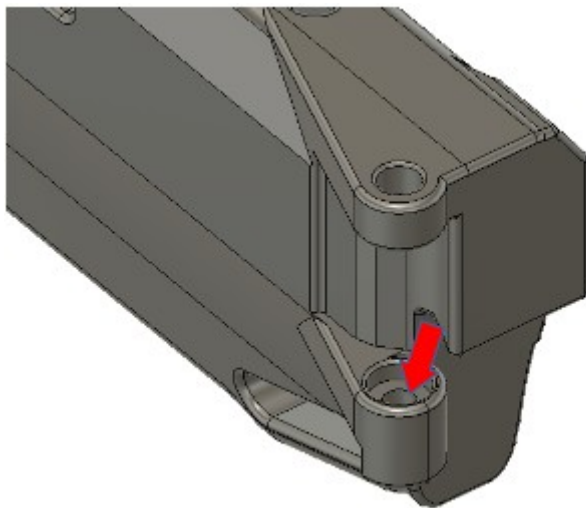

Install the Folding Adapter onto the Stock/Brace. Place spring in the spring cups on the hinge and insert your M3x40mm+ Bolt. Install your Butt Pad and Pic Adapter. Tighten to your liking. Enjoy.

