



Standard Test Method for Tensile Properties of Single Textile Fibers¹

This standard is issued under the fixed designation D3822/D3822M; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This test method covers the measurement of tensile properties of natural and man-made single textile fibers of sufficient length to permit mounting test specimens in a tensile testing machine.

1.2 This test method is also applicable to continuous (filament) and discontinuous (staple) fibers or filaments taken from yarns or tow. When the fibers to be tested contain crimp, or if the tow or yarns have been subjected to bulking, crimping, or texturing process, the tensile properties are determined after removal of the crimp.

NOTE 1—Testing of filaments taken from yarns or tow, included in this test method was originally covered in Test Method [D2101](#), that is discontinued.

1.3 The words “fiber” and “filament” are used interchangeably throughout this test method.

1.4 This test method is also applicable to fibers removed from yarns, or from yarns processed further into fabrics. It should be recognized that yarn and manufacturing processes can influence or modify the tensile properties of fibers. Consequently, tensile properties determined on fibers taken from yarns, or from yarns that have been processed into fabrics, may be different than for the same fibers prior to being subjected to yarn or fabric manufacturing processes.

1.5 This test method provides directions for measuring the breaking force and elongation at break of single textile fibers and for calculating breaking tenacity, initial modulus, chord modulus, tangent modulus, tensile stress at specified elongation, and breaking toughness.

1.6 Procedures for measuring the tensile properties of both conditioned and wet single fibers are included. The test method is applicable to testing under a wide range of conditions.

1.7 As the length of the test specimen decreases, the tensile strength is likely to increase, but the accuracy of the tensile properties determined may decrease, which may require the need to increase the number of test specimens. This is

particularly true for those properties dependent on the measurement of elongation, since the shorter lengths increase the relative effect of slippage and stretching of the test specimens within the jaws of either clamp.

1.8 The values stated in either SI units or inch-pound units are to be regarded separately as standard. The values stated in each system may not be exact equivalents; therefore, each system shall be used independently of the other. Combining values from the two systems may result in non-conformance with the standard.

1.9 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 ASTM Standards:²

- [D76 Specification for Tensile Testing Machines for Textiles](#)
- [D123 Terminology Relating to Textiles](#)
- [D629 Test Methods for Quantitative Analysis of Textiles](#)
- [D1577 Test Methods for Linear Density of Textile Fibers](#)
- [D1776 Practice for Conditioning and Testing Textiles](#)
- [D2101 Test Method for Tensile Properties of Single Man-Made Textile Fibers Taken From Yarns and Tows \(Withdrawn 1995\)³](#)
- [D2258 Practice for Sampling Yarn for Testing](#)
- [D3333 Practice for Sampling Manufactured Staple Fibers, Sliver, or Tow for Testing](#)
- [D4849 Terminology Related to Yarns and Fibers](#)
- [E178 Practice for Dealing With Outlying Observations](#)

3. Terminology

3.1 For all terminology relating to D13.58, Yarns and Fibers, refer to Terminology [D4849](#).

3.1.1 The following terms are relevant to this standard: breaking force, breaking tenacity, breaking toughness, chord

¹ This test method is under the jurisdiction of ASTM Committee [D13](#) on Textiles and is the direct responsibility of Subcommittee [D13.58](#) on Yarns and Fibers.

Current edition approved May 15, 2014. Published June 2014. Originally approved in 1979. Last previous edition approved in 2007 as D3822 – 07. DOI: 10.1520/D3822_D3822M-14.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ The last approved version of this historical standard is referenced on www.astm.org.



modulus, corresponding elongation, corresponding force, elongation, elongation at break, elongation at specified force, fiber, filament, filament yarn, force at specified elongation, initial modulus, linear density, secant modulus, tangent modulus, tenacity, tow, yield point.

3.2 For all other terminology related to textiles, refer to Terminology D123.

4. Summary of Test Method

4.1 Single-fiber specimens are broken on a constant-rate-of-extension (CRE) type tensile testing machine at a predetermined gauge length and rate of extension. Using the force-extension curve, the breaking force and elongation at break are determined. The force-elongation curve and linear density are used to calculate breaking tenacity, initial modulus, chord modulus, tangent modulus, tensile stress at specified elongation, and breaking toughness.

5. Significance and Use

5.1 Test Method D3822 using test specimens having gauge lengths of 10 mm [0.4 in.] or greater is considered satisfactory for acceptance testing of commercial shipments since the test method has been used extensively in the trade for acceptance testing. Critical differences noted in Tables 1 and 2 were obtained on man-made fibers having a gauge length of 25 mm [1.0 in.] and 250 mm [10 in.]. Natural fibers or fibers having lesser or greater gauge lengths may provide different values and may require comparative testing. (See 5.1.1.)

5.1.1 In cases of a dispute arising from differences in reported test results when using Test Method D3822 for acceptance testing of commercial shipments, the purchaser and the supplier should conduct comparative tests to determine if there is a statistical bias between their laboratories. Competent statistical assistance is recommended for the investigation of bias. As a minimum, the two parties should take a group of test specimens which are as homogeneous as possible and which are from a lot of material of the type in question. The test specimens should then be randomly assigned in equal numbers to each laboratory for testing. The average results from the two laboratories should be compared using Student's t-test for unpaired data and an acceptable probability level chosen by the two parties before the testing begins. If a bias is found, either its cause must be found and corrected or the purchaser and the supplier must agree to interpret future test results for that material in view of test results with consideration to the known bias.

5.2 The breaking tenacity, calculated from the breaking force and the linear density, and the elongation are fundamental properties that are widely used to establish limitations on fiber processing or conversion and on their end-use applications. Initial modulus is a measure of the resistance of the fiber to extension at forces below the yield point. The tangent modulus and tensile stress at specified elongation may be used to differentiate between the probable performance of fibers in processing and end-use performance. The breaking toughness is an indication of the durability of materials produced from the fiber.

TABLE 1 Fiber Tensile Properties Using a 25.4 mm [1 in.] Gauge Length Critical Differences for the Conditions Noted^A

Properties, Limits of Measure and Materials	Number of Observations in Each Average	Single-Operator Precision	Within-Laboratory Precision	Between-Laboratory Precision
<i>Breaking Tenacity, mN/tex:</i>				
Acetate	1	1.7	1.8	2.4
	10	0.5	0.8	1.8
	20	0.4	0.7	1.8
	40	0.3	0.6	1.8
Aramid	1	137.8	137.8	137.8
	10	43.5	43.5	43.5
	20	30.8	30.8	30.8
	40	21.8	21.8	21.8
Nylon	1	7.6	7.6	8.0
	10	2.4	2.6	3.6
	20	1.7	2.1	3.1
	40	1.2	1.7	2.9
Polyester	1	5.2	5.2	5.6
	10	1.7	1.7	2.7
	20	1.2	1.2	2.5
	40	0.8	0.8	2.4
<i>Initial Modulus Mn/tex:</i>				
Acetate	1	71.8	108.0	163.2
	10	22.7	83.8	148.3
	20	16.1	82.3	147.4
	40	11.4	81.5	147.0
Aramid	1	2610	2783	3600
	10	826	1270	2613
	20	583	1129	2547
	40	413	1050	2513
Nylon	1	61.4	83.1	152.4
	10	19.4	59.2	140.8
	20	13.7	57.7	140.1
	40	9.7	56.8	139.8
Polyester	1	214.2	279.7	382.4
	10	67.8	209.4	323.9
	20	47.9	186.2	320.3
	40	33.8	183.1	318.5
<i>Elongation at Break, %</i>				
Acetate	1	7.29	7.65	8.64
	10	2.3	3.28	5.18
	20	1.63	2.84	4.92
	40	1.15	2.6	4.78
Aramid	1	1.25	1.25	1.53
	10	0.39	0.39	0.97
	20	0.28	0.28	0.93
	40	0.2	0.2	0.91
Nylon	1	17.93	18.36	22.43
	10	5.67	6.92	14.63
	20	4.01	5.64	14.01
	40	2.84	4.87	13.78
Polyester	1	14.97	15.09	17.82
	10	4.73	5.1	10.76
	20	3.35	3.85	10.23
	40	2.37	3.04	9.95

^A The critical differences were calculated using $t = 1.960$, which is based on infinite degrees of freedom.

5.3 It is recognized that computerized results are used extensively in the industry. When comparing results from two laboratories using computerized tensile testers, the algorithms used to derive results must be examined for parity, that is, how the maximum slope and specimen failure or rupture are determined.

5.4 The breaking strength of wet fibers tested in air may be different from wet fibers tested while immersed.

5.4.1 Tests on wet specimens are usually made only on fibers which show a loss in breaking force when wet or when exposed to high humidity, for example, yarns made from

**TABLE 2 Fiber Tensile Properties Using a 254 mm [10 in.] Gauge Length Critical Differences for the Conditions Noted^A**

Properties, Limits of Measure and Materials	Number of Observations in Each Average	Single-Operator Precision	Within-Laboratory Precision	Between-Laboratory Precision
<i>Breaking Tenacity, mN/tex</i>				
Acetate	1	1.86	2.06	2.26
	10	0.59	0.98	1.27
	20	0.39	0.88	1.27
	40	0.29	0.88	1.18
Aramid	1	85.61	90.91	94.93
	10	27.07	40.70	49.13
	20	19.12	35.99	45.21
	40	13.53	33.34	43.15
Nylon	1	6.77	7.26	8.14
	10	2.16	3.24	5.00
	20	1.47	2.84	4.81
	40	1.08	2.65	4.61
Polyester	1	6.77	7.65	7.75
	10	2.16	4.12	4.22
	20	1.47	3.82	3.92
	40	1.08	3.73	3.82
<i>Initial Modulus, mN/tex</i>				
Acetate	1	39.42	47.27	51.88
	10	12.45	28.93	35.99
	20	8.83	27.56	34.91
	40	6.28	26.87	34.32
Aramid	1	1881	1881	2390
	10	594	594	1591
	20	421	421	1534
	40	297	297	1505
Nylon	1	47.56	69.43	105.03
	10	15.00	52.76	94.83
	20	10.59	51.68	94.14
	40	7.55	51.09	93.95
Polyester	1	120.13	153.57	167.79
	10	37.95	102.97	123.17
	20	26.87	99.34	120.23
	40	19.02	97.58	118.76
<i>Elongation at Break, %</i>				
Acetate	1	8.23	8.65	8.82
	10	2.6	3.72	4.1
	20	1.84	3.24	3.66
	40	1.3	2.96	3.42
Aramid	1	0.64	0.73	0.77
	10	0.2	0.41	0.48
	20	0.14	0.39	0.46
	40	0.1	0.37	0.45
Nylon	1	14.8	16.2	16.2
	10	4.68	8.09	8.09
	20	3.31	7.38	7.38
	40	2.34	7	7
Polyester	1	13.77	13.87	16.35
	10	4.36	4.65	8.05
	20	3.08	3.49	7.44
	40	2.18	2.72	7.11

^A The critical differences were calculated using $t = 1.960$, which is based on infinite degrees of freedom

animal fibers and man-made fibers based on regenerated and modified cellulose. Wet tests are made on flax fiber to detect adulteration by failure to show a gain in breaking force.

6. Apparatus and Reagents

6.1 *Constant-Rate-of-Extension (CRE) Type Tensile Testing Machine*, conforming to Specification **D76**, having adequate response characteristics to properly record the characteristics of the force-elongation curve, or the stress-strain curve of the fibers under test at the rate of extension specified in **Table 3**. The capacity of the machine must be selected for the break on

TABLE 3 Rate of Extension^A

Estimated Elongation at Break of Specimen, %	Rate of Extension, % of Initial Specimen Length/min
Under 8	10
8 to 100, incl.	60
Over 100	240

^A For the optimum degree of comparability, tensile properties of filaments should be measured at the same rate of extension.

the recorded curve to fall within 20 to 90 % of full scale, preferably within 50 to 90 % of full scale. It is permissible to use tensile testing machines that have a means of calculating and displaying the required results without the use of an autographic recorder. The tensile testing machine must be equipped with a tank to provide for breaking fibers immersed in a liquid, if tests on wet immersed specimens are required.

NOTE 2—Special force-measuring systems may be used to directly record the tenacity in mN/tex.

6.2 *Clamps*, with flat jaws for gripping the fiber specimens and designed to minimize slippage in the clamps during the test,

6.2.1 *Tabs*, when required, of thin plastic or other material for use with cementing techniques (See **Annex A1**); and

6.2.2 *Cement or Adhesive*—The adhesive must be capable of binding the tabs to the fibers without affecting the moisture content of the specimen.

NOTE 3—For wet testing, the tabs and adhesive must be waterproof.

6.3 *Container*, separate from the testing machine for wetting out specimens to be tested without immersion.

6.4 *Auxiliary Equipment*—The testing machine may be equipped with auxiliary equipment to permit the automatic recording of data or the calculation of any required tensile property. The auxiliary equipment must be capable of recording data and performing calculations in a manner consistent with the definitions and instructions for calculations as described in this test method.

6.5 *Area-Measuring Device*—An integrating accessory to the tensile testing machine or a planimeter. The device shall measure area with an accuracy of ± 1 %.

6.6 *Jig*, to aid in accurately mounting test specimens on tabs at the specified gauge length.

6.7 *Distilled or Deionized Water*, for use in wet specimen testing.

6.8 *Wetting Agent, Nonionic*—For wet specimen testing, for example, Triton X-100⁴ to make 0.1 % aqueous solution using water described in **6.7**.

7. Sampling

7.1 *Lot Sampling*—As a lot sample for acceptance testing, take at random the number of shipping containers directed in the applicable material specification or other agreement between the purchaser and supplier, such as an agreement to use

⁴ Triton-X 100 is a registered trademark of Rohm & Haas.



Practice **D3333** or Practice **D2258**. Consider shipping containers to be the primary sampling units.

NOTE 4—An adequate specification or other agreement between the purchaser or supplier requires taking into account the variability between shipping units, between packages, ends or other laboratory sampling unit within a shipping unit if applicable, and with specimens from a single package, end or other laboratory sampling unit to provide a sampling plan with a meaningful producer's risk, consumer's risk, acceptable quality level, and limiting quantity level.

7.2 Laboratory Sample—As a laboratory sample for acceptance testing, take at random from each shipping container in the lot sample the number of laboratory sampling units as directed in an applicable material specification or other agreement between purchaser and supplier such as an agreement to use Practice **D3333** or Practice **D2258**. Preferably, the same number of laboratory sampling units are taken from each shipping container in the lot sample. If differing numbers of laboratory sampling units are to be taken from shipping containers in the lot sample, determine at random which shipping containers are to have each number of laboratory units drawn.

7.2.1 For Staple Fiber—Take 50 g samples from laboratory sampling units.

7.2.2 For Sliver (or Top) or Tow—Take 1 m [3 yd] from the leading end which has a clean, uniform appearance from each laboratory sampling unit.

7.2.3 For Yarns—Take at least a 1 m [3 yd] length from each laboratory sampling unit.

7.3 Test Specimens—From each laboratory sampling unit, take 20 fiber specimens at random. If the standard deviation determined for the 20 specimens is more than a value agreed upon between the purchaser and supplier prior to testing, continue testing in groups of 20 specimens from the same laboratory sampling unit until the standard deviation for all specimens tested is not more than the agreed-to value or, by agreement, stop testing after a specified number.

7.3.1 Carefully remove twist before taking specimens from yarn. Using tweezers and grasping each specimen at one end, gently remove the required number of specimens from the laboratory sampling units for testing. In some cases, if specimens are not to be tested immediately, place them on a short-pile or plush surface for storage until ready to test.

8. Preparation of Test Specimens

8.1 Measure the linear density of each specimen as directed in Test Methods **D1577**.

8.2 If fibers are to be tabbed, select a technique from **Annex A1** or some other technique agreed upon by the purchaser and supplier.

8.3 For testing wet specimens without immersion, place the specimens in a container and submerge in a 0.1 % aqueous solution of a nonionic wetting agent in distilled or deionized water at ambient temperature until thoroughly soaked. (See **8.3.1** and **8.3.2**.)

8.3.1 The time of immersion must be sufficient to completely wet out the specimens, as indicated by no significant changes in breaking force, or elongation at break when followed by longer periods of immersion.

8.3.2 When desizing treatments are specified prior to wet testing, use desizing treatments that will not effect the normal physical property of the material as directed in Test Methods **D629**.

8.4 For wet specimens tested while immersed, proceed as directed in **11.2.2**.

9. Preparation of Test Apparatus

9.1 Select the appropriate force range for the fiber to be tested.

9.2 Verify that the tensile tester is within calibration as specified in the manufacturer's instructions.

9.3 Adjust the distance between the clamps to obtain the selected nominal gauge length of at least 10 mm [0.4 in.] and, when applicable, 250 mm [10 in.] or more. The most common gauge lengths are 10, 20, 25, 100 and 250 mm [0.4, 0.8, 1.0, 4 and 10 in.].

NOTE 5—The results obtained are normally subject to less error if the gauge length is selected to be as large as possible, consistent with the length of fibers to be tested. When comparisons are to be made between different fibers or where it is necessary to obtain comparable results in different laboratories, it is advisable to use the same gauge length for all tests, selecting it to accommodate the shortest fibers of interest.

9.3.1 If the fiber specimen is mounted on tabs before being placed in the testing machine, the distance between tabs defines the nominal gauge length (See **Annex A1**).

9.4 Set the extension speed to provide the rate of elongation specified in **Table 1** for the gauge length selected.

9.5 When using microprocessor automatic data gathering systems, set the appropriate parameters as defined in the manufacturer's instruction.

10. Conditioning

10.1 Precondition and condition the specimens, as directed in Practice **D1776**.

11. Procedure

11.1 Test the conditioned specimens as directed in Practice **D1776**.

11.2 Mount a test specimen in the jaws of the clamps, removing slack without stretching the specimen. The specimen must be straight within the jaws and extreme care must be taken to ensure that the fiber specimen lies on the line of action between the force-measuring device and the point where the fiber leaves the moving jaw face. Any misalignment that tends to produce transverse motion of the clamps and jaws will introduce errors in measurements of elongation and may contribute to premature fiber failure.

11.2.1 For testing wet specimens without immersion, remove a specimen from the water and immediately mount it in the clamps as directed in **11.1** and **11.2**. Perform the test within two minutes after removal of the specimen from the water.

11.2.2 For testing wet specimens while immersed, secure the specimens into the clamps of the tensile tester and submerge in the tank containing a 0.1 % aqueous solution of a nonionic wetting agent in distilled or deionized water at



ambient temperature until thoroughly soaked. (See 8.3.1 and 8.3.2.). Test while the specimens are immersed in the water bath.

NOTE 6—In general, it will be found that no one type of fiber mounting will be suitable for all types and sizes of fibers and experience may show that some mounting techniques are much more efficient than others. Experience and operator preferences have been found to be of importance in selecting the most satisfactory mounting methods for a given laboratory.

11.3 For specimens having crimp, use a pretension of 3 to 10 mN/tex [0.03 to 0.11 gf/d] to remove the crimp while the fiber is placed in the clamps. If certain fibers with a high degree of crimp require greater pretensioning than the amount specified, determine the minimum pretension as directed in Appendix XI of Test Method D1577. If, by visual examination, the crimp is not completely removed even at these greater force applications, record this fact.

11.4 Start the tensile testing machine and any associated auxiliary equipment, extending the fiber specimen to break at the selected extension speed and record the data of interest. For fibers of low stiffness, it may be advisable to first back off the moving jaw of the testing machine to allow the fiber to be slack at the time the testing machine is started.

11.5 After breaking the specimen, return the testing machine to its starting condition and remove all remains of the broken specimen from the clamp faces. Pieces of broken fiber remaining in the jaws may adversely affect the ability of the jaws to properly hold the succeeding specimens.

11.6 Test successive specimens as directed in 11.1 – 11.5 until the remaining specimens have been broken. If the number of fiber specimens failing at the jaw-fiber interface exceeds 5 % of the number tested, repeat the test after adjusting the jaw faces and clamping mechanism as described in 11.6.1 – 11.6.3.

11.6.1 If a specimen slips in the jaws, breaks at the edge or in the jaws, or, if for any reason attributable to faulty machine operation the result falls 20 % below the average of the breaking force for the set of specimens, discard the result and test another specimen. Continue until the required number of acceptable breaks have been obtained.

11.6.2 The decision to discard the results of a break shall be based on observation of the specimen during the test and upon the inherent variability of the fiber. It is difficult to determine the precise reason for certain specimens breaking near the edge of the jaws. If a jaw break is caused by damage to the specimen by the jaws, then the results should be discarded. If, however, it is merely due to randomly distributed weak places, it is a perfectly legitimate result. Refer to Practice E178 for treatment of outlying data points.

11.6.3 If a fiber manifests any slippage in the jaws or if more than 25 % of the specimens break at a point within 3 mm [$\frac{1}{8}$ in.] of the edge of the jaw, then (1) the jaws may be padded, (2) the fiber may be coated under the jaw face area, or (3) the surface of the jaw face may be modified. If any of the modifications listed above are used, state the method of modification in the report.

11.7 Obtain the elongation data by means of a suitable recording device, or computer, at the same time as the breaking

force is determined unless otherwise agreed upon, as provided for in an applicable material specification.

12. Calculation

12.1 *Breaking Force*—Record the breaking force of individual specimens to three significant digits as read directly from the tension testing machine expressed in mN [gf].

12.2 *Breaking Tenacity*—Calculate the breaking tenacity of individual specimens to three significant digits, using Eq 1:

$$\gamma = \frac{F}{D_L} \quad (1)$$

where:

γ = breaking tenacity in mN/tex [gf/den],

F = breaking force in mN [gf], and

D_L = linear density in tex [denier].

12.3 *Effective Specimen Length*—Calculate the effective specimen length of individual specimens to three significant digits, using Eq 3: (See Annex A2 and Figs. X1.1 and X1.2.)

$$L_e = L_i + \Delta L_c \quad (2)$$

where:

L_e = effective specimen length, mm [in.],

L_i = initial distance between clamps (gauge length), mm [in.], and

ΔL_c = additional specimen length corresponding to the clamp error as determined in A2.2, when required.

12.4 *Elongation*—From XY type recorders, calculate the elongation at break, or other specified elongation, of individual specimens to three significant digits using Eq 4:

$$\epsilon_s = \frac{\Delta L \cdot R_s \cdot 100}{C_s \cdot L_e} \quad (3)$$

where:

ϵ_s = elongation percent, at the specified force,

ΔL = distance along the zero-stress axis from the point corresponding to the point where the tangent line to the initial straight-line section of the stress-strain curve intersects the zero-stress axis, to a point corresponding to the breaking stress, or other specified stress, mm [in.],

R_s = testing speed rate, mm/min [in./min],

C_s = recording chart speed, mm/min [in./min], and

L_e = effective specimen length, mm [in.].

12.5 *Initial Modulus*—Locate the maximum slope and draw a line tangent to the stress-strain curve between the tangent point for this tangent line and the proportional elastic limit and through the zero-stress axis. Measure the stress and the corresponding elongation with respect to the stress axis. Calculate initial modulus in mN/tex [gf/d] to three significant digits, using Eq 5 (see Appendix X2 and Figs. X1.1 and X1.2):

$$J_i = \frac{S}{\epsilon_p} \quad (4)$$

where:

J_i = initial modulus, mN/tex [gf/den],

S = determined stress on the drawn tangent line mN/tex [gf/den], and



ε_p = corresponding strain with respect to the drawn tangent line and determined stress.

12.6 Chord Modulus—Determine the stress for a specified elongation, such as 10 %, and label that point on the stress-strain curve as P_2 . Likewise, label a second point, P_1 at a specified elongation, such as 0 % elongation. Draw a straight line through points P_1 and P_2 intersecting the zero-stress axis. Other elongation values may be used, for example, when provided for in an applicable material specification. Calculate chord modulus in mN/tex [gf/d] to three significant digits, using Eq 6 (see Appendix X2 and Fig. X2.1):

$$J_{ch} = \frac{S}{\varepsilon_p} \quad (5)$$

where:

J_{ch} = chord modulus with specified elongations, mN/tex [gf/den],
 S = determined stress on the constructed line, mN/tex [gf/den], and
 ε_p = corresponding strain with respect to the constructed line and determined stress.

12.7 Breaking Toughness—When using the stress-strain curves, draw a line from the point of breaking force of each specimen perpendicular to the extension axis. Measure the area bounded by the curve, the perpendicular and the extension axis by means of an integrator or a planimeter, or cut out the area of the chart under the stress-strain curve, weigh it, and calculate the area under the curve using the mass of the unit area.

12.7.1 When determining the breaking toughness of fibers that exhibit slack caused by crimp or design, the area under the stress-strain curve which precedes the initial modulus line represents the work to remove this slack. Automatic area measuring equipment may or may not include this area in measuring breaking toughness, and therefore, such information should be reported along with the value obtained for the breaking toughness.

12.7.2 Calculate the breaking toughness to three significant digits for each specimen when using XY-type recorders using Eq 7 or when using automatic area measuring equipment using Eq 8:

$$T_u = \frac{A_c \cdot F_{fs} \cdot R_s}{W_c \cdot C_s \cdot D_L \cdot L_e} \quad (6)$$

$$T_u = \frac{I_r \cdot F_{fs} \cdot R_s}{I_c \cdot D_L \cdot L_e} \quad (7)$$

where:

T_u = breaking toughness, J/g [gf/den],
 A_c = area under the stress-strain curve, mm²,
 F_{fs} = full scale force range, mN [gf],
 R_s = testing speed rate, mm/min [in./min],
 W_c = recording chart width, mm [in.],
 C_s = recording chart speed, mm/min [in./min],
 D_L = linear density, dtex [denier],
 L_e = effective specimen length, mm [in.],
 I_r = integrator reading, and
 I_c = integrator constant, per minute, determined as directed by the manufacturer.

12.8 Average Values—Calculate the average values for breaking force, breaking tenacity, elongation at break, initial modulus, chord modulus, tangent modulus, tensile stress at specified elongation, and breaking toughness for each laboratory sampling unit and the lot.

12.9 Computer Generated Data—When data is automatically computer generated, calculations are generally contained in the associated software. In any event, it is recommended that computer generated data be verified against known property values, or by manual calibration.

12.10 If requested, also calculate the standard deviation or the coefficient of variation, or both, for the properties of interest.

13. Report

13.1 State that the specimens were tested as directed in ASTM Test Method D3822. Describe the material or product sampled and the method of sampling used.

13.2 Report the following information for both, the laboratory sampling units and the lot average as applicable to a material specification or contract order.

13.2.1 Average breaking force.

13.2.2 Average breaking tenacity or tenacity at a specific elongation.

13.2.3 Average elongation at break or other specified force.

13.2.4 Average initial modulus.

13.2.5 Average chord modulus and the two elongations used in the calculation.

13.2.6 Average tangent modulus and the point on the stress-strain curve at which it was calculated.

13.2.7 Tensile stress and the specified elongation.

13.2.8 Breaking toughness, and whether or not the work-to-remove crimp is included in the value.

13.2.9 Standard deviation, coefficient of variation, or both, for each property, if calculated,

13.2.10 Effective specimen length, when applicable.

TABLE 4 Fiber Tensile Properties Using 25.4 mm [1 in.] Gauge Length Components of Variance Expressed as Standard Deviations^A

Properties, Limits of Measure and Materials	Grand Average	Single-Operator Component	Within-Laboratory Component	Between-Laboratory Component
<i>Breaking Tenacity, gf/tex:</i>				
Acetate	1.38	0.06	0.02	0.06
Aramid	28.24	5.07	0.00	0.00
Nylon	4.63	0.28	0.04	0.09
Polyester	4.20	0.19	0.00	0.08
<i>Initial Modulus, gf/tex</i>				
Acetate	35.82	2.64	2.97	4.50
Aramid	670.58	98.03	35.53	84.02
Nylon	23.97	2.26	2.06	4.70
Polyester	77.31	7.88	6.62	9.59
<i>Elongation at Break, %</i>				
Acetate	30.45	2.63	0.84	1.45
Aramid	4.20	0.45	0.00	0.32
Nylon	66.80	6.47	1.43	4.65
Polyester	53.14	5.40	0.89	3.42

^A The square root of the components of variance are being reported to express the variability in the appropriate units of measure rather than as the squares of those units of measure.



13.2.11 Testing temperature and percent relative humidity if the test was performed on specimens conditioned at other than the standard conditions for testing textiles.

13.2.12 For wet specimens, whether specimens were tested wet in air, or while immersed, and the temperature of the water.

13.2.13 If requested, include a force-elongation curve, with chart axis-units and speed indicated, as part of the report.

13.2.14 Number of specimens tested.

13.2.15 Pretension applied, if any.

13.2.16 Make and model of tensile testing machine.

13.2.17 Type of clamps used.

13.2.18 Type of padding used in jaws, technique for tabbing of specimens gripped in the jaws, or modification of jaw faces if used.

13.2.19 Nominal gauge length, clamp error, rate of specimen extension and full scale force range used for testing.

13.2.20 For computer derived data, identify how slope and breaking points were determined and identify the program (software) used.

14. Precision and Bias⁵

14.1 *Interlaboratory Test Data*—An interlaboratory test was run in 1981 in which randomly-drawn samples of four materials were tested in each of six laboratories. Two operators in each laboratory each tested ten specimens of each material using both a 10-in. gauge length and a 1-in. gauge length. The components of variance for tenacity, initial modulus and elongation at break expressed as standard deviations were calculated to be the values listed in [Table 4](#) for gauge lengths of 1 in. and [Table 5](#) for gauge lengths of 10 in. The four classes of fibers were: 4.2 denier low tenacity acetate; 3.0 denier medium tenacity, low modulus nylon; 5.0 denier medium tenacity, high modulus polyester; and 1.5 denier high tenacity, high modulus aramid.

14.2 *Precision*—For the components of variance reported in [Tables 4 and 5](#), two averages of observed values should be

⁵ ASTM Research Report No. RR:D13-1088. A copy is available from ASTM Headquarters.

TABLE 5 Fiber Tensile Properties Using a 254 mm [10 in.] Gauge Length Components of Variance Expressed as Standard Deviations^A

Properties, Limits of Measure and Materials	Grand Average	Single-Operator Component	Within-Laboratory Component	Between-Laboratory Component
<i>Breaking Tenacity, gf/tex</i>				
Acetate	1.25	0.07	0.03	0.03
Aramid	21.61	3.15	1.12	1.01
Nylon	4.22	0.25	0.09	0.14
Polyester	3.80	0.25	0.13	0.03
<i>Initial Modulus, gf/tex</i>				
Acetate	39.66	1.45	0.96	0.79
Aramid	839.86	69.20	0.00	54.28
Nylon	25.04	1.75	1.86	2.90
Polyester	95.09	4.42	3.52	2.49
<i>Elongation at Break, %</i>				
Acetate	25.15	2.97	0.96	0.62
Aramid	2.55	0.23	0.13	0.09
Nylon	52.54	5.34	2.38	0.00
Polyester	38.30	4.97	0.59	2.37

^A The square roots of the components of variance are being reported to express the variability in the appropriate units of measure rather than as the square of those units of measure.

considered significantly different at the 95 % probability level if the difference equals or exceeds the critical differences listed in [Tables 4 and 5](#), respectively.

NOTE 7—The tabulated values of the critical differences should be considered to be a general statement, particularly with respect to between-laboratory precision. Before a meaningful statement can be made about two specific laboratories, the amount of statistical bias, if any, between them must be established, with each comparison being based on recent data obtained on specimens taken from a lot of material to the type being evaluated so as to be as nearly homogeneous as possible and then randomly assigned in equal numbers to each of the laboratories.

14.3 *Bias*—The values of the tenacity, initial modulus, and elongation at break can only be defined in terms of a specific test method. Within this limitation, the procedures in Test Method D3822 for measuring these properties has no known bias.

15. Keywords

15.1 tension (tensile) properties/tests; textile fiber

ANNEXES

(Mandatory Information)

A1. TABBING TECHNIQUE FOR FIBER

A1.1 Scope

A1.1.1 Due to the inherent nature of some fibers, a means is required to protect or cushion the ends of the fiber that lay in the clamp to minimize clamp breaks. The procedure described below has been used successfully to minimize the occurrence of jaw breaks.

A1.2 Summary of Tabbing Technique

A1.2.1 A single fiber is secured to a cardboard substrate by means of an epoxy resin. This assembly is placed centrally in

the clamps of a tensile tester. Cardboard material is removed from the assembly in the gauge area without making contact with the fiber.

A1.3 Materials

A1.3.1 *Poster Board*, or equivalent.

A1.3.1.1 The colors of the board and cardboard ([A1.3.2](#)) should contrast and be different from the color of the fiber for ease of viewing.



A1.3.2 *Sub 65 Grade Cardboard*, or equivalent. (See A1.3.1.1.)

A1.3.3 *Paper Cutter*.

A1.3.4 *Steel Rule*, 0.25 mm [0.01 in.] graduations.

A1.3.5 *Cutting Die*, 14 ± 0.25 mm [0.55 ± 0.01 in.] diameter.

A1.3.6 *Bonding Resin* (See A1.1).

NOTE A1.1—A mixture by weight of 60 parts Ciba Geigy 6004 Epoxy Resin® and 40 parts General Mills Versimid 125 polyamide resin® has been found suitable for this purpose. Other mixtures can be used providing specimen damage does not occur or that specimens do not break or slip at the jaw faces.

A1.3.7 *Tweezers*.

A1.3.8 *Surgical Shears*, or alternately, a needle nose solder gun.

A1.3.9 *Lighted Magnifying Glass Stand*, at least 8× power to aid in positioning specimens while tabbing.

A1.4 Specimen Preparation

A1.4.1 Using the paper cutter, prepare a sufficient number of cardboard squares having dimensions of 25 mm by 25 mm [1 in. by 1 in.].

A1.4.1.1 Die cut 14 mm [0.55 in.] diameter holes approximately in the center of the 25 mm by 25 mm [1 in. by 1 in.] cardboard squares.

A1.4.2 Place a piece of poster board on a flat table or bench top. (This is used as background material for convenience in viewing the specimens during preparation.)

A1.4.3 Prepare a sufficient amount of bonding resin to accommodate the number of specimens that are to be prepared.

A1.4.4 Separate and place the required number of die cut cardboard squares on the poster board, in turn, under the lighted magnifying glass. This magnification provides for ease of viewing the fiber during resin mounting to the cardboard square.

A1.4.5 Apply a small amount of bonding resin centrally to each of the required die-cut squares at two opposite locations beginning at the inside edge and extending outward to the outer edge. Apply the resin such that it is on an imaginary line parallel with one of the other two edges but not on the absolute edges.

A1.4.6 Using tweezers without grasping the fiber in the gauge area, position the fiber across the areas of resin on the cardboard square. Do this for all specimens. Do not touch the segment of the fiber within the gauge length at any time during the specimen preparation.

A1.4.7 Allow the resin to cure 12 to 16 h in a protected area.

A1.4.8 Using the paper cutter, carefully trim the outer edges of the cardboard parallel to the fiber until approximately 1 mm [0.05 in.] of cardboard remains on each side of the fiber.

A1.4.9 The specimen preparation is completed after the specimen is centrally placed in the clamps of the tensile tester. At this time, the 1 mm [0.05 in.] width of cardboard is severed at both sides of the fiber by means of either surgical shears or solder gun without touching the fiber.

A2. EFFECTIVE SPECIMEN LENGTH

A2.1 The effective specimen length can be determined by adding the initial length between the clamp faces (nominal gauge length) and adding the length contributed by the clamp error (see Fig. A2.1).

A2.1.1 The fiber clamps used in tensile testing can affect the apparent fiber properties observed. The customary method of determining specimen elongation, by measuring clamp separation, assumes that the stresses applied to the specimen

during the test are confined by the clamps to the original specimen length. Most fiber clamps do not completely confine the stresses, and therefore, an erroneously high elongation may be indicated as the result of being based on a nominal gauge length which is shorter than the effective gauge length.

A2.1.2 Clamp errors may occur in nondestructive testing, such as tests for elastic performance, modulus, etc., as well as in destructive testing. In all cases, the procedure for estimation of effective gauge length should employ stresses comparable to those experienced in the corresponding tensile testing.

A2.1.3 The magnitude of the error determined for any one clamping system may vary according to the surface characteristics, linear density, test environment, breaking force, and extensibility of the material. Accordingly, changes in any of these factors will require a re-evaluation of the error.

A2.2 Determine the clamp error as follows:

A2.2.1 Mount the fibers in the clamps in the normal manner using a pretension of 10 to 50 cN/tex [0.01 to 0.05 gf/d]. (See Note A2.1.)

NOTE A2.1—The use of a pretension eliminates slack in the mounted

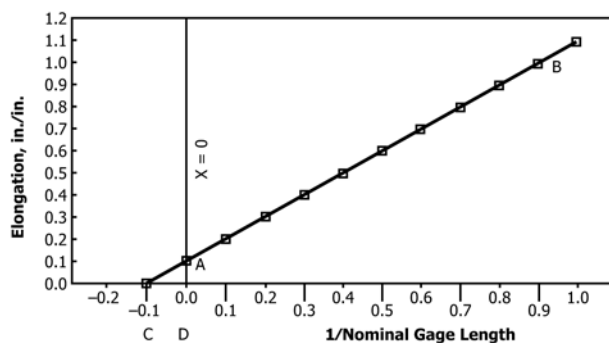


FIG. A2.1 Example of Plot to Determine Clamp Error

specimen. Any slack would be erroneously computed as clamp error by the testing procedure.

A2.2.2 Mark the recorder chart to locate the crosshead in reference to chart position (Note A2.2).

NOTE A2.2—The marking of the crosshead position in reference to the chart position allows observance of any slack caused by the extrusion of the fiber specimen from the clamp during tightening of the clamp.

A2.2.3 Break the representative groups of fibers at three or more different nominal gauge lengths (Note A2.3). Maintain the same rate of extension at each gauge length.

NOTE A2.3—Limits within which the gauge lengths are chosen will be dictated by the accuracy with which the shortest gauge length can be determined, and in the case of a destructive test, the maximum length of specimen which will not be affected by flaw distribution. The latter point is of importance when, by increasing the gauge length, the probability of including a major flaw (causing premature fiber failure) in the test length is increased. Flaw inclusion may be suspected when the average elongation does not increase proportionately with increase in gauge length. This will be indicated when the straight line plot (Fig. A2.1) curves toward the abscissa at longer gauge lengths.

A2.2.4 Break ten specimens in each representative group of fibers. If the variation in average breaking tenacity among data

obtained at different gauge lengths is greater than ± 3 percent, break additional specimens until the variation in average breaking tenacity among groups does not exceed ± 3 percent.

A2.2.5 Calculate the average apparent elongation at break in denominate units, for each nominal gauge length. Plot the apparent elongation versus the nominal gauge length (for example see Fig. A2.1). Draw a straight line (Note Note A2.4) through the plotted points to the nominal gauge length axis, point C, and extrapolate to zero elongation (BC, Fig. A2.1). The distance between the intersection of this line and zero nominal gauge length, along the gauge length axis (CD), represents the average clamp error.

NOTE A2.4—The preferred procedure for drawing the line is by means of the least squares method, although in many cases visual inspection is adequate.

A2.3 Calculate the Effective Gauge Length as follows:

$$\text{Effective Gauge Length} = \quad \quad \quad (\text{A2.1})$$

(clamp error length + nominal gauge length)

APPENDIXES

(Nonmandatory Information)

X1. INITIAL MODULUS

X1.1 In the case of a fiber exhibiting a region that obeys Hooke's law (Fig. X1.1), a continuation of the linear region of the stress-strain curve is constructed through the zero-stress

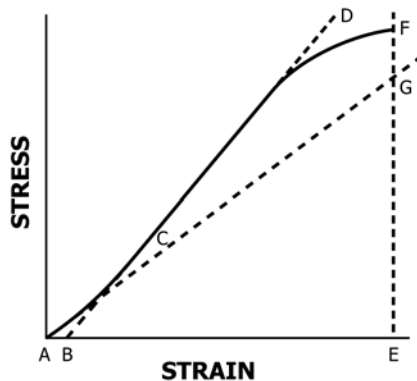


FIG. X1.1 Example of Material with Hookean Region

axis. This intersection point B is the zero extension point from which strain is measured.

X1.1.1 The initial modulus can be determined by dividing the stress at any point along the line BD (or its extension) by the strain at the same point (measured from point B, defined as zero-strain). Point C, the point where line BD first touches the stress-strain curve is the tangent point.

X1.2 In the case of a fiber that does not exhibit any linear region (Fig. X1.2), a tangent K'B' is constructed to the maximum slope and its extension intersecting the zero-stress axis at point B'. This intersection point B' is the zero point from which strain is measured. Point C', the point where line K'B' first touches the stress-strain curve, is the tangent point.

X1.2.1 The initial modulus may be determined by dividing the stress at any point along line B'K' (or its extension) by the strain at the same point (measured from point B', defined as zero-strain).

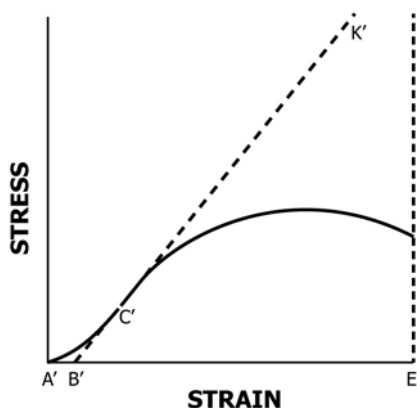


FIG. X1.2 Example of Material with No Hookean Region

X2. CHORD MODULUS

X2.1 In a typical stress-strain curve (Fig. X2.1), a straight

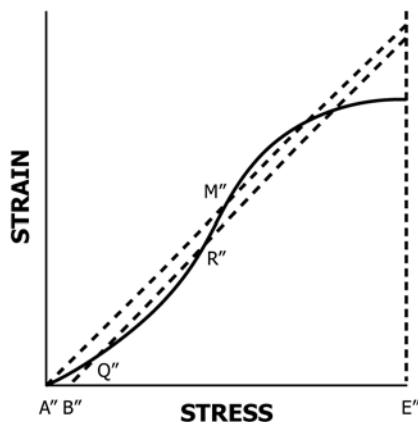


FIG. X2.1 Example of Construction for Chord Modulus

line is constructed through the zero-stress axis, such as zero strain point A'' and a second point, such as 10 % strain, point M''. The intersection point A'' is the zero strain point from which the specimen strain is measured.

X2.1.1 The chord modulus may be calculated by dividing the stress at any point along line A''M'' (or its extension) by the specimen stress at the same point (measured from point A'', defined as zero strain).

X2.1.2 Fig. X2.1 also represents a straight line constructed through any two specified points, point Q'' and point R'', other than zero and 10 % strain. In this case, the line extends through the zero stress axis at point B''. This intersection is the zero strain point from which specimen strain is measured. The chord modulus can be determined by dividing the stress at any point along the Q''R'' (or its extension) by the specimen strain at the same point (measured from point B'', defined as zero strain).

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; <http://www.copyright.com/>