

Standard Practice for Sampling for Particulate Contamination by Tape Lift¹

This standard is issued under the fixed designation E1216; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

1. Scope

- 1.1 This practice covers procedures for sampling surfaces to determine the presence of particulate contamination, 5 μm and larger. The practice consists of the application of a pressure-sensitive tape to the surface followed by the removal of particulate contamination with the removal of the tape. The tape with the adhering particles is then mounted on counting slides. Counting and measuring of particles is done by standard techniques.
- 1.2 This practice describes the materials and equipment required to perform sampling of surfaces for particle counting and sizing.
- 1.3 The criteria for acceptance or rejection of a part for conformance to surface cleanliness level requirements shall be determined by the user and are not included in this practice.
- 1.4 This practice is for use on surfaces that are not damaged by the application of adhesive tape. The use of this practice on any surface of any material not previously tested, or for which the susceptibility to damage is unknown, is not recommended. In general, metals, metal plating, and oxide coatings will not be damaged. Application to painted, vapor deposited, and optical coatings should be evaluated before implementing this test.
- 1.5 This practice provides three methods to evaluate tape lift tests, as follows:

	Sections
Practice A—This method uses light transmitted through the tape and tape adhesive to detect particles that adhere to it.	4 to 6
Practice B—This method uses light transmitted through the tape adhesive after bonding to a base microscope slide, dissolving the tape backing, and a cover slide. The particles are embedded in the adhesive, and air bubbles are eliminated with acrylic mounting media.	7 to 9
Practice C—This method uses light reflected off the tape adhesive to detect particles that adhere to it	10 to 12

¹ This practice is under the jurisdiction of ASTM Committee E21 on Space Simulation and Applications of Space Technology and is the direct responsibility of Subcommittee E21.05 on Contamination.

- 1.6 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.
- 1.6.1 *Exception*—The inch-pound units given in parentheses are for information only.
- 1.7 This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.

2. Referenced Documents

2.1 ASTM Standards:²

E595 Test Method for Total Mass Loss and Collected Volatile Condensable Materials from Outgassing in a Vacuum Environment

F312 Test Methods for Microscopical Sizing and Counting Particles from Aerospace Fluids on Membrane Filters

2.2 Federal Standard:

Federal Standard 595 Color³

3. Significance and Use

- 3.1 The tape lift provides a rapid and simple technique for removing particles from a surface and determining their number and size distribution.
- 3.2 By using statistically determined sample size and locations, an estimate of the surface cleanliness level of large areas can be made. The user shall define the sampling plan.
- 3.3 The sampling plan shall consider the importance of surface geometry and surface orientation to gas flow, gravity, obstructions, and previous history of hardware. These factors influence particle fallout and entrapment of particles on the surface. The geometry of joints, recessed areas, fasteners, and the correspondence of particle-count data to area can be maintained.

Current edition approved Oct. 1, 2016. Published October 2016. Originally approved in 1987. Last previous edition approved in 2011 as E1216-11. DOI: 10.1520/E1216-11R16.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ Available from Standardization Documents Order Desk, DODSSP, Bldg. 4, Section D, 700 Robbins Ave., Philadelphia, PA 19111-5098, http://dodssp.daps.dla.mil.

- 3.4 The selection of tape and the verification of its effect on the cleanliness of the hardware is very important. The tape adhesive should have sufficient cohesion to avoid transfer of the adhesive to the surface under test. The impact of adhesive transfer should be evaluated by laboratory testing before using the tape on the hardware. Since potential for adhesive transfer exists, cleaning to remove any adhesive might be required. In addition, the tape should have low outgassing characteristics, and as a minimum, it should meet the requirements of less than 1.0 % total mass loss (TML) and 0.1 % collected volatile condensable materials (CVCM), as measured by Test Method E595.
- 3.5 Care should be exercised in deciding which surfaces should be tested by this practice. The tape can remove marginally adhering paint and coatings. Optical surfaces should not be tested until verification has been made that the surface coating will not be damaged. Rough surface finishes result in low removal efficiencies. Surface finishes up to approximately 3.20 μm (125 $\mu in.$) have been tested and found to give satisfactory results.
- 3.6 This practice has been tested only on surfaces at room temperature. Evaluation of temperature effects must be conducted prior to using the test on surfaces other than room temperature.
- 3.7 Only personnel experienced in microscopic particlecounting techniques should be used to count and size the particles.

PRACTICE A—TRANSMITTED LIGHT MICROSCOPY

4. Apparatus

- 4.1 Counting Slide:
- 4.1.1 Optical glass, polished on both sides, with beveled edges and etched with low reflectance chrome to provide a 7.62- by 7.62-cm (3.0- by 3.0-in.) area consisting of 256 (16 by 16) individual numbered squares. Each square has 0.23 cm² (0.015 in.²) of area and is cleaned to remove all particles equal to or greater than 5 μ m in size.
- 4.1.2 *Background Color*—For ease of distinguishing light particles from the background, slides colored Green No. 14062 or Magenta Red No. 21158 in accordance with Federal Standard 595 may be used. Other background colors may be used if corresponding accuracy is achieved.
- 4.2 *Pressure-Sensitive Tape*, ⁴ nominal (50-mm) (2-in.) wide clear film backing with a transparent adhesive. Tape to be supplied on a plastic roll.
- 4.2.1 Tape flexibility should be sufficient to allow taping of areas with 90° angles.
- 4.2.2 Tape backing and adhesive shall be clear, smooth, free of tape bubbles, flow lines, and imperfections that would interfere with the counting of particles.

4.3 Nonlinting Gloves, specially cleaned Nitrile gloves.

5. Procedure

- 5.1 Technique:
- 5.1.1 The tape shall be slowly removed directly from the roll to avoid static charge effects and applied immediately to minimize exposure to the air.
- 5.1.2 The tape must be removed immediately after application to the surface being tested with a slow and steady force. Fast or jerky removal reduces particle retention efficiency and increases the possibility of leaving tape residues. Prolonged contact of the tape to the surface develops stronger binding and a higher probability for tape residues to be left on the surface.
- 5.1.3 Apply the tape to a clean slide as described in 5.2.2. The color of the filter slide must be specified because the number of translucent and contrasting particles detected will vary depending on the background medium.
- 5.1.4 The outside edges, 6 mm (0.25 in.), shall not be used. This is the area most likely to be contaminated during tape manufacture, handling, and shipping. The static charges on the tape may draw contaminants to the area from outside the test area.
- 5.1.5 Excessive pressure in applying tape may crush the particles.
 - 5.2 Preparation of the Test Specimen:
- 5.2.1 Prepare a 12-mm (0.5-in.) tab of the free end of the tape. Remove a minimum of 12 cm (5.0 in.) under tension to prevent buckling and apply to one end of the surface. Press a 10-cm (4-in.) length firmly to the surface. There shall be no creases or folds. Nonlinting gloves must be worn to prevent the introduction of skin particles into the sample.
- 5.2.1.1 Do not crush particles on the surface when applying the tape. A roller device has been found to work well.
- 5.2.2 Immediately after applying the tape to the surface, lift the tape from one end using an even force. The tape must be kept taut during the removal. Apply the tape to the etched side of a clean glass counting slide using the same technique described in 5.2.1.
- 5.3 Counting—Place the glass slide on a colored background stage of the microscope with the unetched side up. Size and count the particulate contamination in accordance with Test Methods F312. Squares falling within 6 mm (0.25 in.) of the tape edge shall not be used. The total number of particles should be sufficiently large to provide the statistical reliability required by Test Methods F312.
- 5.4 Perform the blank analyses or tares to establish the background level of particles in the tape. The background particle count of the blank shall be no more than 10 % of the allowable value for the surface under test.

6. Precision and Bias

- 6.1 Precision and bias are intended to be adequate for use as a standard practice, or monitoring method.
- 6.1.1 *Repeatability*—Repeatability of the counting method shall be defined in Test Methods F312.
- 6.1.2 *Effectiveness*—The minimum effectiveness of particle removal from smooth surfaces and angles down to 90° is 90 % for particles larger than 5 μm .

⁴ The sole source of supply of the apparatus known to the committee at this time is 3M No. 480 polyethylene tape with an acrylic pressure-sensitive backing. If you are aware of alternative suppliers, please provide this information to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, ¹ which you may attend.

- 6.2 Bias:
- 6.2.1 No absolute standard, nor one traceable to the National Institute of Standards and Technology, is available, and therefore the bias of this practice cannot be determined at this time.
- 6.2.2 The sizing and counting bias is being established for particles larger than 5 μm .

PRACTICE B—TRANSMITTED LIGHT MICROSCOPY

7. Apparatus

- 7.1 Counting Slide:⁵
- 7.1.1 Optical glass, polished on both sides, with beveled edges, providing a 25- by 75-mm (1- by 3-in.) area. Each slide is cleaned to remove all particles equal to or greater than 5 μm in size.
- 7.1.2 Background Color—For ease of distinguishing light particles from the background, slides colored Green No. 14062 or Magenta Red No. 21158 in accordance with Federal Standard 595 may be used. Other background colors may be used if corresponding accuracy is achieved.
- 7.2 *Pressure-Sensitive Tape*, 6 nominal 19-mm (0.75-in.) wide clear film backing with a transparent adhesive. Tape to be supplied on a plastic roll.
- 7.2.1 Tape flexibility should be sufficient to allow taping of areas with 90° angles.
- 7.2.2 Tape backing and adhesive should be clear, smooth, free of tape bubbles, flow lines, and imperfections that would interfere with the counting of particles.
 - 7.3 Nonlinting Gloves, specially cleaned Nitrile gloves.
 - 7.4 Microscope Staining Jar or Dish.⁷
- 7.5~Acetone—The acetone must be filtered to eliminate particles over $5.0~\mu m$ in length and should have no more than 10-ppm nonvolatile residue; HPLC grade acetone meets this requirement.
- 7.6 Isopropyl Alcohol (IPA)—The IPA must be filtered to eliminate particles over 5.0 μ m in length and should have no more than 10-ppm nonvolatile residue; HPLC grade IPA meets this requirement.
- 7.7 Acrylic Mounting Medium⁸—Low-viscosity (\sim 0.6-Pa·s or \sim 60-centipoise) mounting medium will allow for quick flow with a minimum of air bubbles.

- 7.8~Hexane—The hexane must be filtered to eliminate particles over $5.0~\mu m$ in length and should have no more than 10-ppm nonvolatile residue; HPLC grade hexane meets this requirement.
- 7.9~Xylene—The xylene must be filtered to eliminate particles over $5.0~\mu m$ in length and should have no more than 10-ppm nonvolatile residue; HPLC grade xylene meets this requirement.

8. Procedure

- 8.1 Technique:
- 8.1.1 The tape should be slowly removed directly from the roll to avoid static charge effects and applied immediately to minimize exposure to the air.
- 8.1.2 The tape must be removed immediately after application to the surface being tested, with a slow and steady force. Fast or jerky removal reduces particle retention efficiency and increases the possibility of leaving tape residues. Prolonged contact of the tape to the surface develops stronger bonding and a higher probability for tape residues to be left on the surface.
- 8.1.3 Apply the tape to a clean slide as described in 8.2.2. The color of the filter slide must be specified because the number of translucent and contrasting particles detected will vary depending on the background medium.
- 8.1.4 The outside edges, 6 mm (0.25 in.), should not be used. This is the area most likely to be contaminated during tape manufacture, handling, and shipping. The static charges on the tape may draw contaminants to the area from outside the test area.
- 8.1.5 Excessive pressure in applying tape may crush the particles.
 - 8.2 Preparation of the Test Specimen:
- 8.2.1 Prepare a 12-mm (0.5-in.) tab of the free end of the tape. Remove a minimum of 125 mm (5.0 in.) under tension to prevent buckling and apply to one end of the surface. Press a 10-cm (4-in.) length firmly to the surface. There should be no creases or folds. Nonlinting gloves must be worn to prevent the introduction of skin particles into the sample.
- 8.2.1.1 Do not crush particles on the surface when applying the tape. A roller device has been found to work well.
- 8.2.2 Immediately after applying the tape to the surface, lift the tape from one end using an even force. The tape must be kept taut during the removal. Apply the tape to the clean glass counting slide using the same technique described in 8.2.1
- 8.3 The next step is to dissolve the tape backing. The materials needed are a suitable solvent and a container to hold it and the microscope slide while the tape backing dissolves. A microscope staining jar or dish is a good choice for the container, as it will keep the slides separated and allows for complete immersion. Acetone dissolves acetate tape backing (Scotch Magic Tape) within 30 min.⁹


⁵ These slides are available from many scientific supply houses as plain microscope slides

⁶ The sole source of supply of the apparatus known to the committee at this time is 3M No. 810 Magic Tape. If you are aware of alternative suppliers, please provide this information to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, ¹ which you may attend.

 $^{^{7}\,\}mathrm{Wheaton}$ No. 900200 is an example of a staining dish with a glass slide rack and cover.

⁸ Acrylic mounting medium is available from many scientific supply houses; some supply prethinned material with a viscosity of approximately 60 centipoise. Thicker media can be thinned with hexane or xylene.

⁹ The sole source of supply of the apparatus known to the committee at this time is Scotch 810 Magic Tape with an acrylic pressure sensitive backing. If you are aware of alternative suppliers, please provide this information to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, ¹ which you may attend.

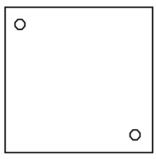

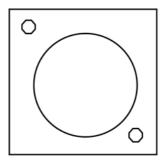


FIG. 1 Tape Lift Sample Holder

- 8.4 After the backing is completely dissolved, remove each slide individually, and wash it with fresh solvent (both sides). Allow it to dry, and then apply acrylic mounting medium to the adhesive surface.
- 8.4.1 Acrylic mounting media has a similar refractive index to glass and makes the sandwich almost transparent. A low-viscosity acrylic is desirable; $\sim\!0.6\text{-Pa}\cdot\text{s}$ (60-centipoise) viscosity has been found to work well. Use only enough to cover the surface completely after the cover slide is placed. The cover slide will compress the acrylic layer and spread it out; experience will dictate a satisfactory application rate.
- 8.4.2 Before the cover slide is placed onto the acrylic layer, it must be cleaned. Hold the slide up to the light to look for particles on the surface. Reclean the slide until it is visibly clean at a distance of 15 to 46 cm (6 to 18 in.) from the unaided eye.
- 8.4.3 Now place the cover slide onto the uncured acrylic layer, compress the sandwich, and align the top and bottom slides. There should be no slide overlap or air bubbles in the sandwich. Air bubbles will interfere with the evaluation, as they are not transparent. Place the bonded sandwich onto a clean surface to dry for 1 h. A lint-free wiper is satisfactory.
- 8.4.4 After drying, clean the transmitting surfaces with a suitable solvent; toluene and xylene have been found to work well. The amount of cleaning required is related to the overflow of acrylic on the top and bottom surfaces, hence the need to use just enough mounting medium to cover the adhesive completely. Use a lint-free wiper moistened with the solvent to wipe the transmissive surfaces. Hold the slide up to the light to look for particles on the surface. Reclean the slide until it is visibly clean at a distance of 15 to 46 cm (6 to 18 in.) from the unaided eye.
- 8.5 Counting—Place the glass slide on a colored background stage of the microscope. Size and count the particulate contamination in accordance with Test Methods F312. Particles falling within 0.64 cm (0.25 in.) of the tape edge should not be counted. The total number of particles should be sufficiently large to provide the statistical reliability required by Test Methods F312.
- 8.6 Perform the blank analyses or tares to establish the background level of particles in the tape. The background particle count of the blank shall be no more than $10\,\%$ of the allowable value for the surface under test.

9. Precision and Bias

- 9.1 Precision and bias are intended to be adequate for use as a standard practice, or monitoring method.
- 9.1.1 *Repeatability*—Repeatability of the counting method shall be defined in Test Methods F312.
- 9.1.2 *Effectiveness*—The minimum effectiveness of particle removal from smooth surfaces and angles down to 90° is 90 % for particles larger than 5 μ m.
 - 9.2 Bias:
- 9.2.1 No absolute standard, nor one traceable to the National Institute of Standards and Technology, is available, and therefore the bias of this practice cannot be determined at this time.
- 9.2.2 The sizing and counting bias is being established for particles larger than 5 μm .

PRACTICE C—REFLECTED LIGHT MICROSCOPY

10. Apparatus

- 10.1 Tape Lift Sample Holder (See Fig. 1)—A50- by 50-mm (2.0- by 2.0-in.) aluminum base plate with two pins that mates to a 5.0- by 5.0-cm (2.0- by 2.0-in.) aluminum top plate. The top plate has cutouts to locate the top plate on the base plate, and a 40-mm (1.5-in.) diameter cutout in the center to view the tape surface.
- 10.2 *Pressure-Sensitive Tape*, ¹⁰ nominal 50-mm (2-in.) wide clear film backing with a transparent adhesive. Tape to be supplied on a plastic roll.
- 10.2.1 Tape flexibility should be sufficient to allow taping of areas with 90° angles.
- 10.2.2 Tape backing and adhesive should be clear, smooth, free of tape bubbles, flow lines, and imperfections that would interfere with the counting of particles.
 - 10.3 Nonlinting Gloves, specially cleaned Nitrile gloves.
- 10.4 *Petri Dish*, ¹¹ 50-mm (2-in.) diameter, disposable, to carry the tape sample.

11. Procedure

- 11.1 Technique:
- 11.1.1 The tape shall be slowly removed directly from the roll to avoid static charge effects and applied immediately to minimize exposure to the air.
- 11.1.2 The tape must be removed immediately after application to the surface being tested, with a slow and steady force. Fast or jerky removal reduces particle retention efficiency and increases the possibility of leaving tape residues. Prolonged contact of the tape to the surface develops stronger bonding and a higher probability for tape residues to be left on the surface.

¹⁰ The sole source of supply of the apparatus known to the committee at this time is 3M No. 480 polyethylene tape with an acrylic pressure-sensitive backing. If you are aware of alternative suppliers, please provide this information to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, ¹ which you may attend.

¹¹ Disposal Petri dishes are available from many scientific supply houses.

- 11.1.3 The tape shall be adhered to the Petri dish and sample holder so that the test surface does not touch the surface of the transport and evaluation tools.
- 11.1.4 The outside edges, 0.64 cm (0.25 in.), should not be used. This is the area most likely to be contaminated during tape manufacture, handling, and shipping. The static charges on the tape may draw contaminants to the area from outside the test area.
- 11.1.5 Excessive pressure in applying tape may crush the particles.
 - 11.2 Preparation of the Test Specimen:
- 11.2.1 Prepare a 12-mm (0.5-in.) tab of the free end of the tape. Remove a minimum of 125 mm (5.0 in.) under tension to prevent buckling and apply to one end of the surface. Press a 10-cm (4-in.) length firmly to the surface. There shall be no creases or folds. Nonlinting gloves must be worn to prevent the introduction of skin particles into the sample. Note that a background count of each tape may be made with the method described in 11.3.
- 11.2.1.1 Do not crush particles on the surface when applying the tape. A roller device has been found to work well.
- 11.2.2 Immediately after applying the tape to the surface, lift the tape from one end using an even force. The tape must be kept taut during the removal. Apply the tape to the edges of the Petri dish bottom. Do not let the evaluation area of the tape touch the Petri dish. Cover the Petri dish for transport to the counting area.
- 11.3 Counting—Place the tape lift sample onto the top of the sample holder. The evaluation area of the tape must be inside the 38-mm (1.5-in.) cutout to allow for evaluation. Place the sample holder top onto the base with the tape adhesive up. Light will be reflected off the tape adhesive to view the trapped particles. Size and count the particulate contamination in

- accordance with Test Methods F312. Squares falling within 6 mm (0.25 in.) of the tape edge shall not be used. The total number of particles should be sufficiently large to provide the statistical reliability required by Test Methods F312.
- 11.4 Perform the blank analyses or tares to establish the background level of particles in the tape. The background particle count of the blank shall be no more than 10 % of the allowable value for the surface under test. With this method, a background count may be made of each tape sample.

12. Precision and Bias

- 12.1 Precision and bias are intended to be adequate for use as a standard practice, or monitoring method.
- 12.1.1 *Repeatability*—Repeatability of the counting method shall be defined in Test Methods F312.
- 12.1.2 *Effectiveness*—The minimum effectiveness of particle removal from smooth surfaces and angles down to 90° is 90 % for particles larger than 5 μm .
 - 12.2 Bias:
- 12.2.1 No absolute standard, nor one traceable to the National Institute of Standards and Technology, is available, and therefore the bias of this practice cannot be determined at this time.
- 12.2.2 The sizing and counting bias is being established for particles larger than 5 μm .

13. Sample Size Determination

13.1 Sample size shall be as defined in Test Methods F312.

14. Keywords

14.1 particulate contamination; pressure-sensitive tape; sampling

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9555 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; http://www.copyright.com/