Designation: E844 – 09 (Reapproved 2014) $^{\epsilon 2}$

Standard Guide for Sensor Set Design and Irradiation for Reactor Surveillance¹

This standard is issued under the fixed designation E844; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

 ε^1 NOTE—Figures 1 and 2 were updated and editorial changes were made in September 2014.

1. Scope

- 1.1 This guide covers the selection, design, irradiation, post-irradiation handling, and quality control of neutron dosimeters (sensors), thermal neutron shields, and capsules for reactor surveillance neutron dosimetry.
- 1.2 The values stated in SI units are to be regarded as standard. Values in parentheses are for information only.
- 1.3 This standard does not purport to address all of the safety problems, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.
- 1.4 This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.

2. Referenced Documents

2.1 ASTM Standards:²

E170 Terminology Relating to Radiation Measurements and Dosimetry

E261 Practice for Determining Neutron Fluence, Fluence Rate, and Spectra by Radioactivation Techniques

E854 Test Method for Application and Analysis of Solid State Track Recorder (SSTR) Monitors for Reactor Surveillance

E910 Test Method for Application and Analysis of Helium Accumulation Fluence Monitors for Reactor Vessel Surveillance E1005 Test Method for Application and Analysis of Radiometric Monitors for Reactor Vessel Surveillance

E1018 Guide for Application of ASTM Evaluated Cross Section Data File

E1214 Guide for Use of Melt Wire Temperature Monitors for Reactor Vessel Surveillance

E2005 Guide for Benchmark Testing of Reactor Dosimetry in Standard and Reference Neutron Fields

E2006 Guide for Benchmark Testing of Light Water Reactor Calculations

3. Terminology

- 3.1 Definitions:
- 3.1.1 *neutron dosimeter, sensor, monitor*—a substance irradiated in a neutron environment for the determination of neutron fluence rate, fluence, or spectrum, for example: radiometric monitor (RM), solid state track recorder (SSTR), helium accumulation fluence monitor (HAFM), damage monitor (DM), temperature monitor (TM).
- 3.1.2 thermal neutron shield—a substance (that is, cadmium, boron, gadolinium) that filters or absorbs thermal neutrons
- 3.2 For definitions or other terms used in this guide, refer to Terminology E170.

4. Significance and Use

- 4.1 In neutron dosimetry, a fission or non-fission dosimeter, or combination of dosimeters, can be used for determining a fluence rate, fluence, or neutron spectrum in nuclear reactors. Each dosimeter is sensitive to a specific energy range, and, if desired, increased accuracy in a fluence-rate spectrum can be achieved by the use of several dosimeters each covering specific neutron energy ranges.
- 4.2 A wide variety of detector materials is used for various purposes. Many of these substances overlap in the energy of the neutrons which they will detect, but many different materials are used for a variety of reasons. These reasons include available analysis equipment, different cross sections for different fluence-rate levels and spectra, preferred chemical or physical properties, and, in the case of radiometric

 $[\]varepsilon^2$ NOTE—The title and Referenced Documents were udpated in May 2017.

¹ This guide is under the jurisdiction of ASTM Committee E10 on Nuclear Technology and Applicationsand is the direct responsibility of Subcommittee E10.05 on Nuclear Radiation Metrology.

Current edition approved June 1, 2014. Published July 2014. Originally approved in 1981. Last previous edition approved in 2009 as E844 – 09. DOI: 10.1520/E0844-09R14E01.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

dosimeters, varying requirements for different half-life isotopes, possible interfering activities, and chemical separation requirements.

5. Selection of Neutron Dosimeters and Thermal Neutron Shields

5.1 Neutron Dosimeters:

- 5.1.1 The choice of dosimeter material depends largely on the dosimetry technique employed, for example, radiometric monitors, helium accumulation monitors, track recorders, and damage monitors. At the present time, there is a wide variety of detector materials used to perform neutron dosimetry measurements. These are generally in the form of foils, wires, powders, and salts. The use of alloys is valuable for certain applications such as (I) dilution of high cross-section elements, (2) preparation of elements that are not readily available as foils or wires in the pure state, and (3) preparation to permit analysis of more than one dosimeter material.
- 5.1.2 For neutron dosimeters, the reaction rates are usually deduced from the absolute gamma-ray radioanalysis (there exist exceptions, such as SSTRs, HAFMs, damage monitors). Therefore, the radiometric dosimeters selected must have gamma-ray yields known with good accuracy (>98 %). The half-life of the product nuclide must be long enough to allow for time differences between the end of the irradiation and the subsequent counting. Refer to Method E1005 for nuclear decay and half-life parameters.
- 5.1.3 The neutron dosimeters should be sized to permit accurate analysis. The range of high efficiency counting equipment over which accurate measurements can be performed is restricted to several decades of activity levels (5 to 7 decades for radiometric and SSTR dosimeters, 8 decades for HAFMs). Since fluence-rate levels at dosimeter locations can range over 2 or 3 decades in a given experiment and over 10 decades between low power and high power experiments, the proper sizing of dosimeter materials is essential to assure accurate and economical analysis.
- 5.1.4 The estimate of radiometric dosimeter activity levels at the time of counting include adjustments for the decay of the product nuclide after irradiation as well as the rate of product nuclide buildup during irradiation. The applicable equation for such calculations is (in the absence of fluence-rate perturbations) as follows:

$$A = N_o \bar{\sigma} \varphi \alpha (1 - e^{-\lambda t_1}) (e^{-\lambda t_2}) \tag{1}$$

where:

A = expected disintegration rate (dps) for the product nuclide at the time of counting,

 N_o = number of target element atoms,

= estimated fluence-rate density level,

 $\bar{\sigma}$ = spectral averaged cross section,

α = product of the nuclide fraction and (if applicable)
 of the fission yield,

 $e^{-\lambda t_1}$ = buildup of the nuclide during the irradiation

period, t₁,

 $e^{-\lambda t_2}$ = decay after irradiation to the time of counting, t_2 , and

 λ = decay constant for the product nuclide.

- 5.1.5 For SSTRs and HAFMs, the same type of information as for radiometric monitors (that is, total number of reactions) is provided. The difference being that the end products (fission tracks or helium) requires no time-dependent corrections and are therefore particularly valuable for long-term irradiations.
- 5.1.6 Fission detectors shall be chosen that have accurately known fission yields. Refer to Method E1005.
- 5.1.7 In thermal reactors the correction for neutron self shielding can be appreciable for dosimeters that have highly absorbing resonances (see 6.1.1).
- 5.1.8 Dosimeters that produce activation or fission products (that are utilized for reaction rate determinations) with half-lives that are short compared to the irradiation duration should not be used. Generally, radionuclides with half-lives less than three times the irradiation duration should be avoided unless there is little or no change in neutron spectral shape or fluence rate with time.
- 5.1.9 Tables 1-3 present various dosimeter elements. Listed are the element of interest, the nuclear reaction, and the available forms. For the intermediate energy region, the energies of the principal resonances are listed in order of increasing energy. In the case of the fast neutron energy region, the 95 % response ranges (an energy range that includes most of the response for each dosimeter is specified by giving the energies E_{05} below which 5 % of the activity is produced and E_{95} above which 5 % of the activity is produced) for the 235 U neutron thermal fission spectrum are included.

5.2 Thermal Neutron Shields:

5.2.1 Shield materials are frequently used to eliminate interference from thermal neutron reactions when resonance and fast neutron reactions are being studied. Cadmium is commonly used as a thermal neutron shield, generally 0.51 to 1.27 mm (0.020 to 0.050 in.) thick. However, because elemental cadmium (m.p. = 320°C) will melt if placed within the vessel of an operating water reactor, effective thermal neutron filters must be chosen that will withstand high temperatures of light-water reactors. High-temperature filters include cadmium oxide (or other cadmium compounds or mixtures), boron (enriched in the ¹⁰B isotope), and gadolinium. The thickness of the shield material must be selected to account for burnout from high fluences.

TABLE 1 Dosimeter Elements—Thermal Neutron Region

Element of Interest	Nuclear Reaction	Available Forms		
В	¹⁰ B(n,α) ⁷ Li	B, B ₄ C, B-Al, B-Nb		
Co	⁵⁹ Co(n,γ) ⁶⁰ Co	Co, Co-Al, Co-Zr		
Cu	⁶³ Cu(n,γ) ⁶⁴ Cu	Cu, Cu-Al, Cu(NO ₃) ₂		
Au	¹⁹⁷ Au(n,γ) ¹⁹⁸ Au	Au, Au-Al		
In	¹¹⁵ ln(n,γ) ^{116m} ln	In, In-Al		
Fe	⁵⁸ Fe(n,γ) ⁵⁹ Fe	Fe		
Fe	⁵⁴ Fe(n,γ) ⁵⁵ Fe	Fe		
Li	⁶ Li(n,α) ³ H	LiF, Li-Al		
Mn	⁵⁵ Mn(n,γ) ⁵⁶ Mn	alloys		
Ni	58 Ni(n, γ) 59 Ni(n, α) 56 Fe	Ni		
Pu	²³⁹ Pu(n,f)FP	PuO ₂ , alloys		
Sc	⁴⁵ Sc(n,γ) ⁴⁶ Sc	Sc, Sc ₂ O ₃		
Ag	¹⁰⁹ Ag(n,γ) ^{110m} Ag	Ag, Ag-Al, AgNO ₃		
Na	²³ Na(n,γ) ²⁴ Na	NaCl, NaF, Nal		
Ta	¹⁸¹ Ta(n,γ) ¹⁸² Ta	Ta, Ta ₂ O ₅		
U (enriched)	²³⁵ U(n,f)FP	U, U-Al, UO ₂ , U ₃ O ₈ , alloys		

TABLE 2 Dosimeter Elements—Intermediate Neutron Region

Energy of Principal			
Resonance, eV	Dosimetry Reactions	Element of Interest	Available Forms
(17)			
Α	⁶ Li(n,α) ³ H	Li	LiF, Li-Al
Α	¹⁰ B(n,α) ⁷ Li	В	B, B₄C, B-Al, B-Nb
A	⁵⁸ Ni(n, γ) ⁵⁹ Ni(n, α) ⁵⁶ Fe	Ni	Ni
1.457	115 ln(n, γ) 116m ln	In	In, In-Al
4.28	¹⁸¹ Ta(n,γ) ¹⁸² Ta	Ta	Ta, Ta ₂ O ₅
4.906	¹⁹⁷ Au(n,γ) ¹⁹⁸ Au	Au	Au, Au-Al
5.19	¹⁰⁹ Ag(n,γ) ^{110m} Ag	Ag	Ag, Ag-Al, AgNO ₃
21.806	232 Th $(n,\gamma)^{233}$ Th	Th	Th, ThO ₂ , Th(NO ₃) ₄
В	²³⁵ U(n,f)FP	U	U, U-Al, UO2, U3O8, alloys
132	⁵⁹ Co(n,γ) ⁶⁰ Co	Co	Co, Co-Al, Co-Zr
1038	⁵⁸ Fe(n,γ) ⁵⁹ Fe	Fe	Fe
337.3	⁵⁵ Mn(n,γ) ⁵⁶ Mn	Mn	alloys
579	⁶³ Cu(n,γ) ⁶⁴ Cu	Cu	Cu, Cu-Al, Cu(NO ₃) ₂
0.2956243	²³⁹ Pu(n,f)FP	Pu	PuO ₂ , alloys
2810	²³ Na(n,γ) ²⁴ Na	Na	NaCl, NaF, NaI
3295	⁴⁵ Sc(n,γ) ⁴⁶ Sc	Sc	Sc, Sc ₂ O ₃
7788	⁵⁴ Fe(n,γ) ⁵⁵ Fe	Fe	Fe

A This reaction has no resonance that contributes in the intermediate energy region and the principle resonance has negative energy (i.e. the cross section is 1/v).

TABLE 3 Dosimeter Elements—Fast Neutron Region

Dosimetry Element of Reactions Interest	Flement of -	Energy Response Range (MeV) ^{A,B}		Cross Section	Available	
	Interest	Low	Median	High	Uncertainty	Forms
		E ₀₅	E ₅₀	E ₉₅	(%) ^{A,C}	
²³⁷ Np(n,f)FP	Np	0.684	1.96	5.61	9.34	Np ₂ O ₃ , alloys
¹⁰³ Rh(n,n') ^{103m} Rh	Rh	0.731	2.25	5.73	3.10	Rh
⁹³ Nb(n,n') ^{93m} Nb	Nb	0.951	2.57	5.79	3.01	Nb, Nb ₂ O ₅
¹¹⁵ ln(n,n') ^{115m} ln	In	1.12	2.55	5.86	2.16	In, In-Al
¹⁴ N(n,α) ¹¹ B	N	1.75	3.39	5.86	_	TiN, ZrN, NbN
²³⁸ U(n,f)FP	U (depleted)	1.44	2.61	6.69	0.319	U, U-Al, UO ₃ , U ₃ O ₈ , alloys
²³² Th(n,f)FP	Th	1.45	2.79	7.21	5.11	Th, ThO ₂
⁹ Be(n,α) ⁶ Li	Be	1.59	2.83	5.26	_	Be
⁴⁷ Ti(n,p) ⁴⁷ Sc	Ti	1.70	3.63	7.67	3.77	Ti
⁵⁸ Ni(n,p) ⁵⁸ Co	Ni	1.98	3.94	7.51	2.44	Ni, Ni-Al
⁵⁴ Fe(n,p) ⁵⁴ Mn	Fe	2.27	4.09	7.54	2.12	Fe
³² S(n,p) ³² P	S	2.28	3.94	7.33	3.63	CaSO ₄ , Li ₂ SO ₄
$^{32}S(n,\alpha)^{29}Si$	S	1.65	3.12	6.06	_	Cu ₂ S, PbS
⁵⁸ Ni(n,α) ⁵⁵ Fe	Ni	2.74	5.16	8.72	_	Ni, Ni-Al
⁴⁶ Ti(n,p) ⁴⁶ Sc	Ti	3.70	5.72	9.43	2.48	Ti
⁵⁶ Fe(n,p) ⁵⁶ Mn	Fe ^D	5.45	7.27	11.3	2.26	Fe
⁵⁶ Fe(n,α) ⁵³ Cr	Fe	5.19	7.53	11.3	_	Fe
⁶³ Cu(n,α) ⁶⁰ Co	Cu ^E	4.53	6.99	11.0	2.36	Cu, Cu-Al
27 Al(n, α) 24 Na	Al	6.45	8.40	11.9	1.19	Al, Al ₂ O ₃
⁴⁸ Ti(n,p) ⁴⁸ Sc	Ti	5.92	8.06	12.3	2.56	Ti
⁴⁷ Ti(n,α) ⁴⁴ Ca	Ti	2.80	5.10	9.12	_	Ti
⁶⁰ Ni(n,p) ⁶⁰ Co	Ni ^E	4.72	6.82	10.8	10.3	Ni, Ni-Al
⁵⁵ Mn(n,2n) ⁵⁴ Mn	Mn ^F	11.0	12.6	15.8	13.54	alloys

^A Energy response range was derived using the ENDF/B-VI ²³⁵U fission spectrum, Ref (1), MT = 9228, MF = 5, MT = 18. The cross section and associated covariance sources are identified in Guide E1018 and in Refs (2,3).

5.2.2 In reactors, feasible dosimeters to date whose response range to neutron energies of 1 to 3 MeV includes the fission monitors ²³⁸U, ²³⁷Np, and ²³²Th. These particular dosimeters must be shielded from thermal neutrons to reduce fission product production from trace quantities of ²³⁵U, ²³⁸Pu, and ²³⁹Pu and to suppress buildup of interfering fissionable nuclides, for example, ²³⁸Np and ²³⁸Pu in the ²³⁷Np dosimeter, ²³⁹Pu in the ²³⁸U dosimeter, and ²³³U in the ²³²Th dosimeter. Thermal neutron shields are also necessary for epithermal

spectrum measurements in the 5×10^{-7} to 0.3-MeV energy range. Also, nickel dosimeters used for the fast activation reaction 58 Ni(n,p) 58 Co must be shielded from thermal neutrons in nuclear environments having thermal fluence rates above

 $^{^{}B}$ Many resonances contribute in the 1 – 100 eV region for this reaction.

^B One half of the detector response occurs below an energy given by E₅₀, 95 % of the detector response occurs below E₉₅ and 5 % below E₀₅.

^C Uncertainty metric only reflects that component due to the knowledge of the cross section and is reported at the 1_o level.

^D Low manganese content necessary.

E Low cobalt content necessary.

F Low iron content necessary.

 $3 \times 10^{12} \text{ n·cm}^{-2} \cdot \text{s}^{-1}$ to prevent significant loss of 58 Co and 58m Co by thermal neutron burnout (4).

6. Design of Neutron Dosimeters, Thermal Neutron Shields, and Capsules

6.1 Neutron Dosimeters—Procedures for handling dosimeter materials during preparation must be developed to ensure personnel safety and accurate nuclear environment characterization. During dosimeter fabrication, care must be taken in order to achieve desired neutron fluence-rate results, especially in the case of thermal and resonance-region dosimeters. A number of factors must be considered in the design of a dosimetry set for each particular application. Some of the principal ones are discussed individually as follows:

6.1.1 Self-Shielding of Neutrons—The neutron selfshielding phenomenon occurs when high cross-section atoms in the outer layers of a dosimeter reduce the neutron fluence rate to the point where it significantly affects the activation of the inner atoms of the material. This is especially true of materials with high thermal cross sections and essentially all resonance detectors. This can be minimized by using low weight percentage alloys of high-cross-section material, for example, Co-Al, Ag-Al, B-Al, Li-Al. It is not as significant for the fast region where the cross sections are relatively low; therefore, thermal and resonance detectors shall be as thin as possible. Mathematical corrections can also be made to bring the material to "zero thickness" but, in general, the smaller the correction, the more accurate will be the results. Both theoretical treatments of the complex corrections and experimental determinations are published (5-17).

6.1.2 Self-Absorption of Emitted Radiation—This effect may be observed during counting of the radiometric dosimeter. If the radiation of interest is a low-energy gamma ray, an X ray, or a beta particle, the thickness of the dosimeter may be of appreciable significance as a radiation absorber (especially for higher atomic number materials). This will lower the counting rate, which would then have to be adjusted in a manner similar to that for the "zero thickness" correction in the case of self-shielding. Therefore, it would again be desirable to use thin dosimeters in cases where the count rate is affected by dosimeter thickness. In the case of thick pellets, it is usually possible to perform chemical separation of the radionuclide.

6.1.3 Fission Fragment Loss—It has been observed that fission foils of 0.0254-mm (0.001-in.) thickness lose a significant fraction (approximately 7%) of the fission fragments. Increasing the thickness to 0.127 mm (0.005 in.) will reduce this loss to about 1%.

6.1.4 Dosimeter Size:

6.1.4.1 The size of dosimeters and dosimetry sets is often limited by space available, especially in reactor applications where volume in high fluence-rate regions is very limited and in great demand for experimental samples. This fact, coupled with the desirability of minimizing perturbations to the reactor environment due to the presence of the dosimetry set, of minimizing self-shielding corrections, and of minimizing cor-

³ The boldface number in parentheses refers to the list of references at the end of the guide.

rections to obtain reaction rates at a common point in space, creates the need for miniaturized dosimeters.

6.1.4.2 The larger the dosimeter, the higher the counting rate of the activated nuclide or the higher the amount of stable product. This would be desirable in low fluence-rate regions, but probably undesirable in high fluence rates for radiometric dosimeters, since the excessive count rate may result in dead-time losses. Excess activity may result in a radiation hazard. Certain types of dosimeters (for example, HAFMs, foils, wires, and dissolvable samples) can be segmented or diluted prior to analysis. The lower limit on dosimeter size would be governed by a size that could be readily handled and would not be easily lost or overlooked.

6.1.5 Temperature—In high-power reactor irradiations, dosimeters must be constructed to withstand the adverse environment. The temperature, as determined by gamma and neutron reaction heating and heat transfer, will often be too high for simple bare dosimeters. At high temperatures, migration of reaction products, melting, or diffusion bonding may occur, necessitating encapsulation in a high-temperature material with non-interfering or short half-life products.

6.1.6 Burnup:

6.1.6.1 Long irradiations can introduce additional problems. Burnup of the dosimeters and burn-in or burn-out of the product nuclide, or both, may occur. Calculation of burn-up corrections may be complicated by reactions other than the one measured, such as neutron capture by fission or threshold dosimeters. Long irradiations also admit the possibility of two-stage competing reactions, the best examples being ²³⁸U, ²³⁷Np, and ²³²Th. Fig. 1 schematically shows the production of ¹³⁷Cs by ²³⁸U, ²³⁷Np, and ²³²Th reactions.

6.1.6.2 At moderately high fluences, fission products from two-step reactions can dominate those produced directly by 238 U, 237 Np, or 232 Th fission, which limits their usefulness as fluence threshold dosimeters. Fig. 2 graphically shows semi-empirical calculations of 137 Cs produced from the irradiation of infinitely dilute bare and cadmium-covered 238 U, 237 Np, and 232 Th (18). These curves can be used as a guide to estimate corrections and are based on a neutron spectrum distribution of Thermal/Intermediate/>1 MeV = 1/1/0.25. The abscissa scale corresponds to the number of neutrons·cm⁻² either in the total spectrum (bare) or in the epithermal spectrum (Cd). Accurate corrections for these types of reactions are often very difficult to calculate. Epithermal fluences of greater than 1×10^{20} n·cm⁻² for thermally-shielded fast fission dosimeters should be avoided.

6.1.7 *Cross-Contamination*—During fabrication, and subsequent post-irradiation handling, materials must not crosscontaminate one another.

6.2 Thermal Neutron Shields—Powder metallurgy techniques can be used to produce thermal neutron shield hollow cylinders of compound mixtures that lend themselves to pressing. Examples of these are boron, gadolinium, cadmium, cadmium oxide, and cadmium oxide-copper. If encapsulated powders are used, care must be taken to prevent redistribution of material. Shield radiographs are recommended.


6.3 Capsules:

Ε844 – 09 (2014)^{ε2}


$$\begin{array}{c}
238U \xrightarrow{(n,\gamma)} & 239U \xrightarrow{\beta^{-}} & 239Np \xrightarrow{\beta^{-}} & 239Pu \\
\downarrow & = 23.5 \text{ M} & (n,f) & (n,f) & 240Pu
\end{array}$$

$$\begin{array}{c}
137Cs \\
\downarrow & = 30 \text{ y} \\
137Ba
\end{array}$$

1(a) Production of ¹³⁷Cs by ²³⁸U Reactions

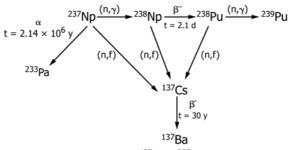

1(b) Production of ¹³⁷Cs by ²³⁷Np Reactions

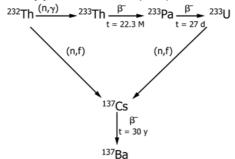

1(c) Production of ¹³⁷Cs by ²³²Th Reactions

FIG. 1 Production of ¹³⁷Cs

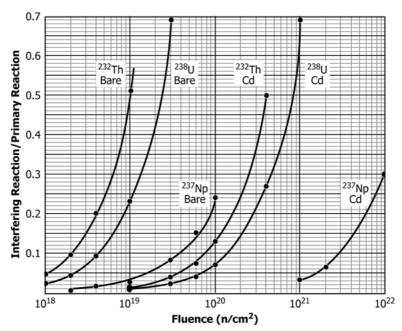


FIG. 2 Irradiation of ²³⁸U, ²³⁷Np, and ²³²Th (18)

- 6.3.1 Five important criteria shall be met by the dosimeter capsule design: (I) it must not interfere with the function of the irradiation experiment (for example, stainless steel should not be used to contain thermal fluence-rate dosimeters); (2) it must position all dosimeters of the dosimetry set in close proximity to the experiment (see 7.1); (3) it must be easy to load; (4) it must be easy to unload since this is often a hot-cell operation; and (5) it must not perturb the neutron environment excessively.
- 6.3.2 Fission dosimeters may be encapsulated in hermetically sealed containers to avoid oxidation and loss of materials, and for health-hazard requirements.
- 6.3.3 The technology for making vanadium capsules to contain dosimeter materials has been developed (19). Vanadium was chosen as an encapsulation material because of its nuclear and high temperature properties. In addition to vanadium, copper, aluminum, and quartz encapsulation have been found satisfactory for uranium, plutonium, neptunium, thorium, and other elemental oxides or salts.
- 6.3.4 Procedures have been developed to make HAFMs (20). Boron, lithium, and other specimens that may require encapsulation, can be sealed in miniature vanadium or Au/Pt capsules.
- 6.3.5 Post-irradiation recovery requires that individual dosimeters be readily identified; thus the dosimeter capsule identification and location within the experiment must be recorded along with the location of the individual dosimeters within the capsule.

7. Irradiation

- 7.1 Exact locations of individual dosimeters must be recorded for irradiation analysis. If the dosimeters in a set cannot be located in the same region or in a region of uniform neutron field, they can occupy a larger volume of varying fluence rate provided the neutron spectral shape is constant. Fluence-rate gradients can introduce large uncertainties in reaction rate and fluence-rate spectral results. Gradient fluence-rate dosimeters (for example, nickel, iron, or aluminum-cobalt, or both,) must then be placed at each location. Considerations discussed in Practice E261 apply.
- 7.2 Dosimeters shielded from thermal neutrons must be located apart from non-shielded ("bare") dosimeters to avoid thermal fluence-rate depression of the bare dosimeters.
- 7.3 A strong resonance absorber such as thick ²³⁵U, ²³⁹Pu, silver, cobalt, and gold cannot be placed in front of a 1/v absorber, and thick dosimeters should not be stacked so as to result in large neutron scattering corrections.

8. Post-Irradiation Handling

8.1 Hot-cell or remote handling facilities are often required for recovery of dosimeter materials after an irradiation. Remote handling operations for dosimetry should be planned and supervised by personnel familiar with the assembly of the dosimetry capsules. Since the dosimetry recovery operation is seldom routine, complete familiarity with the construction of the capsule and identification of the dosimeters is essential. Careful planning and practice will (1) eliminate loss of dosimeters due to improper opening of dosimeter containers

- and identification mixups; (2) preclude decay of short half-life reactions because of excessive recovery time; and (3) minimize the cost of hot cell operations.
- 8.2 A list of materials commonly used in a remote handling facility for the recovery sequence include:
 - 8.2.1 Clean paper or plastic covering a clear work area,
- 8.2.2 Clean manipulator fingers to prevent contamination to the dosimeters from previous hot cell work,
- 8.2.3 Telescopic viewer for identification of encapsulated dosimeters.
 - 8.2.4 A cut-off wheel for opening welded containers,
 - 8.2.5 A small vise, screwdriver, tweezers, and
- 8.2.6 Vials, each appropriately marked with capsule identification and dosimeter type.
- 8.3 After capsule disassembly, the dosimeters shall be cleaned with an appropriate solution (for example, acid or acetone, or both), smeared to ensure the absence of radioactivity contamination (if dose levels permit), and weighed (if not weighed prior to irradiation).
- 8.4 Information to be supplied for radioactivity and fluencerate analysis include:
 - 8.4.1 Dosimeter identification.
- 8.4.2 Isotopic assay of fission dosimeters, alloys, and mixtures,
 - 8.4.3 Weights or concentrations,
- 8.4.4 Reactor spatial power history (includes time of the end of the irradiation),
 - 8.4.5 Neutron energy region analysis desired, and
 - 8.4.6 Description of encapsulation.
- 8.5 Refer to Test Method E1005 for the analysis of radiometric monitors, Test Method E854 for the analysis of solid state track recorder monitors, Test Method E910 for the analysis of helium accumulation neutron monitors, Guide E1214 for the analysis of temperature monitors, and Guides E2005 and E2006 for a guide to benchmark neutron field referencing.

9. Quality Control

- 9.1 Dosimeter materials must be of adequate purity to ensure that any impurity present will not produce a significant error in the product nuclide or in the assessment of the amount of the monitor nuclide present in the monitor.
- 9.2 The elemental or isotopic dosimeter quantities should be checked or confirmed either prior to or following an irradiation. Analytical measurement methods include atomic absorption, spectrophotometry, emission spectrometry, neutron activation analysis, mass spectrometry, and radioactivity counting techniques. The dosimeter purity analysis results must be kept on permanent record for use in making dosimeter impurity corrections. These impurities must be known to an accuracy dictated by the magnitude of the correction.
- 9.3 Most dosimeter materials are readily available in highpurity form. Certain materials cannot be obtained in a highpurity state without excessive processing and cost. When impurities do exist, it should be realized that there are a number of impurities that will not interfere with the analysis because of

(1) low cross section, (2) short half-life, or (3) low-detection efficiency. These include O, N, C, Si, H, Be, A1, Mg, F, S, Ca, Zr, and Pb. There are certain other elements that should be avoided as impurities, when thermal or intermediate fluence-rate analysis, or both, is desired, because of their high thermal or resonance cross sections and the resulting readily detectable activities. These include Li, B, Cd, In, Hg, Au, Mn, Ta, W, Th, U, Bi, Co, Hf, K, Sn, and rare earths. Occasionally the effect of impurity nuclides can be reduced to acceptable levels by the use of thermal neutron filters (for example, traces of Co in high purity Cu, Sc in Ti, and Ta in Nb). Specific impurities that interfere with the radioanalysis of dosimeters and should be avoided are given in Table 4 for commonly used dosimeter materials. For HAFMs, the two most important impurity elements are B and Li.

9.4 Before using a given specimen or lot of dosimeter material, the impurities should be carefully evaluated to determine that no impurity significantly contributes to the activity or parameter to be measured. For example, in a thermal neutron spectrum, a small quantity of Mn could invalidate a measurement using the reaction ⁵⁶Fe(n,p)⁵⁶Mn.

TABLE 4 Impurities in Commonly Used Dosimeter Materials

Element of Interest	Interfering Impurities			
Al	Na			
Cu	Co (>1 ppm) ^A ²³⁸ Pu			
²³⁷ Np	²³⁸ Pu			
Ni	Co			
Nb	Ta (>100 ppm) ^A			
²³⁹ Pu	other Pu isotopes			
Rh	Ir, W			
Sc	Zn			
S	CI			
²³⁸ U	²³⁵ U (>40 ppm) ^A			

^ARequire corrections in typical thermally-shielded surveillance application. For unshielded or special cases, even lower levels of these impurities may contribute.

9.5 Dosimeter nuclides should be known to better than $\pm 2\%$ (provided that the isotopic mole fraction of the nuclide is well-enough known) either by weighing or chemical assay using suitable equipment and techniques.

10. Keywords

10.1 activity; dosimeter; fission monitor; monitor; monitor foil; neutron fluence; pressure vessel; radiometric monitor; reaction rate; reactor surveillance; sensor

REFERENCES

- (1) "ENDF-201, ENDF/B-VI Summary Documentation," edited by P. F. Rose, Brookhaven National Laboratory Report BNL-NCS-17541, 4th Edition, Supplement I, December 1996. The cross section libraries are distributed by the National Nuclear Data Center, Brookhaven National Laboratory. This reference is available at URL http://www.nndc.bnl.gov/nndcscr/documents/endf/endf201/
- (2) Griffin, P. J., Kelly, J. G., Luera, T. F., and VanDenburg, J. SNL RML Recommended Dosimetry Cross Section Compendium, Sandia National Laboratories, Albuquerque, NM, report SAND92-0094, November 1993. This library is distributed along with associated cross section data by the Radiation Shielding Information Center at Oak Ridge National Laboratory as Data Library Code package DLC178/ SNLRML.
- (3) Griffin, P. J., and Williams, J. G., "Least Squares Analysis of Fission Neutron Standard Fields," IEEE Transactions on Nuclear Science, Vol. 44, December 1997, pp. 2071–2078.
- (4) Hogg, C. H., Weber, L. D., and Yates, E. C., "Thermal Neutron Cross Sections of the Co-58 Isomers and the Effect on Fast Flux Measurements Using Nickel," IDO-16744 (TID-4500, 17th Ed.), June 1962.
- (5) Sola, A., "Flux Perturbation by Detector Foils," *Nucleonics*, Vol 18, March 1960.
- (6) Ritchie, R. H., and Eldridge, H. L., "Thermal Neutron Flux Depression by Absorbing Foils," Nuclear Science Engineering, Vol 8, 1960.
- (7) "Measurement of Neutron Flux and Spectra for Physical and Biological Applications," National Bureau of Standards Handbook 72, July 15, 1960.
- (8) Hart, R. G., Bigham, C. B., and Miller, F. C., "Silver-109 as an Epithermal Index Monitor for Use with Cobalt Flux Monitors," AECL-1503, April 1962.
- (9) "Physical Aspects of Radiation," ICRU Report 106, 1962.
- (10) Baumann, N. P., "Resonance Integrals and Self-Shielding Factors for

- Detector Foils," DP-817 (TID-4500, 18th Ed.), January 1963.
- (11) Hanna, G. C., "The Neutron Flux Perturbation Due to an Absorbing Foil: A Comparison of Theories and Experiments," *Nuclear Science Engineering*, Vol 15, March 1963.
- (12) Helm, F. H., "Numerical Determination of Flux Perturbation by Foils," *Nuclear Science Engineering*, Vol 16, 1963.
- (13) Borchardt, G., "Aktivierungs-Resonanzintegral und Neutronenselbstabschirmungsfaktor," Jül503-RX, September 1967 (in German).
- (14) Ilberg, D., and Segal, Y., "Self-Shielding and Self-Absorption in Gold," *Nuclear Instruments and Methods*, Vol 58, January 1968.
- (15) "Neutron Fluence Measurements," Technical Reports Series No. 107, International Atomic Energy Agency, Vienna 1970.
- (16) Zijp, W. L., and Nolthenius, H. J., "Neutron Self Shielding of Activation Detectors Used in Spectrum Unfolding," RCN-231, August 1975.
- (17) Griffin, P. J., and Kelly, J. G., "A Rigorous Treatment of Self-Shielding and Covers in Neutron Spectra Determination," IEEE Transactions on Nuclear Science, Vol. 42, December 1995, pp. 1878–1885.
- (18) Martin, G. C. and Cogburn, C. O., "Special Considerations for LWR Neutron Dosimetry Experiments," 5th ASTM-Euratom Symposium on Reactor Dosimetry, GKSS Geesthacht, Federal Republic of Germany, September, 1984.
- (19) Adair, H. L., and Kobisk, E. H., "Preparation and Characterization of Neutron Dosimeter Materials," *Nuclear Technology*, Vol 25, No. 2, 1975, pp. 224 ff.
- (20) Farrar, H., McElroy, W. N., Lippincott, E. P., "Helium Production Cross Section of Boron for Fast-Reactor Neutron Spectra," *Nuclear Technology*, Vol 25, No. 2, 1975, pp. 305 ff.

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; http://www.copyright.com/