# INTERNATIONAL STANDARD

ISO 18373-2

First edition 2008-02-15

## Rigid PVC pipes — Differential scanning calorimetry (DSC) method —

Part 2:

## Measurement of the enthalpy of fusion of crystallites

Tubes rigides en PVC — Méthode utilisant la calorimétrie différentielle à balayage —

Partie 2: Mesurage de l'enthalpie de fusion des cristallites



#### PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.



#### COPYRIGHT PROTECTED DOCUMENT

© ISO 2008

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Cc	ontents F	Page
1	Scope	1
2	Terms and definitions	1
3	Symbols and abbreviated terms	2
4	Principle	2
5	Apparatus	2
6	Preparation of the test pieces	2
7	Procedure	3
8	Expression of results	
9	Test report	5
Anr	nex A (informative) Possible presentations of DSC curves	6
Anr	nex B (informative) Example of peaks due to the presence of additives	8
Anr	nex C (informative) Possible sources of error	9
Anr	nex D (informative) Correlation between enthalpy of fusion and processing temperature	10
Bib	liography	11

#### **Foreword**

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 18373-2 was prepared by Technical Committee ISO/TC 138, *Plastics pipes, fittings and valves for the transport of fluids*, Subcommittee SC 5, *General properties of pipes, fittings and valves of plastic materials and their accessories* — *Test methods and basic specifications*.

ISO 18373 consists of the following parts, under the general title *Rigid PVC pipes* — *Differential scanning calorimetry (DSC) method*:

- Part 1: Measurement of the processing temperature
- Part 2: Measurement of the enthalpy of fusion of crystallites

#### Introduction

Studies have been undertaken at the international level to determine a method of measuring the enthalpy of fusion of crystallites produced during the processing of rigid pipes. These studies have demonstrated that a test using differential scanning calorimetry (DSC) fulfils these requirements.

The method involves taking small samples from the pipe wall and heating these in a differential scanning calorimeter. Small endotherms are used to detect the thermal history of the samples and the enthalpy of fusion of crystallites is derived from these data.

The technique requires a good understanding of DSC instruments and techniques, particularly in relation to PVC. It is important that newcomers to the technique familiarize themselves with both the instrumentation and method prior to undertaking reportable tests.

This method is given as a guide and no specific requirement is given in this part of ISO 18373 for the enthalpy of fusion.

The method can also be suitable for other types of extruded rigid PVC products, but different sampling protocols might be required.

## Rigid PVC pipes — Differential scanning calorimetry (DSC) method —

#### Part 2:

### Measurement of the enthalpy of fusion of crystallites

#### 1 Scope

This part of ISO 18373 specifies a method for the determination of the enthalpy of fusion of crystallites in rigid PVC pipe samples. The method is based on the measurement of the thermal history using differential scanning calorimetry (DSC) and is suitable for all types of rigid PVC pipes.

#### 2 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

#### 2.1

#### curve magnification

magnification of the DSC curve around A-onset and B-onset temperature ("zooming")

#### 2.2

#### A-onset

(enthalpy of fusion measurement) first indication of "secondary" crystallite melting

#### 2.3

#### **B-onset**

 $T_{\mathsf{p}}$ 

indication of maximum processing temperature

#### 2.4

#### enthalpy of fusion

#### A-endotherm

 $\Delta H_{\mathsf{A}}$ 

fusion enthalpy of the secondary crystallites in the pipe

NOTE Enthalpy of fusion is expressed in joules per gram.

#### 2.5

#### instrumental baseline

measurement with empty sample pan, i.e. background subtraction

#### 2.6

#### position of sample

location in the product from where the sample was taken

#### 2.7

#### purge gas

gas used to ensure an inert environment

#### 2.8

#### repeat samples

samples from the same position

#### 3 Symbols and abbreviated terms

DSC differential scanning calorimetry

 $T_{\rm p}$  maximum temperature reached by the melt during processing

 $\Delta H_{\rm A}$  enthalpy of fusion

#### 4 Principle

DSC is a well-established method for testing the enthalpy of fusion,  $\Delta H_{\rm A}$ , or A-endotherm, in PVC products (see References [1] and [2]). The enthalpy of fusion depends upon processing conditions used to make the pipe and an optimum value reflects a well-processed pipe which will have optimum mechanical properties.

The benefits of this test are that an accurate assessment can be made of the enthalpy of fusion, as well as the possibility of finding variations in local areas of the product, due to the fact that only a small size of sample is required for the test. This enables the operator to cut samples from different locations around the pipe circumference. Thus, variations in the enthalpy of fusion in the pipe wall may be examined.

The characteristic A-endotherm occurs because secondary crystallites produced during the cooling phase after extrusion of the pipe will melt as the sample is heated, absorbing the latent heat of fusion of these crystallites as they do so.

#### 5 Apparatus

**5.1 DSC instrument**, and associated software, calibrated.

NOTE Calibration should be carried out using at least two different metals. An instrumental baseline must be obtained with an empty sample pan and reference pan in place, and with temperature settings and purge gas identical to the settings to be used for the sample analysis.

- 5.2 Aluminium sample pans.
- **5.3** Inert purge gas (e.g. nitrogen, argon), of at least industrial quality.
- **5.4** Analytical balance, with an accuracy to within 0,01 mg.
- **5.5** Slow speed saw (see Reference [3]), knife, or any other device introducing neither heat nor stress into the sample as it is cut.

#### 6 Preparation of the test pieces

**6.1** Take at least four samples at the  $0^{\circ}$ ,  $90^{\circ}$ ,  $180^{\circ}$ , and  $270^{\circ}$  positions, respectively, around the pipe circumference, with all the samples being taken from the centre of the pipe wall.

NOTE The samples are taken from the centre of the pipe wall because the processing temperature at the centre of the pipe wall is often lower than that close to the inner and outer surfaces, where additional shear occurs.

CAUTION — Taking samples from the locus of a spider line can lead to an increase in the spread of results.

**6.2** Prepare the test pieces having a mass of  $(20 \pm 10)$  mg in a way that maximizes the contact surface between the pan and the test piece.

NOTE Maximizing the contact surface between the pan and the test piece reduces the resistance to heat flow through the DSC temperature sensors and results in maximum peak sharpness and resolution.

**6.3** The best test piece shapes for optimum performance are thin disks placed on the bottom of the pan. Test pieces may be conveniently prepared by cutting out sections with a slow speed diamond saw, or with a razor or knife (5.5). A hole punch or cork borer may be used if the sample is very thin.

#### 7 Procedure

- **7.1** Ensure that the scanning device is calibrated.
- **7.2** Encapsulate the test piece in an aluminium pan with cover (5.2).
- **7.3** The test piece shall not move in the pan during the measurement. The most common method of test piece immobilization is to crimp the pan cover in place with a crimper. This yields a tightly, but not hermetically, sealed pan without movement of the test piece in the pan during the measurement. Other methods of pan closure that immobilize the test piece can be used.
- **7.4** Using the following test parameters, perform and register the scan:

a) start temperature:  $(35 \pm 15)$  °C;

b) end temperature: 225 °C;

c) heating rate:  $(20 \pm 1)$  °C/min;

d) purge gas (5.3):  $(20 \pm 5)$  °ml/min.

#### 8 Expression of results

If necessary, magnify the relevant part of the curve using the zooming feature of the DSC instrument (5.1). Figure 1 depicts a typical curve. The A-onset temperature should lie somewhere between  $100\,^{\circ}$ C and  $120\,^{\circ}$ C; if it does not, it is most likely that there is interference in the DSC curve due to the presence of some additive(s) and these must be allowed for. If it is not possible to allow for these interferences, it may not be possible to determine the enthalpy of fusion for the sample.

The enthalpy of fusion,  $\Delta H_{\rm A}$ , is the net area under the curve lying between the A-onset and B-onset temperatures, after subtracting any area under the curve due to additive peaks. This area is normally calculated using the computer software built into the DSC apparatus. A straight line should be drawn between the A-onset and B-onset temperatures. Since the value of  $\Delta H_{\rm A}$  derives *only* from the secondary crystallites of the PVC and not from other components present in the pipe, such as fillers, pigments and stabilizers, the value of  $\Delta H_{\rm A}$  should be normalized to account for the PVC content of the pipe. For example, if the PVC content is 99 % by mass, the value of  $\Delta H_{\rm A}$  should be divided by 0,99. If it is 85 % by mass, then divide by 0,85.

NOTE 1 A typical curve consists of two endotherms between approximately 100  $^{\circ}$ C and approximately 200  $^{\circ}$ C where the A-onset temperature corresponds to the melting of the first "secondary" crystallites and the B-onset corresponds very closely to the maximum processing temperature,  $T_{\rm p}$ . The enthalpy of fusion is derived from the first (lower temperature) endotherm. The change in energy levels is usually quite small. See Figure 2 for an example.

NOTE 2 Peaks due to additives are generally reproducible.


If the standard deviation of the results from three consecutive tests on samples taken from the same location (i.e. the same angular location) within a pipe is greater than 1 J/g, then the furthest outlying result shall be discarded and another single test carried out. If this does not bring the standard deviation of the results to less than 1 J/g, then the instrument may need recalibrating.

Uneven or irregular scan data shall be discarded. See Figure 3 for an example.

NOTE 3 The appearance of DSC curves can differ depending upon whether the instrument displays the results via an "exo up" curve (see Figures 1 and 2) or an "exo down" curve. The latter type produces inverted curves compared with Figures 1 and 2. Examples of the different types of presentation are shown in Annex A.

© ISO 2008 – All rights reserved

The presence of some additives can also be detected by DSC and so extra peaks may appear in the DSC curves as a result. Examples of these are shown in Annex B.

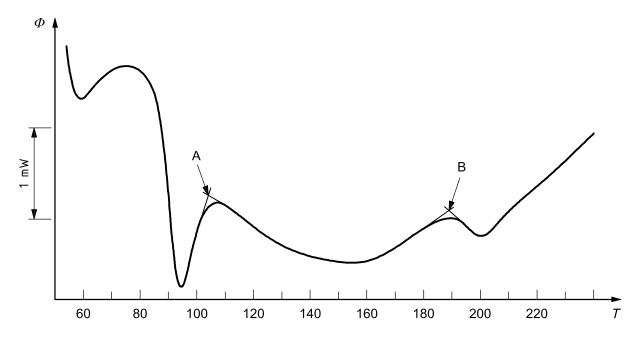

#### Key


Φ heat flow, in milliwatts

Ttemperature, in degrees Celsius

extrapolated peak at 107,9  $^{\circ}$ C: "A-onset" Α В

extrapolated peak at 188,38  $^{\circ}$ C: "B-onset"

Figure 1 — DSC result curve after zooming

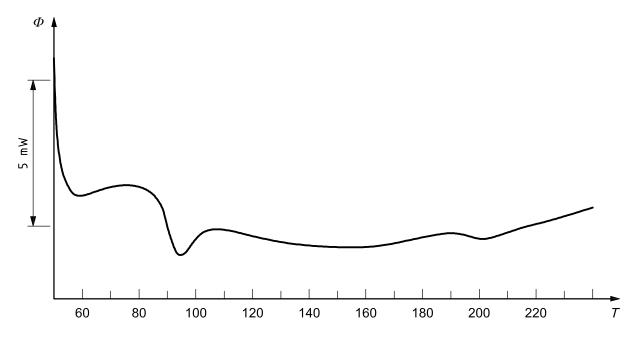


#### Key

Φ heat flow, in milliwatts

Ttemperature, in degrees Celsius

Figure 2 — Typical DSC curve from a PVC pipe

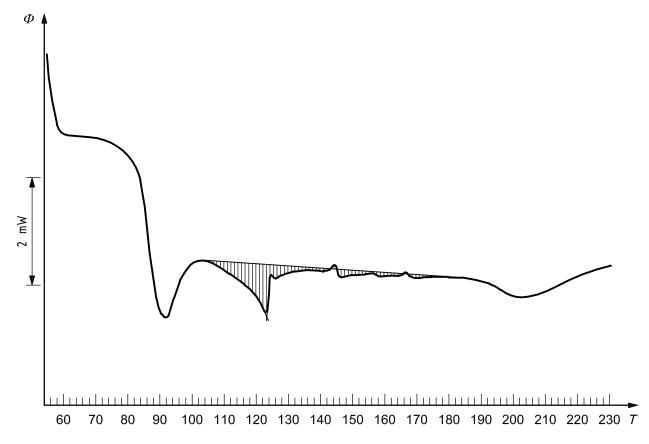

#### Key

- $\Phi$  heat flow, in milliwatts
- T temperature, in degrees Celsius

Figure 3 — Curve that should be discarded because of severe noise/interference

#### 9 Test report

The test report shall contain at least the following information:


- a) reference to this part of ISO 18373;
- b) sample reference number (e.g. production code number of the pipe);
- c) location from where the samples were taken (e.g.  $0^{\circ}$ ,  $90^{\circ}$ ,  $180^{\circ}$ ,  $270^{\circ}$  around the circumference of the pipe);
- d) mean and standard deviation of the enthalpy of fusion expressed as:
  - 1) value of  $\Delta H_{\rm A}$  as determined from the DSC curve,
  - 2) value of  $\Delta H_{\rm A}$  normalized for the PVC content of the pipe;
- e) number of repeat samples tested;
- f) any factors which may have affected the results, such as any incidents, test interruptions or any operating details not specified in this part of ISO 18373 or regarded as unnecessary;
- g) date(s) of test.

## Annex A

(informative)

## Possible presentations of DSC curves


Figure A.1 shows a typical "exo up" curve and Figure A.2 shows a typical "exo down" curve.

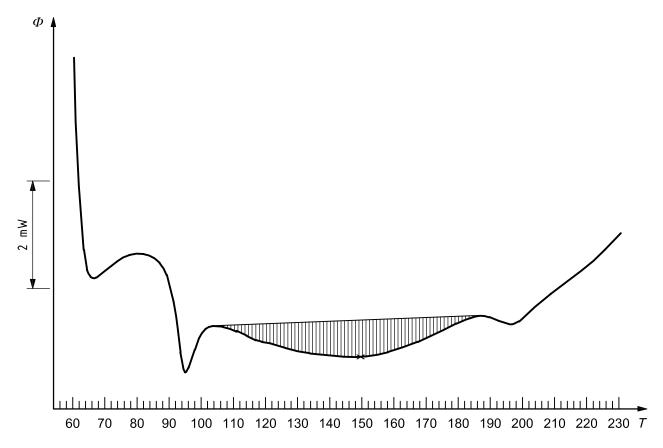

#### Key

- $\Phi$  heat flow, in milliwatts
- T temperature, in degrees Celsius

Figure A.1 — Typical curve from an "exo up" display with the measured area,  $\Delta H_{\rm A}$ , shaded

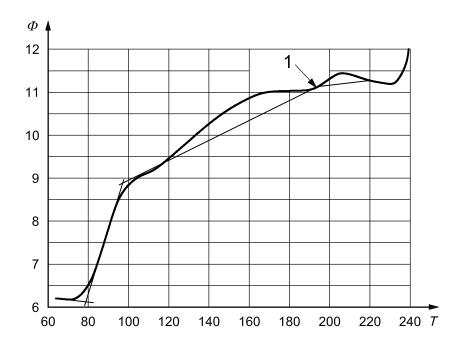

#### Key

- $\Phi$  heat flow, in milliwatts
- T temperature, in degrees Celsius
- 1 intersection at 189,4  $^{\circ}$ C


Figure A.2 — Typical curve from an "exo down" display

## Annex B

(informative)

### Example of peaks due to the presence of additives

Figure B.1 shows an example of a spurious peak, due to the presence of an additive, and how it can be compensated for with a best fit secondary line (generated by an experienced technician);  $\Delta H_{\rm A}$  is then calculated as 8,0 - 0,72 = 7,28 J/g, which should then be normalized for the PVC content, as a percentage by mass, of the pipe.

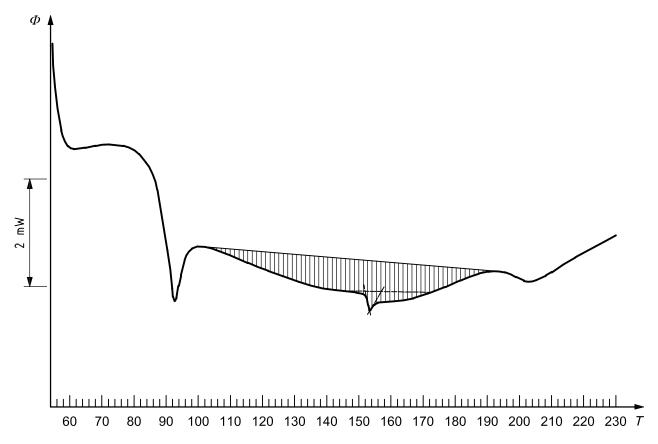

#### Key

- $\Phi$  heat flow, in milliwatts
- T temperature, in degrees Celsius

Figure B.1 — Derivation of the area under the curve due to an additive

## Annex C

(informative)

#### Possible sources of error


Potential sources of error include:

- a) sample inhomogeneity due to poor mixing of additives and/or poor processing;
- b) movement of the sample in the pan;
- c) internal stresses in the material that are released when the sample is heated and can mask or interfere with the result curve;
- d) other thermal events at temperatures close to B-onset due to the presence in the pipe of additives, blowing agents, etc., which go through thermal events such as evaporation, decomposition and/or melting at temperatures close to B-onset;
- e) frictional heat from sample preparation, e.g. from the use of a high-speed saw.

## Annex D (informative)

## Correlation between enthalpy of fusion and processing temperature

Figure D.1 shows the correlation between enthalpy of fusion and processing temperature for pipes made using different compounds.

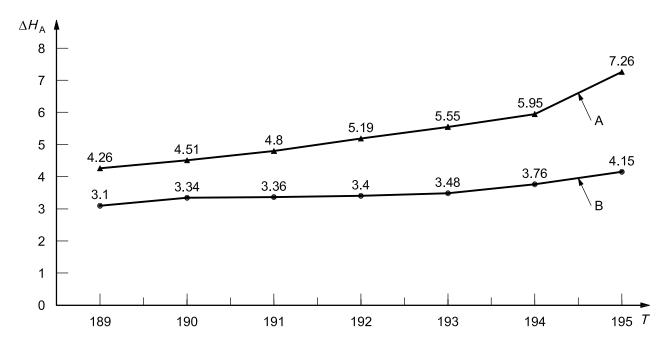

#### Key

 $\Delta H_{\mathsf{A}}$  enthalpy of fusion, in joules per gram

T processing temperature, in degrees Celsius

A Material A


B Material B


Figure D.1

### **Bibliography**

- [1] GILBERT, M., HEMSLEY, A.D., MIADONYE, A. Assessment of fusion in PVC compounds, *Plast. Rubber Process. Appl.* 1983, **3**, p. 343-351
- [2] FILLOT, L.A., GAUTHIER, C., HAJJI, P. DSC technique: A powerful tool to characterise PVC gelation. In: Proc. 9th Int. PVC Conf., Brighton, 2005 April, p. 425-437
- [3] VANSPEYBROECK, P., DEWILDE, A. Determination of the degree of gelation of PVC-U using a DSC. In: Proc. Plastics Pipes XII, Baveno, 2004. Available (2008-01-16) at: www.pvc4pipes.org/documents/files/PXII/posters/Vanspeybroeck.pdf

© ISO 2008 – All rights reserved







Price based on 11 pages